

IF YOUR ReadyLIFT PRODUCT IS MISSING A PART OR HAS A DAMAGED PART, PLEASE CONTACT CUSTOMER SERVICE DIRECTLY.

A NEW REPLACEMENT PART WILL BE SENT TO YOU IMMEDIATELY

#### Please read Instructions thoroughly and completely before beginning installation. Installation by a certified mechanic is recommended.

ReadyLIFT Suspension Inc. is <u>NOT</u> responsible for any damage or failure resulting from improper installation.


**Safety Warning:** Suspension systems or components that enhance the on and off-road performance of your vehicle may cause it to handle differently than it did from the factory. Extreme care must be used to prevent loss of control or vehicle rollover during abrupt maneuvers. Always operate your vehicle at reduced speeds to ensure your ability to control your vehicle under all driving conditions. Failure to drive safely may result in serious injury or death to driver and passengers. Driver and passengers must ALWAYS wear your seat belts, avoid quick sharp turns and other sudden maneuvers. ReadyLIFT Suspension Inc. does not recommend the combined use of suspension lifts, body lifts, or other lifting devices. You should never operate your vehicle under the influence of alcohol or drugs. Constant maintenance is required to keep your vehicle safe. Thoroughly inspect your vehicle before and after every off-road use.

**Installation Warning:** All steps and procedures described in these instructions were performed while the vehicle was properly supported on a two post vehicle lift with safety jacks. Use caution during all disassembly and assembly steps to insure suspension components are not over extended causing damage to any vehicle components and parts included in this kit. Included instructions are guidelines only for recommended procedures and are not meant to be definitive. Installer is responsible to insure a safe and controllable vehicle after performing modifications.


ReadyLIFT Suspension Inc. recommends the use of an OE Service Manual for model/year of vehicle when disassembly and assembly of factory and related components. Unless otherwise specified, tighten all bolts and fasteners to standard torque specifications listed within the OE Service Manual, or as referenced in the torque specification list provided in these instructions.

Suspension components that use rubber or urethane bushings should be tightened with the vehicle at normal ride height. This will prevent premature wear or failure of the bushing and maintain ride comfort. Larger tire and wheel combinations may increase leverage on suspension, steering, and related components. Due to payload options and initial ride height variances, the amount of lift is a base figure. Final ride height dimensions may vary in accordance to original vehicle ride height. Always measure the vehicle ride height prior to beginning installation.

# Vehicle ride height chart

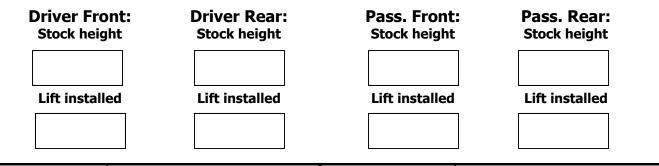

Bolt Size Millimeters	Torque Specs in FT/LB		Bolt Size	Torque Specs in FT/LB	
	Metric Grade 8.8	Metric Grade 10.9	SAE	Grade 5	Grade 8
6mm	6	8	5/16	15	20
8mm	16	22	3/8	30	35
10mm	40	45	7/16	45	60
12mm	54	70	1/2	65	90
14mm	89	117	9/16	95	130
16mm	132	175	5/8	135	175
18mm	182	236	3/4	185	280

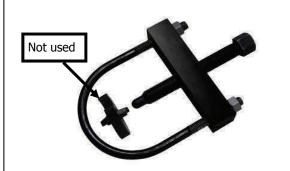

Use ReadyLIFT part# 66-7816A to remove your factory keys and install the new ReadyLIFT keys.



Note: To prevent damaging torsion bar tool. Peel back wheel well liner and remove (2) upper shock mounting nuts.



Adjust loading tool just enough to remove torsion key adjusting block from cross member. Release tool and remove.



Install new 66-3011 forged torsion keys into position and slide torsion bar into hex as original.



Measure ride height then lift vehicle and remove wheels/tires.



Use 66-7816A over cross member, then remove adjuster bolt.



Then slide torsion bar forward in order to remove torsion key. Use caution while removing.



Use torsion bar loading tool and adjust new forged torsion key up just enough to allow adjuster block to be reinstalled.

# Installation Instructions (66-3011)



Now, install torsion key adjuster bolt and adjust for initial setting. Final adjustments will be done during alignment.



Picture shows spacers being installed onto upper studs.

Once you have tightened all hardware and reinstalled and torqued the wheels/tires, it is now necessary to adjust the torsion bar keys to the desired height, (**not to exceed 2.25 in.**). When adjusting the torsion keys, make sure to take pressure off of the suspension in order to avoid damaging the adjusting bolts. The vehicle will also need to be aligned and final adjustments may be required in order to properly align. Align vehicle to factory specs and be sure to readjust the headlamps as well.



Back to the front shocks, pry down enough to allow provided spacers to be installed onto upper shock mounting studs.



Reposition shock and tighten with new provided hardware.



## Final Checks & Adjustments

**Post Installation Warnings:** Once the vehicle is lowered to the ground, check all parts which have rubber or urethane components to insure proper torque. Torque wheels to factory specs. Move vehicle backwards and forwards a short distance to allow suspension components to adjust. Turn the front wheels completely left then right and verify adequate tire, wheel, brake line, and ABS wire clearance. Test and inspect steering, brake and suspension components for tightness and proper operation. Inspect brakes hoses and ABS lines for adequate slack at full extension. Failure to perform the post inspection checks may result in vehicle component damage and/or personal injury or death to driver and/or passengers. Test drive vehicle and re-check the torque of all fasteners and re-torque wheels on vehicle. Readjust headlamps.

**Vehicle Handling Warning:** Vehicles with larger tires and wheels will handle differently than stock vehicles. Take time to familiarize yourself with the handling of your vehicle.

## Wheel Alignment/Headlamp Adjustment:

It is necessary to have a proper and professional wheel alignment performed by a certified alignment technician. Align the vehicle to factory specifications. It is recommended that your vehicle alignment be checked after any off-road driving. In addition to your vehicle alignment, for your safety and others, it is necessary to check and adjust your vehicle headlamps for proper aim and alignment

## Vehicle Re-Torque and Safety Inspection:

Upon completion of all services and adjustments performed on your vehicle, and within 50 miles of driving, check to ensure all fasteners and hardware are properly torqued to specification as noted in the vehicles factory service manual or the torque chart included.