



2007- 2013 GM 1500 4WD
Pick-Up / SUV
4" Suspension Lift
Installation Instructions

REQUIRED TOOL LIST:

- * Safety Glasses
- * Metric / Standard Wrenches & Sockets
- * Allen Wrenches
- * Drill / Assorted Drill Bits
- * Cut Off Wheel / Grinder
- * Floor Jack
- * Jack Stands
- * Measuring Tape
- * Torque Wrench



Before beginning the installation, thoroughly & completely read these instructions & the enclosed driver’s WARNING NOTICE. Affix the WARNING decal in the passenger compartment in clear view of all occupants. Please refer to the Parts List to insure that all parts & hardware are received prior to the disassembly of the vehicle.

Make sure you park the vehicle on a level concrete or asphalt surface. Many times a vehicle is not level (side-to-side) from the factory & is usually not noticed until a lift kit has been installed, which makes the difference more visible. Using a measuring tape, measure the front & rear (both sides) from the ground up to the center of the fender opening above the axle. Record this information below for future reference.

Driver Side Front: _____ Passenger Side Front: _____

Driver Side Rear: _____ Passenger Side Rear: _____

Important Notes:

- This 4" lift is designed for models that are not equipped with autoride / self leveling suspension.
- If larger tires (10% more than the OEM diameter) are installed, speedometer recalibration will be necessary. Contact your local GM dealer or an authorized dealer for details.
- After installation, a qualified alignment facility is required to align the vehicle to the OEM specifications.

Component Box Breakdown:

Part #: C7360SP

Item #	Description	Qty
C1440MS-S	FRONT STRUT SPACER	2
HB-10MM/NFN	HDWR BAG: 10MM FLG NUTS	1

Item #	Description	Qty
I-C736SP	INST SHEET: 4" 07-13 GM 1500	1

Hardware Bag Breakdown:

Part # HB-10MM/NFN

Item #	Description	Qty
10MMX1.5NFN	10MM X 1.5 FLANGE NUT	6

Component Box Breakdown:

Part #: C7361A

Item #	Description	Qty
C1446L-S	DRIVER KNUCKLE	1
C1446R-S	PASSENGER KNUCKLE	1
C1446FCM-B	FRONT CROSS MEMBR	1
C1446RCM-B	REAR CROSS MEMBER	1
C736CVS-S	FRONT CV SPACER	2

Item #	Description	Qty
C766SBL-S	SWAY BAR END LINK	2
HB-C736-CVS	HDWR BAG: CV SPACERS	1
HB-C736-CM	HDWR BAG: CROSS MEMBERS	1
HB-C736-DS	HDWR BAG: DIFF SPACERS	1
HB-C736-BL	HDWR BAG: BRK LINE/ABS BRK	1

Hardware Bag Breakdown:

Part # HB-C736-CVS

Item #	Description	Qty
10MMX50MMB	10MM X 50MM METRIC BOLT	12
LT100	NUTS N' BOLTS 427 1 ML TUBE	1

Item #	Description	Qty
5MMX12SHB	5MM X 12MM KNUCKLE BOLT	2

Part # HB-C736-CM

Item #	Description	Qty
C7FS58-S	FRT CROSS MEMBER SPACER	2
CS2720-S	UPPER CRUSH SLV, 2.720" LG	2
58X512FTB	5/8 X 5 1/2 FINE THREAD BOLT	4

Item #	Description	Qty
58SAEW	5/8 SAE WASHER	8
58FTN	5/8 FINE THREAD LOCK NUT	4

Part # HB-C736-DS

Item #	Description	Qty
C736DF-S	FRONT DIFF SPACER	2
C736DR-S	REAR DIFF SPACER	2
12X120MMB	12MM X 120MM METRIC BOLT	4

Item #	Description	Qty
716SAEW	7/16 SAE WASHER	8
12MMN	12MM METRIC LOCK NUT	4

Part # HB-C736-BL

Item #	Description	Qty
C736ABS-B	FRONT ABS BRACKET	2
JKBE4D	BRAKE LINE BRACKET	2
516X1FTB	5/16 X 1 FINE THREAD BOLT	4

Item #	Description	Qty
516SAEW	5/16 SAE WASHER	8
516FTN	5/16 FINE THREAD LOCK NUT	4

Component Box Breakdown:

Part #: C7361PR

Item #	Description	Qty
RBF20	2" FLAT REAR BLOCK	2
916X212X1012U	9/16 X 2 1/2 X 10 1/2 U-BOLT	4

Item #	Description	Qty
916FTN	9/16 FINE THREAD LOCK NUT	8

Component Box Breakdown:

Part #: C7361SR

Item #	Description	Qty
CLL963-L	REAR LOWER LINK	2
RBSB322-B	REAR BUMP STOP EXTENSION	2
SBE506-L	REAR SWAY BAR END LINK	2

Item #	Description	Qty
C25RS	REAR COIL SPRING	2
HB-RSBL963	HDWR BAG: REAR END LINKS	1
HB-C963-RBS	HDWR BAG: REAR BMP STP EXT	1

Hardware Bag Breakdown:

Part # HB-RSBL963

Item #	Description	Qty
HOURGLASS 5/8	HOURGLASS 5/8 BUSHING	4
142121	ES24 SLEEVE, 1.38" LONG	4
12X3FTB	1/2 X 3 FINE THREAD BOLT	4
12FTN	1/2 FINE THREAD LOCK NUT	4

Item #	Description	Qty
12SAEW	1/2 SAE WASHER	8
38X1FTB	3/8 X 1 FINE THREAD BOLT	2
38FTN	3/8 FINE THREAD LOCK NUT	2
38SAEW	3/8 SAE WASHER	2

Part # HB-C963-RBS

Item #	Description	Qty
38X1FTB	3/8 X 1 FINE THREAD BOLT	2
38FTN	3/8 FINE THREAD LOCK NUT	2

Item #	Description	Qty
38SAEW	3/8 SAE WASHER	2

Front Installation:

1. With the vehicle on a level concrete or asphalt surface, set the emergency brake & block the rear tires / wheels. Place a floor jack under the lower control arm front cross member & raise the front of the vehicle. Place jack stands under the frame rails behind the front wheel wells & lower the frame onto the jack stands.
2. Remove the front tires / wheels using a 22mm socket. (See Photo # 1)
3. Remove the OEM outer tie rod end nuts from the OEM steering knuckles using a 18mm socket & disconnect the OEM outer tie rod ends from the OEM steering knuckles. (See Photo # 2) **Note:** It may be necessary to strike the side of the OEM steering knuckles to dislodge the OEM outer tie rod ends. Be careful not to damage the OEM outer tie rod ends.
4. Disconnect the OEM brake calipers from the OEM brake rotors & disconnect the OEM brake lines from the OEM upper A-arms. (See Photo # 3) **Note:** Simply wire the OEM brake calipers out of the way. It will not be necessary to disconnect the OEM brake lines from the OEM brake calipers.
5. Remove the OEM sway bar end links using a 15mm socket. (See Photo # 4)
6. Remove the OEM strut assemblies by removing the lower mounting bolts & upper strut retaining nuts. (See Photo # 5)
7. Disconnect the OEM upper & lower A-arms from the OEM steering knuckles using a 18mm socket. **Note:** It may be necessary to strike the side of the OEM steering knuckles to dislodge the OEM ball joints. Be careful not to damage the OEM ball joints. (See Photo # 6)



Photo # 1



Photo # 2



Photo # 3



Photo # 4



Photo # 5

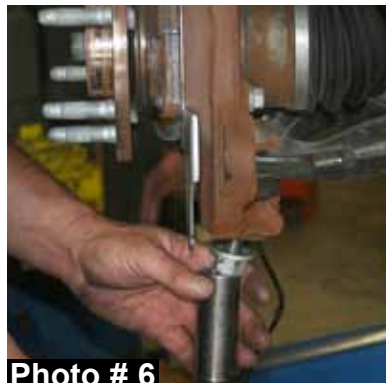


Photo # 6

8. Remove the OEM CV axles using a 15mm socket. (See Photo # 7)
9. Remove the OEM front skid plates using a 15mm socket. Disconnect the OEM lower A-arms using a 18mm & 24mm socket.
10. Remove the OEM rear cross member using a 18mm socket. (See Photo # 8)
11. Disconnect the OEM front drive shaft from the front differential & support the front differential using a transmission jack. Remove the OEM front differential mounting bolts using a 15mm & 18mm socket & remove the front differential. (See Photo # 9) **Note:** It will be necessary to cut / grind two fins from the OEM front differential. Remove the rearward fin completely & grind smooth. Grind the forward fin so it is even with the rear fin. (See Photo # 10)
12. To reinstall the OEM front differential, install the new Skyjacker aluminum front differential spacers between the OEM front differential mounts & the frame using the supplied 12mm x 120mm bolts, washers, & nuts. (See Arrow In Photo # 11) **Note:** The thicker (1" thick) spacers are for the front mounts & the thinner (.875" thick) spacers are for the rear mounts.
13. Reconnect the OEM front drive shaft using the OEM hardware.
14. Install the new Skyjacker rear cross member using the supplied 5/8" x 5 1/2" fine thread bolts, washers, & nuts. (See Photo # 12)



Photo # 7



Photo # 8



Photo # 9



Photo # 10



Photo # 11



Photo # 12

15. Install the new Skyjacker aluminum front cross member spacers between the new Skyjacker front cross member & the frame. Install the new Skyjacker front cross member using the supplied crush sleeves, 5/8" x 5 1/2" fine thread bolts, washers, & nuts. (See Photo # 13)
16. Attach the OEM A-arms to the new Skyjacker front & rear cross members using the OEM hardware. (See Photo # 14)
17. Remove the OEM hub bearing assemblies from the OEM steering knuckles using a 15mm socket. Install the OEM hub bearing assemblies to the new Skyjacker steering knuckles using the OEM hardware. (See Photo # 15)
18. Install the new Skyjacker strut spacers on the top of each OEM strut assembly using the OEM hardware & 18mm wrench. (See Photo # 16)
19. Install the upper mount of the strut assemblies using the supplied 10mm nuts. (See Photo # 17) Install the lower mount of the strut assemblies using the OEM hardware. (See Photo # 18)
20. Attach the new Skyjacker steering knuckles to the upper & lower A-arms using the OEM hardware. Install the new Skyjacker CV axle spacers & OEM CV axles using the supplied 10mm x 50 mm bolts & thread locking compound. (See Photo # 19)



Photo # 13



Photo # 14



Photo # 15



Photo # 16



Photo # 17



Photo # 18



Photo # 19

21. Attach the OEM ABS lines to the new Skyjacker steering knuckles using the supplied 5mm x 12mm bolts.

22. Install the new Skyjacker ABS line & brake line brackets to the frame using the supplied 5/16" x 1" fine thread bolts, washers, & nuts. (See Arrows In Photo # 20)

23. Attach the OEM outer tie rod ends to the new Skyjacker steering knuckles using the OEM hardware. Reinstall the OEM brake rotors & OEM brake calipers using the OEM hardware.

24. Install the new Skyjacker sway bar end links using the supplied gold washer on top of the OEM A-arm & the supplied nut on the bottom of the OEM A-arm. **Note:** Install the new sway bar end links with the pivoting end at the A-arm. (See Photo # 21)

25. Install the front tires / wheels using a 22mm socket & lower the front of the vehicle to the ground.

Rear Installation:

1. Block the front tires / wheels, raise the rear of the vehicle, & properly support the frame rails using jack stands.

2. Remove the rear tires / wheels using a 22mm socket.

Pick-Up Models:



3. Support the rear differential & remove the OEM rear shocks & OEM U-bolts.

4. While checking for appropriate slack in ABS lines, brake lines, differential breather hose, & etc. Lower the rear axle & install the new Skyjacker 2" rear lift blocks on top of the OEM rear blocks. Install the new Skyjacker U-bolts using the supplied 9/16" fine thread nuts. (See Photo # 22)

SUV Models:

5. Support the rear differential & remove the OEM rear shocks.

6. Remove the OEM rear sway bar end links. (See Photo # 23)

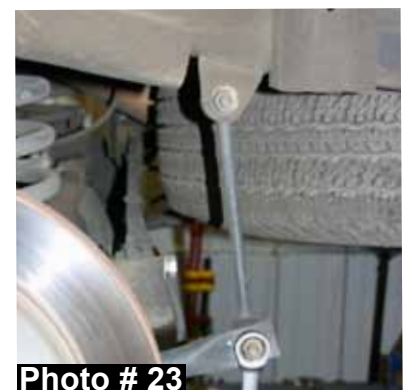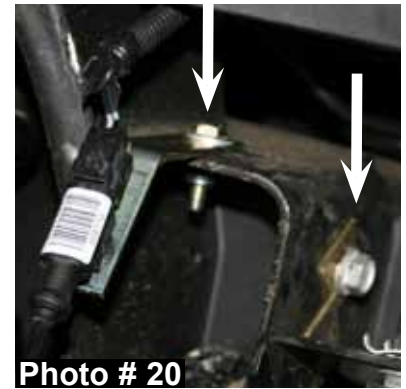

7. Remove the OEM lower control arms & install the new Skyjacker rear lower control arms using the OEM hardware. (See Photo # 25) **Note:** Remove one side at a time so the axle is not free to move. (See Photo # 24)



8. Install the new Skyjacker bump stop brackets to the OEM bump stop pads so the lip of the new bump stop brackets catch on the front of the OEM bump stop pads. Install using the supplied 3/8" x 1" fine thread bolts, washers, & nuts. **Note:** The 3/8" bolts will install from under the OEM bump stop pads through the new bump stop brackets. (See Photo # 26)

9. While checking for appropriate slack in ABS lines, brake lines, differential breather hose, & etc. Lower the rear axle & remove the OEM rear coil springs. Install the new Skyjacker rear coil springs using the OEM rubber isolators.



10. Install the new Skyjacker rear sway bar end links using the supplied 1/2" x 3" fine thread bolts, washers, & nuts. (See Photo # 27)

11. Install the new Skyjacker rear shocks using the supplied hardware & OEM hardware.



12. Install the rear tires / wheels using a 22mm socket, & lower the rear of the vehicle to the ground.

Final Notes:

- After the installation is complete, double check that all nuts & bolts are tight. Refer to the following chart for the proper torque specifications. (Do not retighten the nuts & bolts where thread lock compound was used.)
- With the vehicle placed on the ground, cycle the steering lock to lock & inspect the steering, suspension, brake lines, front & rear drivelines, fuel lines, & wiring harnesses for proper operation, tightness, & adequate clearance.
- Have the headlights readjusted to the proper settings.
- Have a qualified alignment center align the vehicle to the OEM specifications.
- After the first 100 miles, check all of the hardware for the proper torque & periodically thereafter.



TORQUE SPECIFICATIONS

<u>INCH SYSTEM</u>			<u>METRIC SYSTEM</u>		
Bolt Size	Grade 5	Grade 8	Bolt Size	Class 8.8	Class 10.9
5/16	15 FT LB	20 FT LB	6MM	5 FT LB	9 FT LB
3/8	30 FT LB	35 FT LB	8MM	18 FT LB	23 FT LB
7/16	45 FT LB	60 FT LB	10MM	32 FT LB	45 FT LB
1/2	65 FT LB	90 FT LB	12MM	55 FT LB	75 FT LB
9/16	95 FT LB	130 FTLB	14MM	85 FT LB	120 FT LB
5/8	135 FT LB	175 FT LB	16MM	130 FT LB	165 FT LB
3/4	185 FT LB	280 FT LB	18MM	170 FT LB	240 FT LB

• The above specifications are not to be used when the bolt is being installed with a bushing.

Seat Belts Save Lives, Please Wear Your Seat Belt.