



2007 Toyota Tundra
2" Leveling Kit
Installation Instructions
Part # TU720MS

REQUIRED TOOL LIST:

- **Metric/Standard Wrenches & Sockets**
- **Floor Jack**
- **Jack Stands**
- **Measuring Tape**
- **Torque Wrench**



Before beginning the installation, read these instructions and the enclosed driver's WARNING NOTICE thoroughly and completely. Also affix the WARNING decal in passenger compartment in clear view of all occupants. If any of these items are missing from this instruction packet, do not proceed with installation, but call SKYJACKER[®] to obtain needed items.

Make sure you park the vehicle on a level concrete or asphalt surface. Many times a vehicle is uneven (side-to-side) from the factory, but usually not noticed until a lift kit has been installed which makes the difference more visible. Using a measuring tape, measure the front and rear (both sides) from the ground up to the center of the fender opening above the axle. Record below for future reference.

IMPORTANT NOTES:

- Please refer to Parts List to insure that all parts and hardware are received prior to disassembly of vehicle. If any parts are found to be missing, contact your dealer as soon as possible.
- If larger tires (10% more than stock diameter) are installed, speedometer recalibration is necessary (see Toyota dealer or Tire Store).
- After installation, a qualified alignment facility is required to align the vehicle to factory specs.

Kit Box Breakdown:

TU720MS:

Main Component Box

<u>ITEM#</u>	<u>DESCRIPTION</u>	<u>QTY</u>
TU720MS-S	07 TUNDRA 2" ALUM FRONT SPACER	2
10X10MMSE	10X10MM STUD EXTENSION	8
LT100	LOCTITE 1 ML TUBE	1

Front Installation:

1. Secure and properly block the tires of vehicle on a level concrete or asphalt surface.
2. Raise the vehicle from the front center cross member and remove tires and wheels. (See Photo #1)
3. Disconnect outer tie rod from steering knuckle. Disconnect the Upper A-Arm ball joint from the top of the steering knuckle. (See Photo #2)
5. Disconnect Strut from upper tower mount. Disconnect the lower strut mounting bolts from the lower A-Arm. Disconnect sway bar end link. (See Photo #3). Remove Struts from vehicle.
6. With Struts removed, apply thread locking compound to the threads. Install and tighten the supplied stud extensions. (See Photo #4)
7. Install aluminum spacer on to the top of the factory strut. (See Photo #5). Install strut assembly. Attach to the factory upper tower mount using the factory fasteners. (See Photo #6)
8. Re-Attach lower strut mount @ A-Arm, upper ball joint, outer tie rod end and sway bar link. Re-Install tires and wheels.



Photo #1

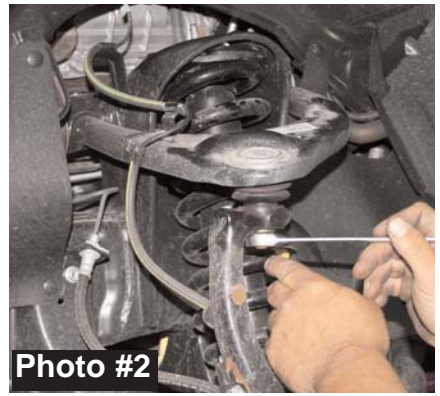


Photo #2

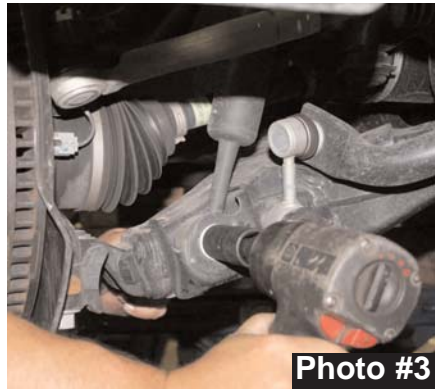


Photo #3

FINAL NOTES:

- * After installation is complete, double check that all nuts and bolts are tight. Do Not re-tighten nuts/bolts where thread locking compound was applied.
- * Check to ensure there is adequate clearance between All rotating, mobile and fixed members. Check clearance between inner side wall of tires.
- * Ensure there is adequate clearance between exhaust and brake lines, fuel lines, fuel tank, floor board, and wiring harnesses. Check steering gear for interference and proper working order. Inspect brake lines for damage and adequate clearance. Test brake system.
- * With the vehicle on the floor, cycle steering lock to lock and inspect steering, suspension, drive line and brake line systems for proper operation, tightness and adequate clearance.
- * Have headlights readjusted to proper settings.
- * **Front end realignment is necessary so have a qualified alignment center realign front end to factory specifications.**



Photo #4



Photo #5



Photo #6