



# Steeda Bump-steer Kit

## Installation Instructions

555-8133 S550 Mustangs

### I. OVERVIEW OF BUMPSTEER

**Definition of bumpsteer:** Bump-steer is a change in toe\* angle caused by the suspension moving up or down. Bump-steer is built into the geometry of the suspension and steering system, and has nothing to do with turning the steering wheel. The effect of bump-steer is for the wheel to toe-in or toe-out when the suspension moves up or down. This toe change or “steering” occurs any time the suspension moves, whether it is from body roll, brake-dive, or hitting a bump in the road. Bump steer is undesirable because the suspension is steering the car instead of the driver.

**Cause of bumpsteer:** The front wheels do not move directly straight up or down when the car hits a bump. Instead, the wheel follows an arc, or curving path, that pushes the wheel slightly inward (towards the centerline of the car) or outward (away from the car) in response to vertical wheel movement. The outer tie-rod (which connects the steering rack to the wheel) also moves in-and-out in an arc as it moves up and down. If the rate which the outer tie-rod arcs in or out does not match the rate the wheel moves in or out, the wheel will be turned by the tie-rod. This is bumpsteer.

The center point of the arc traveled by the wheel (known as the instant-center) is controlled by the location and angle of the moving suspension links. This point moves as the ride height changes. In contrast, the arc of the outer tie-rod is controlled by the position of the steering rack, which is fixed. In order to eliminate bumpsteer, both the length and the center point of the two arcs must be the same. However, since the instant center moves with ride height, bumpsteer cannot be eliminated throughout the entire range of suspension travel. Therefore suspension designers concentrate on minimizing bumpsteer within the range of movement closest to factory ride height. Changing the ride height or other suspension components may move the suspension outside this narrow “optimized” window.

**To fix a bumpsteer** problem, you need to alter the height of outer tie-rod relative to the steering rack. Small changes in this relationship can be made with offset rack bushings. Making big changes requires adjustable tie-rod ends, also known as a bumpsteer kit.

\* **Toe:** Toe-in or Toe-out describes the alignment of the front wheels relative to each other, the same way you would describe your feet. For example, toe-in means they are closer together at the front than the rear

### II. BASIC INSTALLATION

**Caution!** Installing this product requires disassembly of some components of the steering system. If you are not confident you can complete the job safely, have the work performed by a certified technician who is familiar with the front suspension of a Mustang. Failure to install this part properly may lead to serious injury.

1. Raise the front of the car and place it on jackstands. Consult your owner’s manual for proper jacking points.
2. Loosen the jam nut that locks the outer tie-rod to the inner tie rod. Do not back the nut far away from the outer tie rod. Just back it off enough so it is not contacting the outer tie-rod.
3. Remove the nut that holds the outer tie-rod to the spindle. Disconnect the tie-rod from the spindle. Tapping the side of the spindle with a hammer will loosen the tie rod so that it falls out.
4. Hold the inner tie-rod with a wrench to prevent it from spinning and unscrew the outer tie-rod until it comes completely off. Measure the distance from the mating surface of the nut to the end of the inner tie-rod. Unscrew the nut on the inner tie rod until the distance to the end has been reduced by 3/16”.
5. Thread the aluminum collar of the bumpsteer kit onto the inner tie rod until it contacts the jam nut. Thread the steel rod-end (with jam nut) into the aluminum collar until the whole assembly matches the length of the original outer tie-rod that you removed earlier. Make sure the rod-end is threaded completely into the aluminum collar. Tighten the jam nuts.
6. Insert the tapered end of the new tie-rod stud into the spindle. Secure it with the supplied nut.
7. Install the tapered spacers on the straight portion of the tie-rod stud with the tapered side contacting the rod end (fig 1.). Arrange the spacers and rod end on the straight portion of the tie-rod stud. The final adjustments will be made on an alignment rack by the alignment shop. In the meantime, install the spacers at your "best guess" position, which you determine by trying to make the tie rod as close as possible to parallel with the lower control arm.
8. Install the nut on the bottom of the stud. Torque the bottom nut to 50 ft.-lb. and the top nut to 40 ft.-lb.
9. Repeat steps 1 thru 8 on the other side of the car.

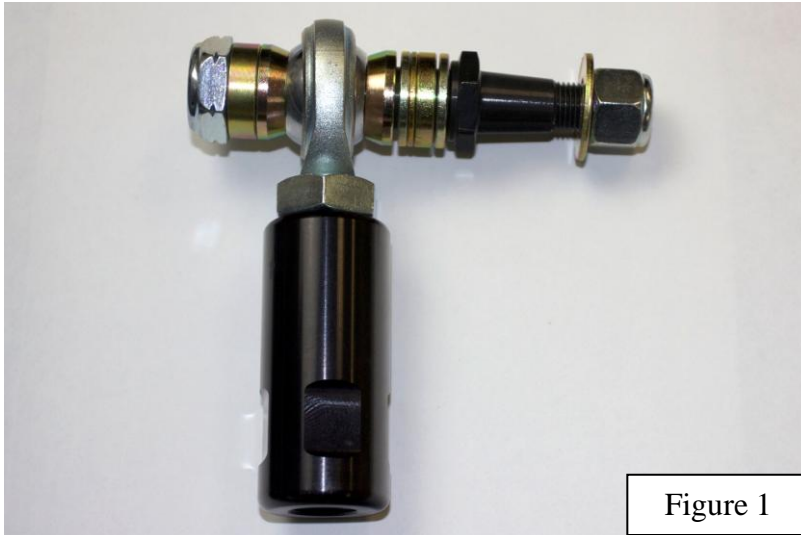


Figure 1

10. Recheck that all nuts are tight, including the jam nuts.
11. Bring the car to an alignment shop and align it according to the instructions below.

### III. ADJUSTMENT

1. Set the car on an alignment rack (with moveable tables for the front wheels) and set the toe.
2. Next, compress the suspension at least 1 inch. This can be done by securing a winch ("come-along") to the floor and winching down on the front crossmember, or by having several people sit on the front bumper. Measure the ride height with the suspension compressed. You will need to compress the suspension to this same height again later. Read the toe at the new compressed height and again at normal ride height. Compare the two readings. **The goal is to have the smallest possible change in toe between the at-rest and compressed suspension height.**
3. Rearrange the spacers and repeat step 2 from above. It is basically a process of trial and error until you achieve the smallest possible toe-change. See **Tips** below.

**Important:** compress the suspension the same amount each time so that you can compare the toe readings accurately.

**Important:** Make sure you compare the "at-rest" and "compressed" readings to find the toe change each time you try a different arrangement of spacers. Do not directly compare the compressed toe readings, because the static toe will change when the spacers are rearranged. **It is the toe-change due to suspension movement you are trying to reduce, not the total toe reading.** If this is confusing, start at step 1 and reset the toe to the desired "at-rest" setting for each arrangement of spacers you try. That way the "compressed" toe readings can be compared directly.

It is often impossible to achieve absolutely zero toe-change. It is better to arrange the spacers so that the car toes-in slightly when the suspension is compressed instead of toeing-out.

4. Once the spacers are arranged in their optimum position, reset the toe to the desired setting.

#### **Tips to help find the correct setting more quickly:**

- If the stock K-member, spindle and balljoints are used, the best position is more likely to be with the rod-end at the middle to top of the stud (more spacers at the bottom).
- If an aftermarket balljoint is used, the best position is most likely to be with the rod-end nearer the bottom of the stud (more spacers at the top).
- Caster angle settings affect bump steer. Increasing caster with caster/camber plates raises the outer tie-rod. The more caster is added, the more the spacers will be needed above the rod-end to compensate.