




# Grille Guard

## Part No. E0017S/B

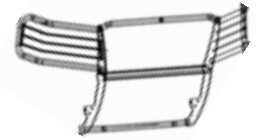

Fits: 2011 - Current

Jeep Grand Cherokee



60-180 min



Cutting  
Required




Drilling Not  
Required



REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT.




READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION.



DO NOT OVER TORQUE. STANDARD OPERATING LOAD FOR TIGHTEN BODY MOUNT NUTS & BOLTS VARIES FROM 45 TO 65 FOOT POUND.

### PARTS LIST:

Qty	Part Description	Qty	Part Description
1	Grille Guard	2	10-1.5mm x 30mm Button Head Bolts
1	Driver/Left Side Mounting Bracket	4	10-1.5mm x 35mm Hex Bolts
1	Passenger/Right Side Mounting Bracket	4	10mm x 27mm OD x 3mm Large Flat Washers
1	Driver/Left Side Top Bracket	4	10mm x 20mm OD x 2.5mm Small Flat Washers
1	Passenger/Right Side Top Bracket	4	10mm Lock Washers
6	12-1.75mm x 35mm Hex Bolts	2	10mm Nylon Lock Nuts
12	12mm x 32mm OD x 3mm Flat Washers	4	6mm x 18mm OD x 1.6mm Flat Washers
6	12mm Lock Washers	1	50mm x 400mm Adhesive-backed Foam Tape
6	12mm Hex Nuts		

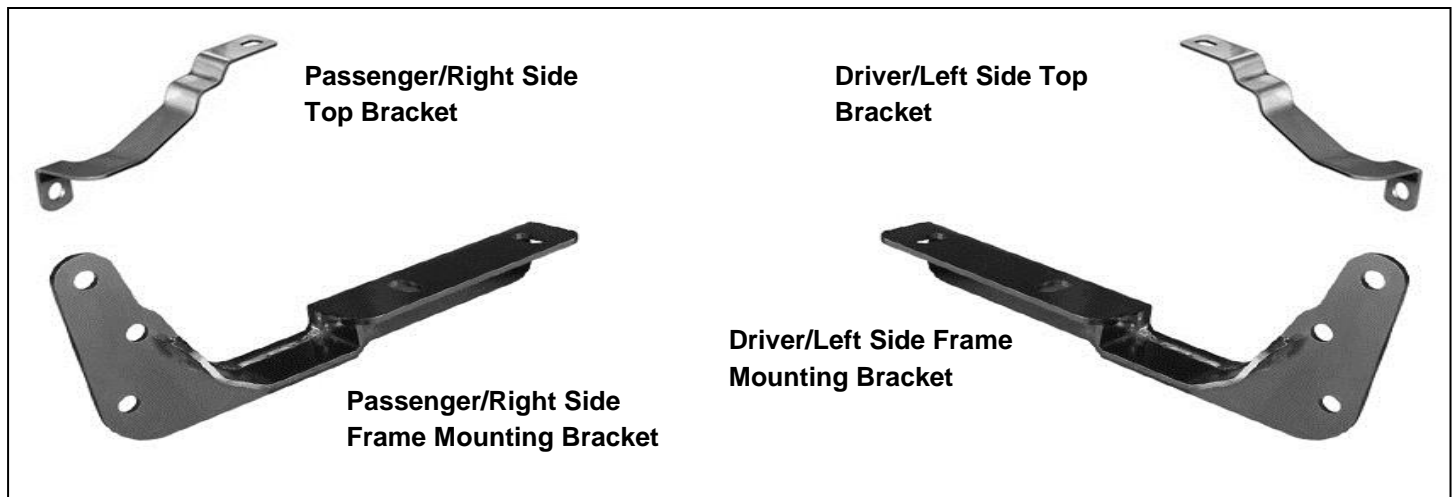

### INSTALLATION PROCEDURE:

**IMPORTANT:** This Grille Guard may not be compatible with optional Adaptive Cruise Control-Forward Collision Warning Systems featuring grille mounted laser control sensor.



- Determine if the vehicle is equipped with or without factory tow hooks, (**Figure 1**). Remove the plastic splash guard under the front bumper cover, (**Figure 2**).

**Vehicles with factory tow hooks:** Remove both tow hooks if equipped and proceed to **Step 3**.

**NOTE:** Tow hooks cannot be reinstalled with the Grille Guard.

**Vehicles without factory tow hooks:**



- a. **2011-13:** Remove the factory hardware securing the ends of the bumper cover. Release the clips at the ends of the plastic bumper cover that attach the lower cover to the upper cover, **(Figure 3)**. **NOTE:** It is not necessary to remove the lower bumper cover, only release the clips at both ends of the cover. Next, remove the (3) clips fastening the air deflector to the bottom of the crossmember, **(Figure 4)**. Carefully pull the bumper cover forward for access and pull the air deflector out from behind the bumper cover, **(Figure 5A)**. Release the (2) clips and remove the block-off cover at each end of the air deflector, **(Figure 5B)**. Reinstall the air deflector, (without block-offs), and bumper cover using the factory hardware.
- b. **2014 Models:** The block offs covering the openings in the bumper are clipped onto the back of the bumper cover only, **(Figure 6)**. Remove the hardware at the bottom of the inner fender panel, **(Figure 7)**. Reach up behind the bumper to release the clips and remove the block off from each opening in the bumper cover, **(Figures 8 & 9)**. No other disassembly is required.

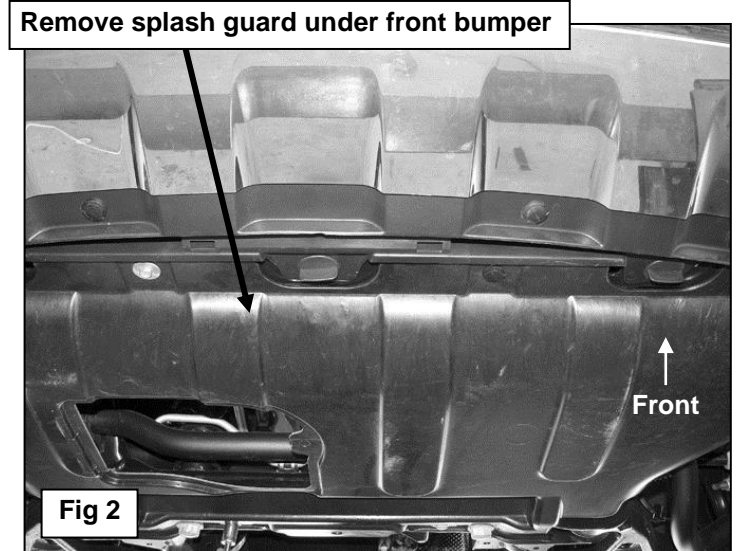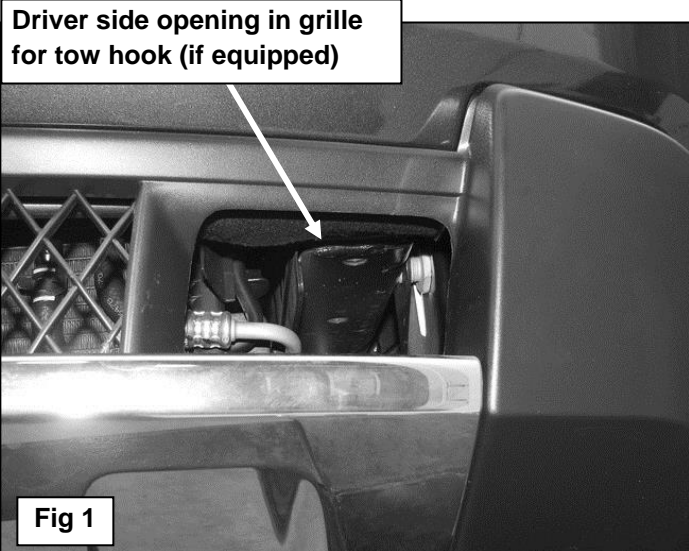

**For vehicles with factory tow hooks, proceed to Figure 6**


2. Locate the (2) threaded holes in the bottom of the frame channel, **(Figure 10)**. Select the driver side Frame Mounting Bracket. Hold the Bracket with the mounting tab flat, **(Figure 11A)** insert it through the opening and rotate up into position in line with the factory threaded holes, **(Figure 11B)**. Bolt the Bracket to the frame channel with (2) 10mm x 30mm Hex Bolts, (2) 10mm Large Flat Washers and (2) 10mm Lock Washers, **(Figure 12)**. Snug but do not fully tighten the hardware at this time. Repeat this step for passenger side Frame Bracket installation.

**2011-13 vehicles: Remove factory hardware and release clips at ends of lower bumper cover only. Do not remove lower bumper cover. (For vehicles without factory tow hooks only)**

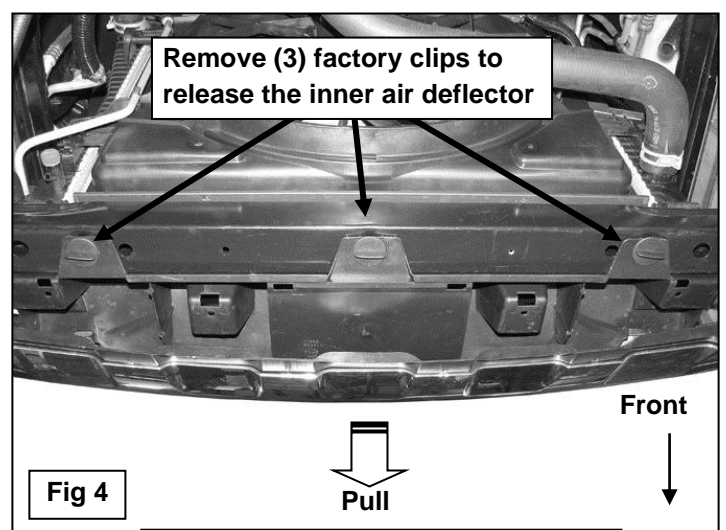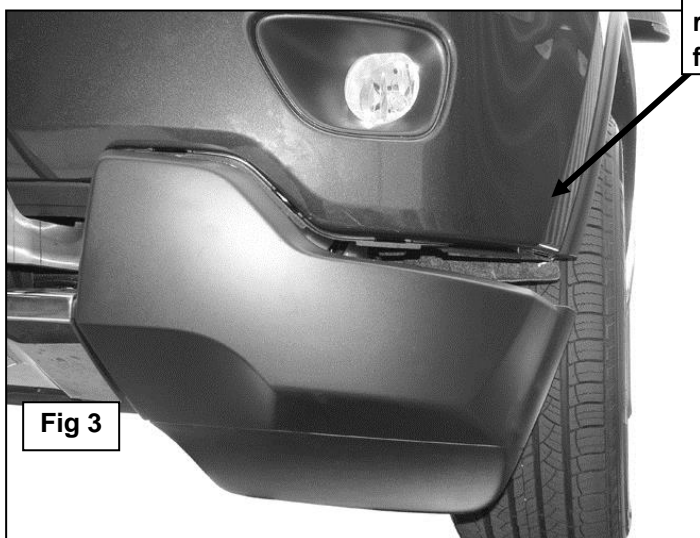


**Carefully pull bumper cover forward and remove inner air deflector**

3. With assistance, hold the Grille Guard up to the outside of the Mounting Brackets. Attach the Grille Guard to the Mounting Brackets with the included (6) 12mm x 35mm Hex Bolts, (12) 12mm Flat Washers, (6) 12mm Lock Washers and (6) 12mm Hex Nuts, **(Figure 13)**. **WARNING!** Do not allow Grille Guard to come in contact with the vehicle. Temporarily tighten hardware at this time to hold the Grille Guard in position.

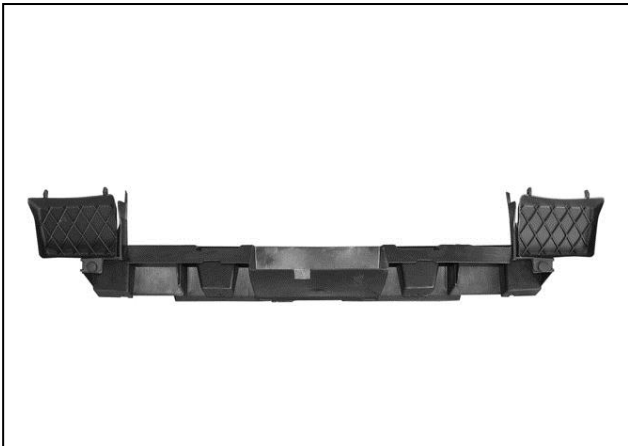


**(Fig 5A) 2011-13 Models: Inner air deflector assembly-applies to vehicles without tow hooks**

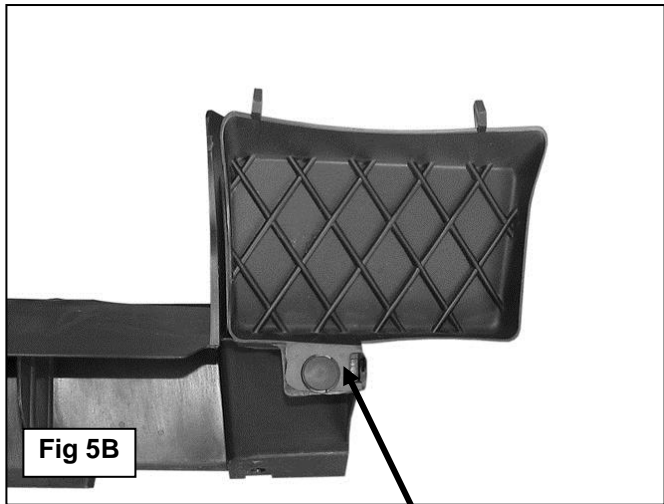


**Fig 5B**

**Remove (2) factory clips to remove the block off cover from each end of the air deflector. 2011-13 driver side of air deflector pictured**

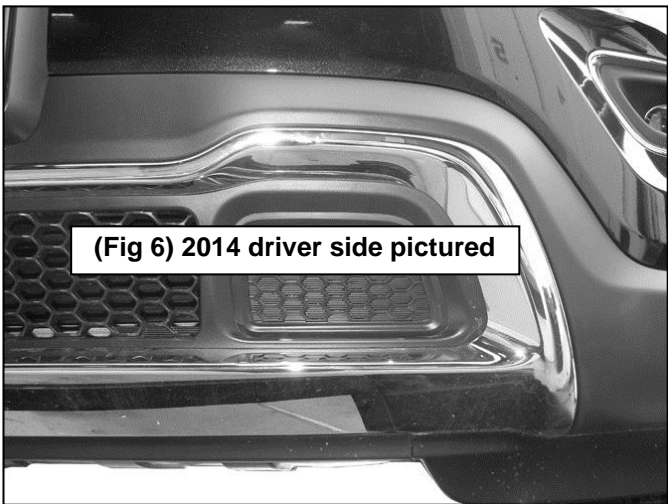


**(Fig 6) 2014 driver side pictured**


4. Open the front hood. Locate and remove the factory 6mm hex bolt on the driver side securing the plastic cover to the radiator support, **(Figure 14)**. Use the included (2) 6mm Flat Washers as spacers to fit into the recess in the plastic cover. Select the driver side Top Bracket. Apply a layer of Adhesive-backed Foam Tape to the bottom of the Top Bracket to protect the plastic cover, **(Figures 15A & 15B)**. Place the Top Bracket on top of the washers and bolt it to the radiator support using the factory hex bolt, **(Figure 16)**. **NOTE:** For proper fit, the Top Brackets must fit as close to the plastic cover and the top of the grille as possible for hood closure.

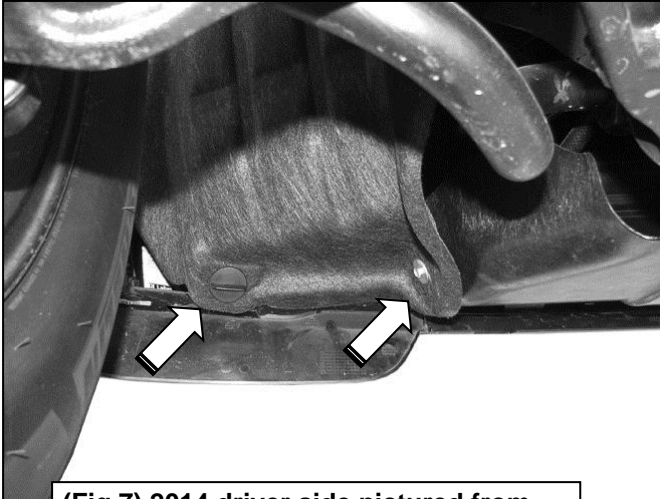


**(Fig 7) 2014 driver side pictured from behind bumper. Remove factory hardware to access mounting location (Fig 10) on bottom of frame channel**

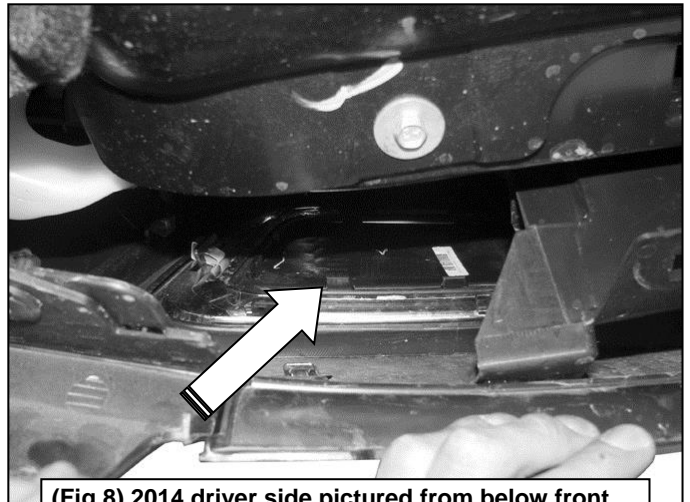

**(Fig 8) 2014 driver side pictured from below front bumper. Carefully pull the air dam slightly forward and reach up between bumper cover and radiator support to access and remove block offs**

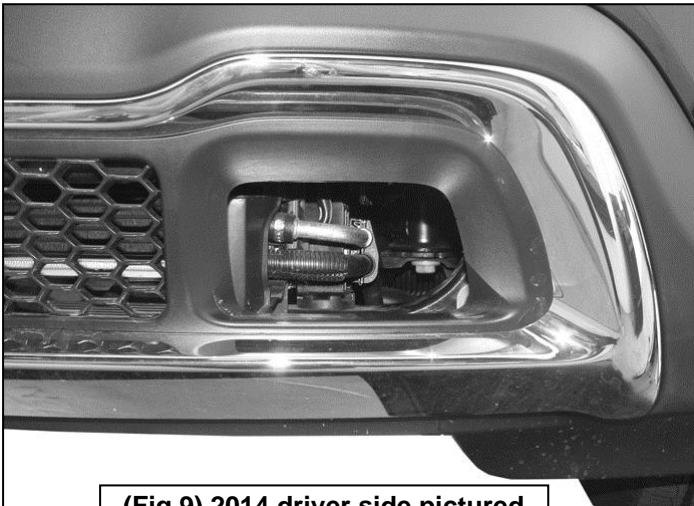


**(Fig 9) 2014 driver side pictured**

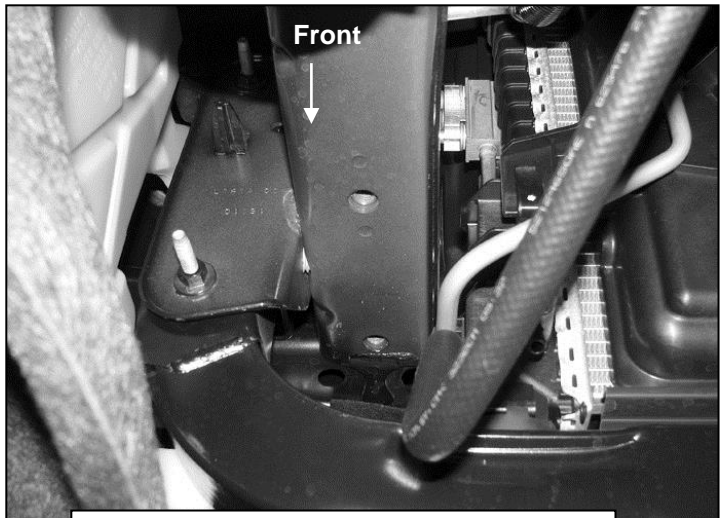


**(Fig 10) Driver side mounting location pictured from below and behind bumper**

5. Line up the mounting hole in the Top Bracket with the hole in the Grille Guard upright. Bolt the Bracket to the Grille Guard with (1) 10mm x 30mm Button Head Bolt, (2) 10mm x 20mm Small Flat Washers and (1) 10mm Nylon Lock Nut, (**Figures 16 & 17**). Do not tighten hardware at this time.

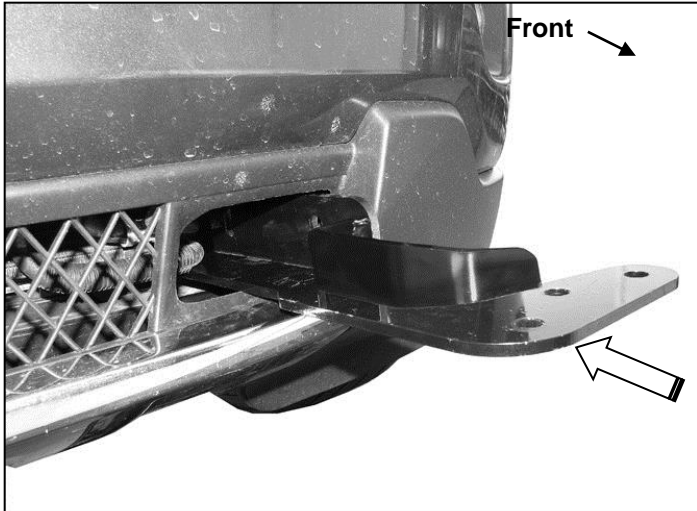

(Fig 11A) Slide the Bracket into the tow hook opening

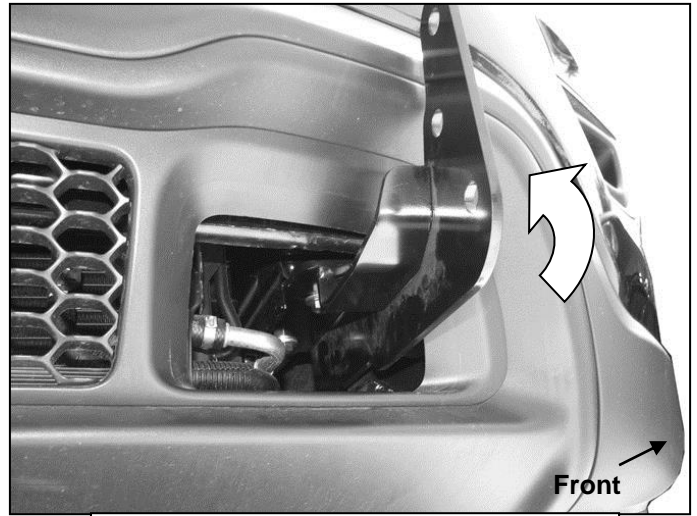

(Fig 11B) Rotate the Bracket to meet the mounting holes for the tow hooks

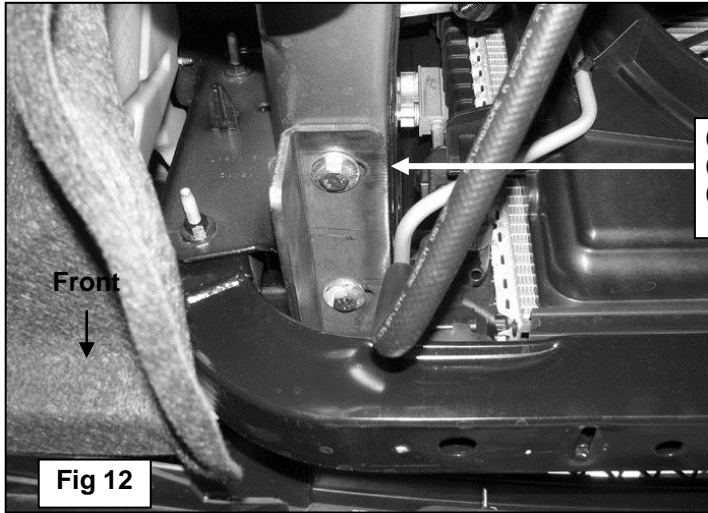


Fig 12

- (2) 10mm x 35mm Hex Bolts
- (2) 10mm Lock Washers
- (2) 10mm x 27mm Large Flat Washers

- (3) 12mm x 35mm Hex Bolts
- (3) 12mm Lock Washers
- (6) 12mm Flat Washers
- (3) 12mm Hex Nuts





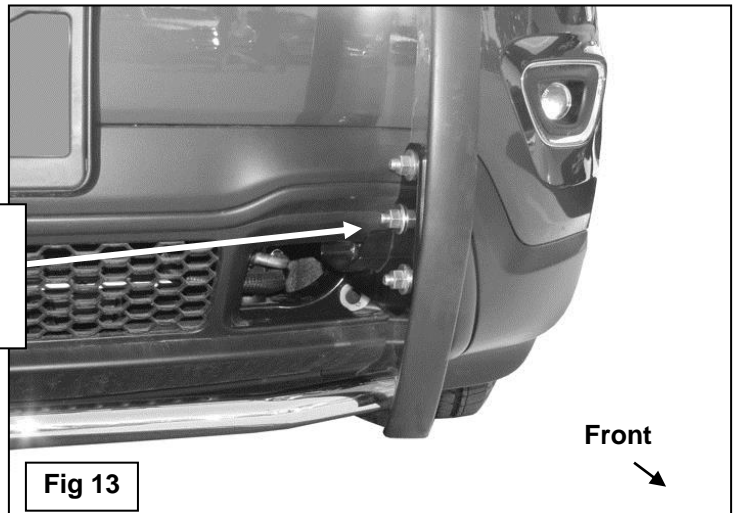



Fig 13

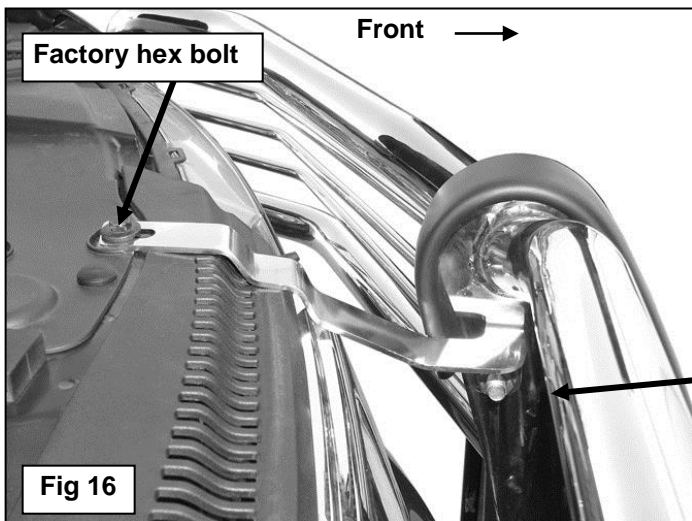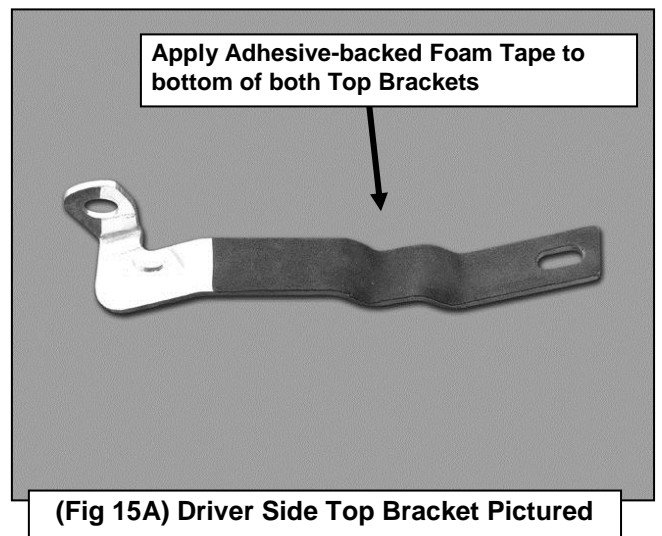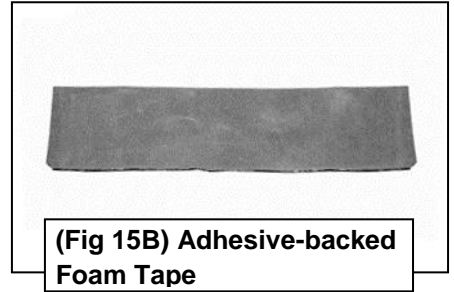

6. Repeat **Steps 5 & 6** for passenger side Top Bracket installation.
7. Align and adjust the Grille Guard and tighten all hardware.
8. **VERY IMPORTANT: Slowly close the hood** to check for clearance between the hood and the Top Brackets. Adjust the Top Brackets as necessary for proper hood closure.
9. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

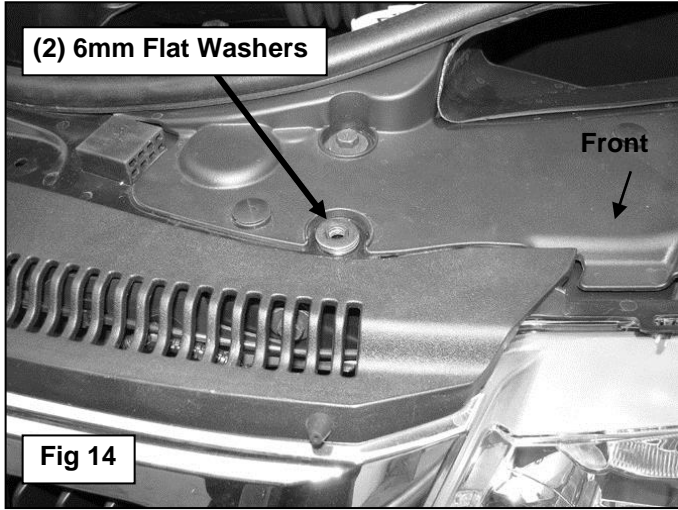

- 10mm x 30mm Button Head Bolt
- (2) 10mm x 20mm Small Flat Washers
- 10mm Nylon Lock Nut

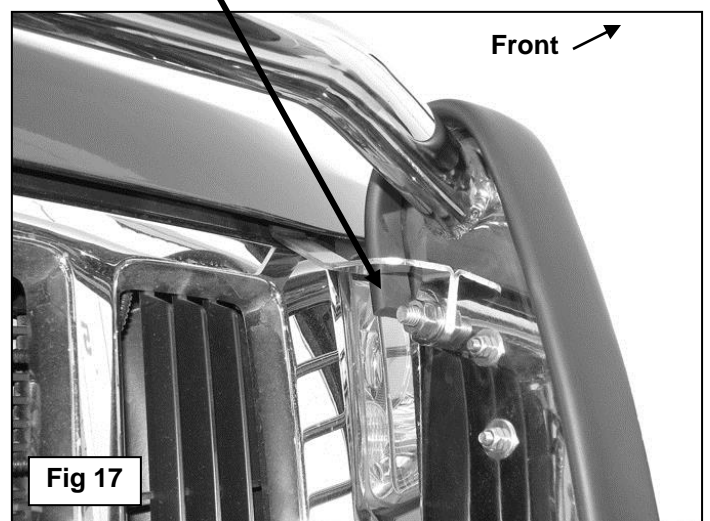

## PRODUCT CARE

- Periodically check the product to ensure all fasteners are tight and components are intact.
- Regular waxing is recommended to protect the finish of the product.
- **Use ONLY Non-Abrasive automotive wax.** Use of any soap, polish or wax that contains an abrasive is detrimental and can scratch the finish leading to corrosion.
- Aluminum polish may be used to polish small scratches and scuffs for **Stainless Steel finish.**
- Mild soap may be used to clean the product for both **Stainless Steel and Black finish.**

## FAQ's

**1. Hardware's are not of correct size.**

*In GMC / Chevrolet truck model 2006 & up, customer needs to reuse the factory body bolts to install the bracket. If your vehicle is not GMC / Chevrolet 2006 & up, ensure that holes are not partially covered with any plastic grommet or rust? If it is, remove the plastic grommet & rust from the thread holes & re-try the installation.*

**2. Mounting Bracket are not getting Installed properly.**

*In some cases Illustration images shown in Installation manual may not be the exactly same as per actual vehicle images ,also if Driver / Passenger side mounting brackets are very identical in the design, suggest referring Parts Identification guide to avoid fitment issue.*

**3. Products are thumping / rattling after installation.**

*Ensure that all required mounting brackets / hardware's are installed & tighten correctly. Suggest using white lithium / regular grease between the metal to metal contact surfaces.*

**4. Side Bar is not aligning with vehicle / Step Pads are not aligning with vehicle doors.**

*Side bar may be interchanged or mounting brackets are not installed at the correct position in the vehicle. Refer Parts identification guide.*

**5. Missing / Excess Hardware.**

*Recheck hardware count as per the part list.*

**6. Product not installing properly.**

*Ensure make model year, cab length and bed size of your vehicle is listed in the application. All installation steps are followed correctly.*

Check out these other TrailFX Products!!

[www.TrailFX.com](http://www.TrailFX.com)



Keystone Automotive Operations Inc. (KAO) warrants this product to be free of defects in material and workmanship at the time of purchase by the original retail consumer. KAO disclaims any other warranties, express or implied, including the warranty of fitness for a particular purpose or an intended use. If the product is found to be defective, KAO may replace or repair the product at our option, when the product is returned prepaid, with proof of purchase. Alteration to, improper installation, or misuse of this product voids the warranty. KAO's liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for any incidental or consequential loss or damage.