

INSTALLATION MANUAL

REDZONE Floor Mounted Holder

ATTENTION: PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS AND WARNINGS BEFORE ASSEMBLING, INSTALLING OR USING THIS PRODUCT.


PLAN YOUR VAN (TIPS FOR FASTER INSTALLATION)

- Check the fit of floor mounted accessories and shelf units in the van before drilling holes in the floor or wall of the van.
- Use the placement guides in the catalog as a guide to ensure a good fit in your van.
- A minimum of two floor mounting bolts are needed to ensure proper lifetime function of your product.

HARDWARE DESCRIPTION QTY. 14-20 x 1-14" Hex Head Bolt 3 3 ¼ Lock Washer 1/4" Flat Washer 4 1/4 - 20 Blind Fastener 3 3 14 - 20 Lock Nut Blind Fastener Installation Tool 1 14-20 x 2-14" Hex Head Bolt, Black 1

TOOLS REQUIRED

- 7/16" Open or box wrench
- 7/16" Socket and driver
- 9/16" Open or box wrench
- Drill with 5/16" drill bit
- Utility knife or 1-1/4" dia hole saw

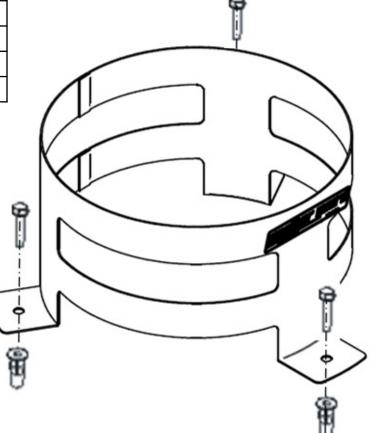

A

CAUTION


Be safe - always wear protective eyewear to keep debris out of your eyes when installing WEATHER GUARD® Van Products.



INSTALLATION MANUAL


REDZONE Floor Mounted Holder

ATTENTION: PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS AND WARNINGS BEFORE ASSEMBLING, INSTALLING OR USING THIS PRODUCT.

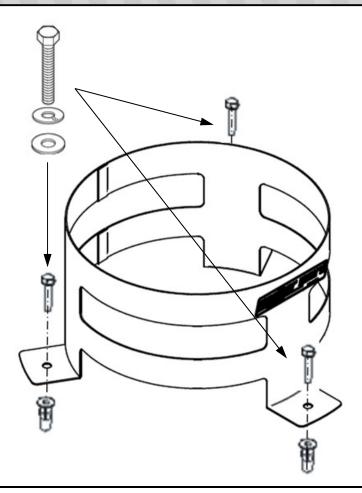

INSTALLING BLIND FASTENERS

Place a drop of oil on the black oxide bolt before assembling as shown on right. Place the Blind Fastener in the hole and use a 7/16 wrench to tighten black hex bolt until the Blind Fastener is fully seated. When setting black hex bolt, it will start out hard. As the Blind Fastener "bulbs" out it will get easier, until it bottoms out or sets. Make sure the Blind Fastener and Installation Tool do not turn during installation.

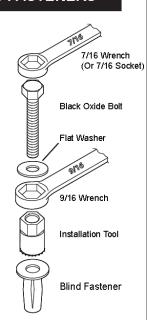

! WARNING

Prior to drilling, check under vehicle for fuel tanks, fuel lines, brake lines, electric wires, etc. to avoid cutting or puncturing them. Do not use Blind Fasteners in these areas.

- **STEP 1:** Place Floor-mounted holder in position and mark through the holes in the mounting feet.
- **STEP 2:** Remove the holder and drill the three locations up to a 3/8" hole.
- **STEP 3:** Install three blind fasteners. Refer to the figure above for installing blind fasteners.
- **STEP 4:** Insert the mounting bolt first through a lock washer, then a flat washer, and then the mounting foot and fasten holder to the floor with the three bolts.



Danger of explosion. Do not use this product for storing or transporting flammables, explosives, hazardous materials, or hazardous waste, such as containers of gasoline, solvents, gun powder, dynamite, propane tanks, acetylene tanks and cutting torches. Failure to heed this warning will result in death or serious injury.

WARNING

This product is only intended and safe for use in storing and transporting small tools, equipment and other similar materials. These instructions are to be followed using the parts and fasteners supplied for proper installation. Any modifications or improper installation of this product will create a hazardous condition that could result in death, serious personal injury and/or property damage.

All floor mounting bolts near the fuel tank area should be installed from the underside of the vehicle, to guard against the fuel tank being punctured in the event of a collision. This would mean not using Blind Fasteners in this area. Holes in this area should be 5/16". Ensure ample space in roof ribs and sidewall ribs for mounting screws so as not to puncture exterior roof or wall.

Do not install this product where it could interfere with deployment of air bags. Failure to comply could result in death or serious body injury.

A CAUTION

Prior to drilling, so as not to cut electric wires, fuel lines, brake lines, etc., check behind and underneath drilling and mounting locations. Failure to heed this warning will result in death or serious injury.

- NOTICE -

Any modification or unintended use of this product shall immediately void all manufacturers warranties. Manufacturer disclaims all liability for injuries to persons or property resulting from any modification to, or unintended use of this product.