

DIRECTIONALS

9013 SERIES

Concealed Warning LED

Similar to the 9011 series unit, the 9013 features two additional LEDs providing high-intensity light output. The Hide-A-LED low profile allows for mounting in small, confined light casings typical of newer model vehicle headlights and tail lights. A sealed in-line driver module eliminates the need for a remote power supply. The 9013 also features 16 flash patterns and synchronization capability with other Hide-A-LEDs and the 3510. Additional benefits of LED technology include high-intensity light output, low current draw and a long maintenance-free service life.


Models


PART NO.	VDC	AMPS	FLASH PATTERNS	COLOR(S)	MOUNT
9013X	12-24	1.25	16	Choose Color	1" Hole


Replace X in part number with desired LED color: A = amber, B = blue, C = clear, R = red

Features and Benefits


- Six high-intensity LEDs provide exceptional warning
- 16 flash patterns including single, double, triple, quad, deci and cycle all
- Multiple heads are synchronizable (simultaneous or alternating operation)
- · Colorless when not illuminated
- In-line waterproof driver module eliminates need for a remote power supply
- UV stabilized polycarbonate lens, nickel-plated housing and 9' cable
- CE, R10
- Warranty: 5 years

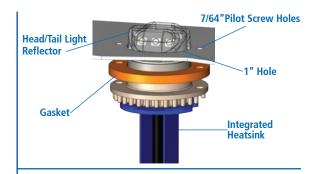





Solid Color:





DEAGONG

MINIBADO

LIGHTBARS

WORKLAMPS

UTILITY BARS

INTERIOR LIGHTIN

BACK-UP ALARMS

CAMERA SYSTEMS

DIRECTIONALS

Flash Patterns

Flash patterns are selected by touching the blue wire momentarily to power; the LED head will cycle through the available patterns.

	STANDA	R D	PATTERNS
#	PATTERNS	FREQUENCY	Description
1	Quad Flash	1.25 Hz	75 Quad FPM
2	Double Flash	1.25 Hz	75 Double FPM
3	Triple Flash	1.25 Hz	92.3 Triple FPM
4	Deciblast	1.25 Hz	85.5 Deci FPM
5	Single Flash	1.25 Hz	75 Single FPM
6	Mega Flash	1.25 Hz	114 Single FPM
7	Triple+Burst	1.25 Hz	82.5 Triple + Burst FPM
8	Steady On		Steady On

CYCLE PATTERNS						
#	Patterns	FREQUENCY	DESCRIPTION			
9	Cycle All		Cycle through patterns 1 to 7			
10	Double-Triple + Burst		2 Double, 2 Triple + Burst cycle			
11	Cycle Classic		1 Double, 1 Quad, 2 Mega cycle			
12	Quad-Mega		3 Quad, 4 Mega cycle			
13	Single-Quad		2 Single, 2 Quad cycle			
14	DeciBlast-Quad		2 DeciBlast, 2 Quad cycle			
15	Single-Triple-DeciBlast		2 Single, 2 Triple, 2 DeciBlast cycle			
16	Mega-Triple+Burst		1 Mega, 1 Triple+Burst cycle			

Alternating/Simultaneous Flash Selection


The yellow wire on each LED head is used to determine alternating or simultaneous operation with other heads in the system that are connected using the blue wire. The yellow wire has no function when 'Steady On' flash pattern is selected.

- Connect the YELLOW wire to either POWER or GROUND
- Heads with YELLOW connected to POWER fire SIMULTANEOUSLY with other heads connected to POWER
- Heads with YELLOW connected to GROUND fire SIMULTANEOUSLY with other heads connected to GROUND
- Heads with YELLOW connected to POWER fire ALTERNATELY with other heads connected to GROUND

Note: The blue wires of all LED heads must be connected together for the alternating/simultaneous function to operate.

Wiring Diagram

The diagram below shows a typical installation of 4 HIDE-A-LEDs™ using an on/off switch. The left and right-side heads are configured to flash alternately with each other using the blue wire to connect the two with the yellow wire on one connected to ground and the yellow wire on the other connected to power.

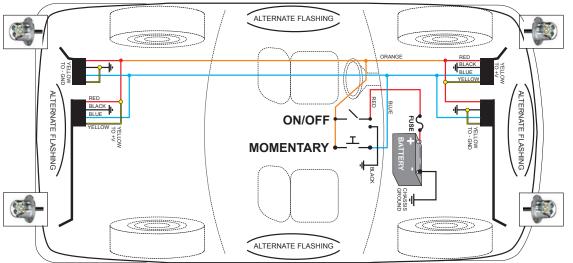

The front and rear heads are configured to flash independently of each other. In order to have the front and rear heads flash in sychronization, the blue wires from all units must be connected. The yellow wire can then be used to determine either alternate or simultaneous flash between each unit in the system by connecting to either power or ground.