



# HD NO HOLES MOUNT 2019+ RAM DT

425-5696




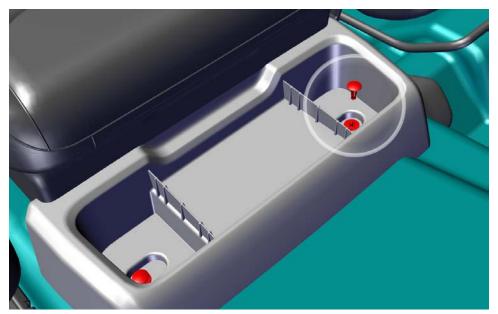


Remove rubber insert in the cup holder / storage compartment exposing the (2) push clips. With a small screwdriver, pry the pin from its clip.

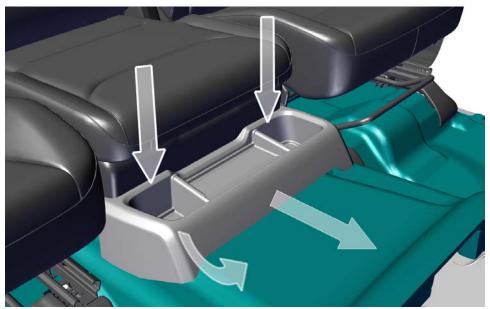


Press down each corner while gently twisting and pulling out to unsnap the cup holder / storage compartment from its base. Set aside for reassembly.

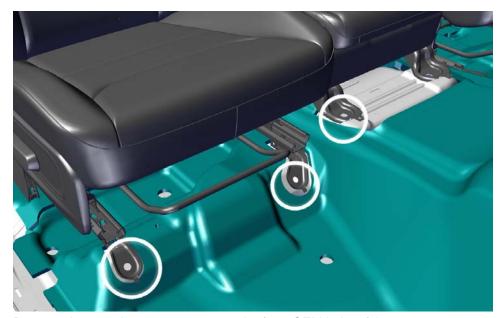


Remove the two trim covers to access the front OEM bolts of the passenger seat - set aside. Loosen the rear bolts and remove the front two seat bolts along with the center seat front right bolt with a "Torx E-12 Socket".

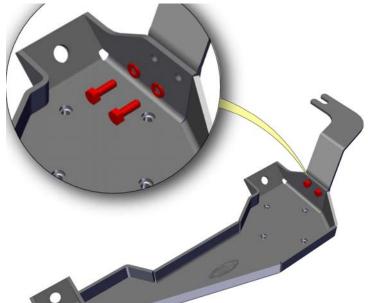


Loosely secure the Side Brace to the Base with provided ½-20 bolts and washers.

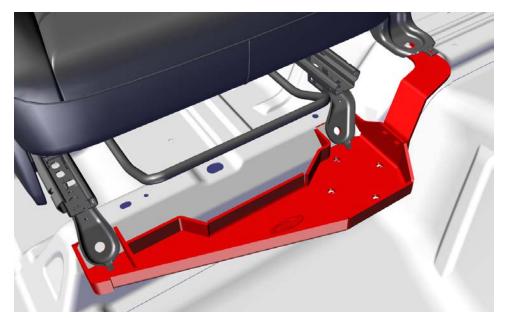


Insert the Base under the seat platform of the passenger seat and the right front of the center seat. Align holes and replace OEM hardware.

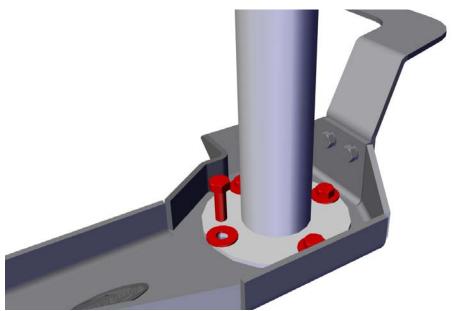

Use a 1/2" socket to secure the upright stand assembly to the base with the provided (4) 5/16-18 bolts and washers. **Note: The height adjustment bolts should be positioned bumper to bumper when properly installed.** 

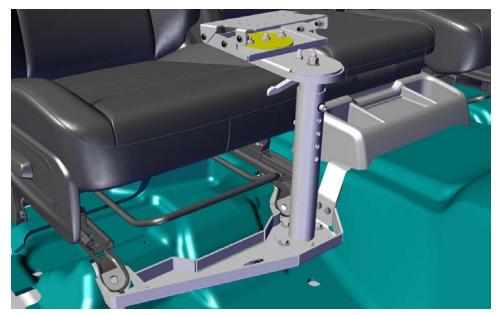

Replace the center cup holder / storage compartment in order it was removed and secure and replace all other hardware previously removed during installation.

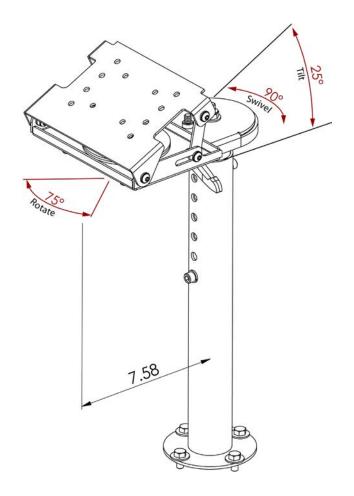

Adjust the height of the tube assembly as needed by removing the (2) 5/16-18 socket head cap screws with the provided 1/4" hex key. Re-tighten once desired height is reached.

Open the tilt mechanism fully to allow the attachment of your docking station and/ or desktop. Once the desktop is secured to the tilt plate, you can adjust to find the optimal angle. Set the tilt angle by tightening (6) 1/4-20 socket head button screws with a 5/32 hex key and a 7/16 wrench. Rotate the arm, tighten the ratchet handle to lock the unit in place.

The horizontal arm can rotate 90° once the ratchet handle has been loosened. This will allow the driver to choose the best placement of the computer. Once desired position has been reached, retighten ratchet handle.

The desktop/computer can be rotated 75° without the need to loosen/tighten anything. The design utilizes friction discs to make final adjustments easier.

### A-MOD DESKTOP



A Jotto Desk Laptop Mount featuring the A-MOD Desktop is the ultimate desktop solution to secure a laptop computer in a mobile environment. The fully adjustable A-MOD Desktop features a lightweight, yet rugged lockable design with superior ergonomics.



#### A-MOD DESKTOP

- A. Side Clamps, Standard or Tall (Case Hardened Steel)
- B. Front Tabs (Case Hardened Steel)
- C. Rear Tabs and Offset Rear Tabs (Case Hardened Steel)
- D. Tubular Lock Solid Brass/High Security
- E. Side Travs
- F. Rear Tray
- G. Latch Release Handle

#### ORDERING INFORMATION

#### 450-4138 A-MOD Desktop, Adjustment Range Dimensions:

Width: 11.25" to 13.625"

**Depth:** 9.25" to 11" (with extensions) **Clamp Height (Tall Clamp):** 1" to 2.25"

Weight: 4.65 lbs.

#### 450-4139 A-MOD XL Desktop, Adjustment Range Dimensions:

Width: 13.5" to 16"

**Depth:** 9.25" to 11" (with extensions)

Clamp Height (Short Clamp): 0.625" to 1.25"

Weight: 5.1 lbs.

### REPLACEMENT COMPONENTS



A-MOD Desktop 450-4138 Regular 450-4139 XL



HD Base, Ram 425-5695



CF31 Intelligent Docking Station 450-4103 Dual Wireless Pass 450-4102 Wireless Pass 450-4101 Standard



CF53 Intelligent Docking Station 450-4111

## JOTTO DESK ACCESSORIES

HD Stand Assembly 425-5611



USB Light 425-2082 (A-MOD) 425-2490 (Docking Station)

12" flexible wand with blue LED's and rheostat to adjust brightness. Three foot power cords into cigarette lighter



Screen Support 425-5999 (Docking Station)

The Screen Support is designed to keep your screen in place while you use your computer. It attaches directly to the desk and adjust in height and tilt angle.