

Welcome to Wheel Anatomy 101. Here we will discuss the major structural and fitment aspects of automotive wheels.


We hope that we can educate you to help make your wheel purchase as smooth as possible.

Bolt pattern, or bolt circle, is the diameter of an imaginary circle formed by the centers of the wheel lugs. Bolt patterns can be 3-, 4-, 5-, 6-, 8 or 10-lug holes.

The center bore of a wheel is the opening in the center of a wheel, which goes around the hub of a vehicle. Using the right size center bore will minimize the chance that the wheels will vibrate when mounted.

The spokes are usually what we look at when we talk about a wheel's design. There are many spoke styles and orientations, including concave, mesh, multi-spoke, split-spoke, etc.

Offset, usually measured in millimeters (mm) is the distance from the mounting surface of the wheel to the center-line of the wheel. Different vehicles have different offsets, which determine what type of wheels are suitable for that vehicle.

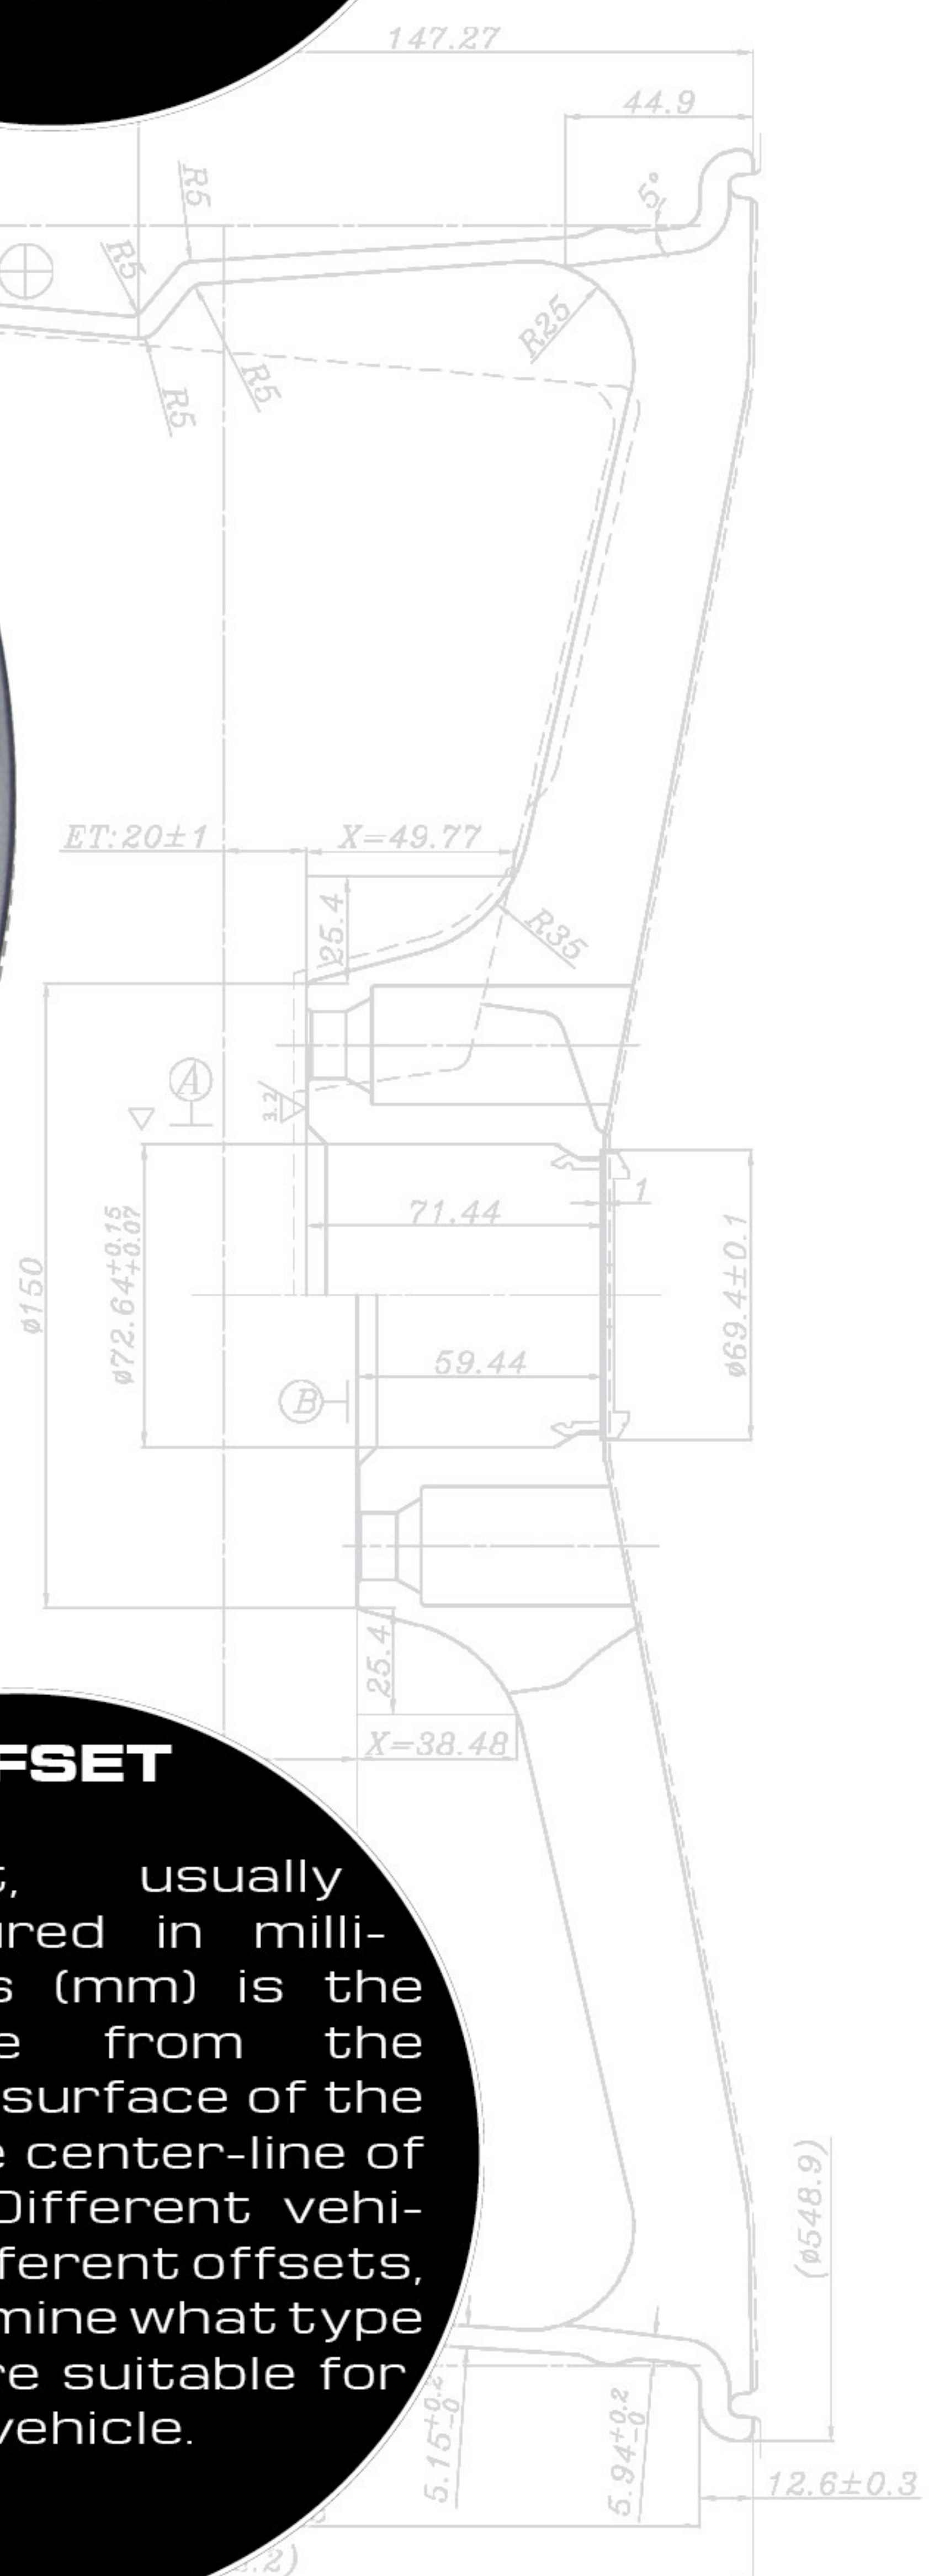




INSPECT YOUR WHEELS

Inspect all parts, including wheel studs and mounting surfaces of the hub and wheels to ensure that they are in good working condition. Careless installation of wheels on a vehicle is a major cause of tire and wheel problems. Proper installation of wheels includes using a rim-clamp style tire changer, computerized wheel balancer, proper size wheel weights, and torquing the wheels to vehicle manufacturer's specifications. Consult a professional wheel and tire installer for the proper fitment of your vehicle.

TORQUING & INSTALLATION

The correct installation of wheels requires the proper torquing of lug nuts. Improper torquing of wheels can cause distortion, fatigue cracks, or alignment problems. After completing the installation process, re-torque the wheels after driving for a distance of 25 miles to ensure tightness of lug nuts. Wheels should be re-torqued to vehicle manufacturer's specifications. Please refer to the lug nut tightening pattern chart, and the recommended torque chart below:

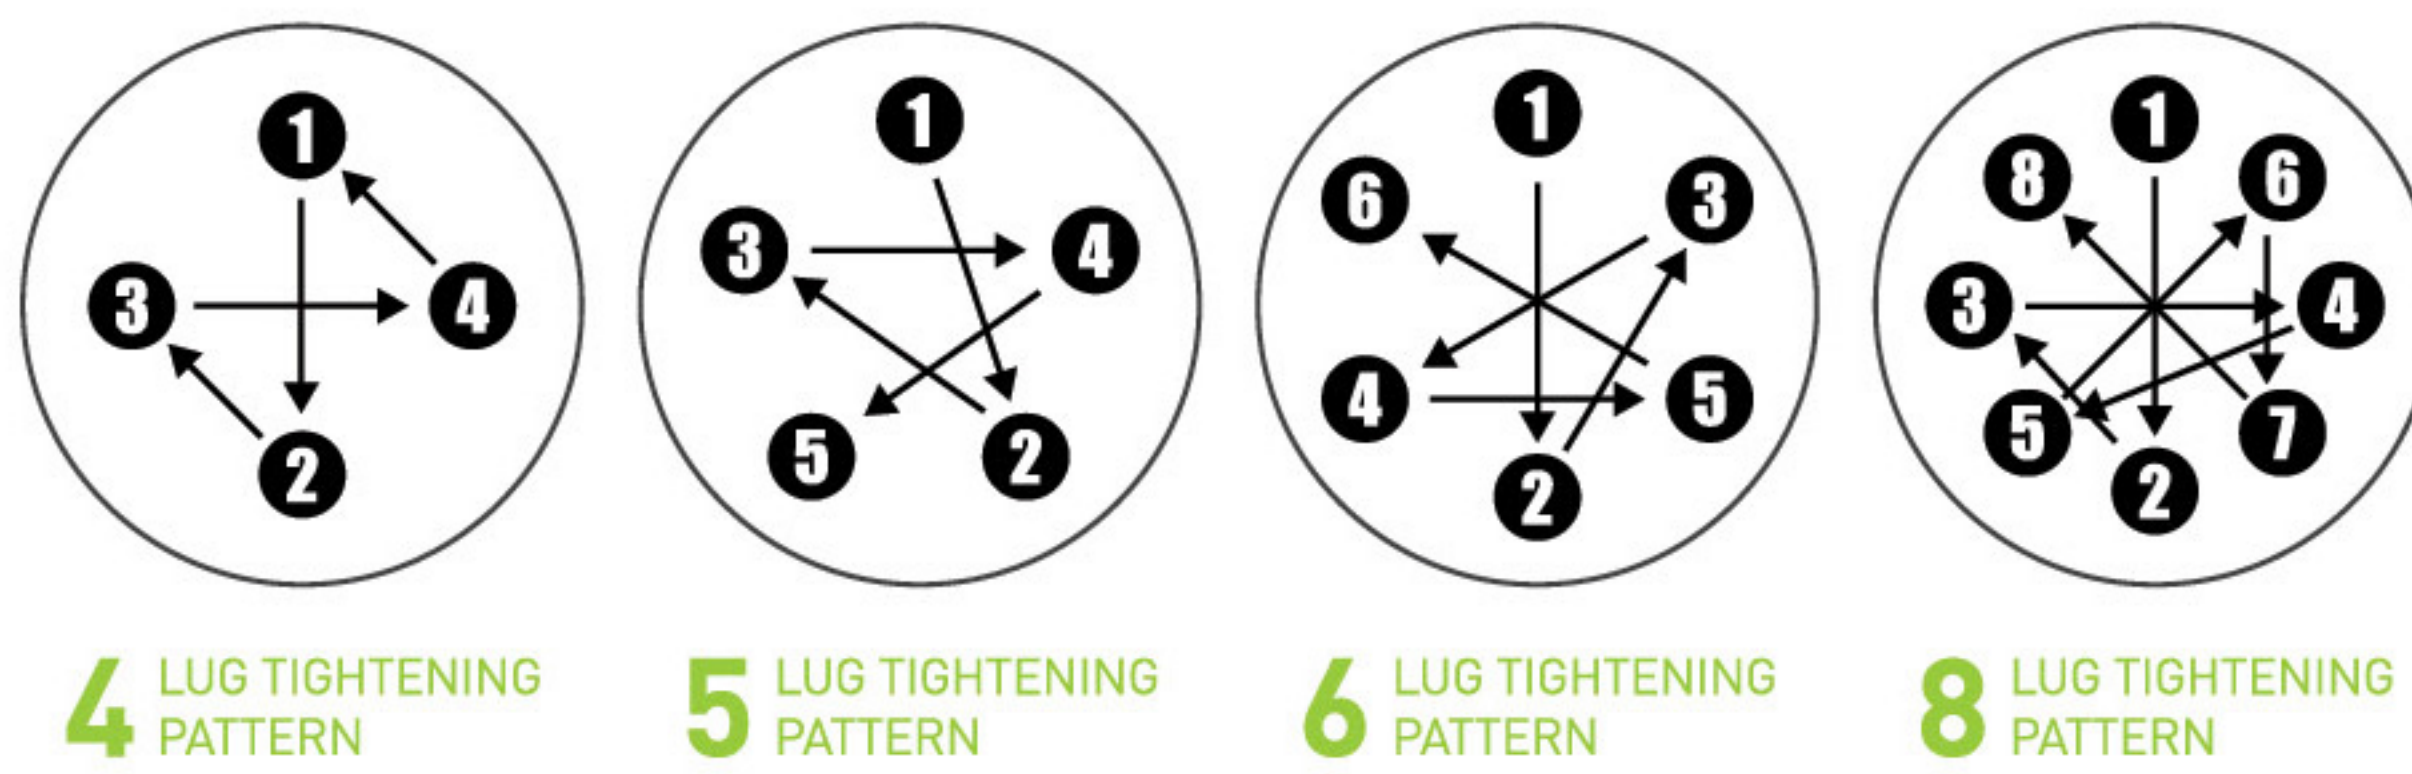

Lug Size	7/16"	1/2"	9/16"	10mm	12mm	14mm
Torque	70-80	75-85	135-145	45-55	70-80	85-90

WHEEL MAINTENANCE

CHROME WHEELS

To maintain the finish of your chrome wheels, only mild (non-abrasive) soap and water is required. Always keep wheels free of brake dust and road salts.

PAINTED WHEELS

To maintain the finish of your painted wheels, use mild soap and water is required. Always keep wheels free of brake dust and road salts.

POLISHED WHEELS

To maintain the finish of polished wheels, use mild soap and water to clean polished wheels. Periodically, aluminum metal polish may be required to bring back the original luster of a polished aluminum wheel.

LIMITED LIFETIME STRUCTURAL WARRANTY

Trade Union International, Inc. offers a limited lifetime warranty on the structure of our wheels. This warranty applies to the original retail purchaser that all our wheels will be free from defects in material and workmanship, under normal and intended use. This lifetime warranty is not transferable. This warranty does not include "Road Hazards" or "Misuse", such as accident, fire, hitting a pothole or debris, neglect, overload, severe impact or exposure to harsh chemicals.

CHROME WHEELS, PAINTED WHEELS & POLISHED WHEELS

Chrome and Painted Wheels are covered by a one year limited warranty on the finish of the wheels. Use of harsh cleaning agents, steam cleaning, salt or other hazardous conditions will void this warranty.

Polished wheels are covered by a 90 day limited warranty.

LIMITED WARRANTY

This is a Limited Warranty. This warranty does not include merchantability or fitment for particular alterations. All wheels should be check fitted by professional installers before and after installing the wheel and tire package, on both front and rear of the vehicle before mounting the tire. Any wheel that has had a tire mounted on it may not be returned for credits. Trade Union International, Inc. and its distributors will not be responsible for labor, transportation, or any other charges incurred in the replacement or repair of a defective part. This warranty expires upon transfer of title. Wheels are not designed to be mounted with any accessories or adapters, etc., other than those supplied and or approved by our distributors. Any damage caused by such accessories or adapters is not covered by this warranty.

WARRANTY EXCLUSIONS

- Any wheels that have been damaged due to abuse, neglect, misuse, or that have been repaired or altered.
- Wheels that have been used for off-road or racing.
- Wheels that have been damaged due to adverse weather conditions, or road chemicals.
- Wheels that have been improperly installed or installed with other than recommended accessories.
- Wheels that have been installed with tires that exceed the recommended size or installed on vehicles that they were not specifically intended.
- Transfer of title of any of our wheels by the original purchaser voids the warranty.

This warranty gives you specific rights and you may also have other rights under state laws. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. A copy of this warranty and installations are supplied in each wheel box for your convenience.