
AMP RESEARCH BED X-TENDER™

MOUNTING BRACKET INSTALLATION - FORD F-150/F-250/F-350

PLEASE READ ENTIRE INSTRUCTIONS BEFORE PROCEEDING WITH INSTALLATION





M8 Internal

tooth washer



4 x4
Hold Down
Bracket



Part #: 74602-01A


Required Tools:

5mm Hex Key


Addtional Tools for bedliner installation:

Marker Center Punch Drill 1/4" Drill Bit 9/16" Drill Bit

Assemble No Drill Bracket and Universal Mounting Bracket as shown below.

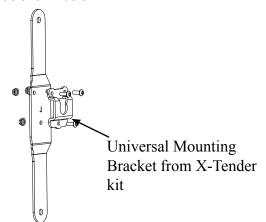

Pass button head bolt through internal tooth washer, mounting bracket and hold down bracket and engage with nut.

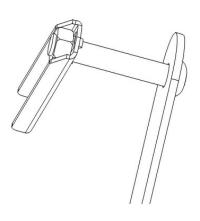


1

Insert hold down bracket through lower hole of the bed pillar.

(Passenger side shown.)

Position hold down bracket so that it is completely inside the hole.

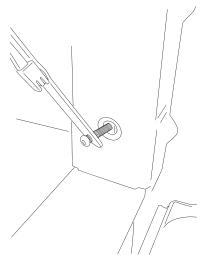


3

4


AMP RESEARCH BED X-TENDER™

MOUNTING BRACKET INSTALLATION - FORD F-150/F-250/F-350

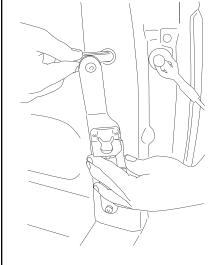


Repeat for top hole.

Once both hold down brackets are in place, pull on the mounting bracket assembly to position the hold down brackets. Make sure that the protrusions on the hold down bracket engage themselves with the edge of the hole.

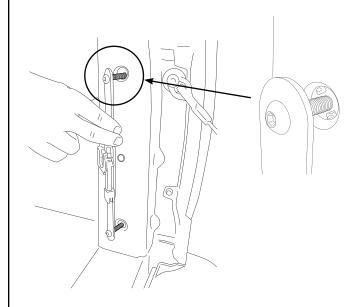


5

Continue to pull the mounting bracket away from the bed pillar while tightening the upper button head bolt.

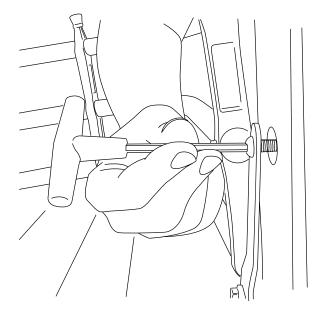

Repeat for lower hole. Torque to 22 ft.lbs. Repeat steps 1-8 for vehicles without bedliner and steps 9-14 for vehicles with bedliner on other side.

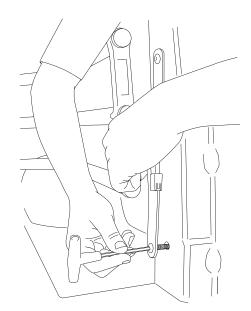

7


6

AMP RESEARCH BED X-TENDER™


MOUNTING BRACKET INSTALLATION W/ BEDLINER - FORD F-150/F-250/F-350

Lift bedliner to locate the mounting holes on the bed pillar.

(Passenger side shown.)

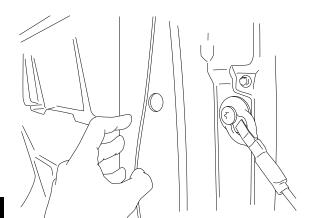


Mark hole position on bedliner for both top and bottom holes and center punch to make a drill guide.

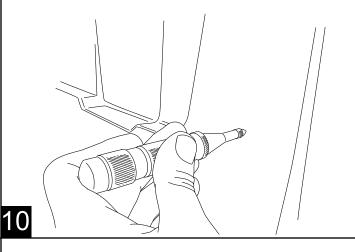


9

With a 1/4" or smaller drill bit, drill a pilot hole through the bedliner. Use a 9/16" drill bit to open up the holes.

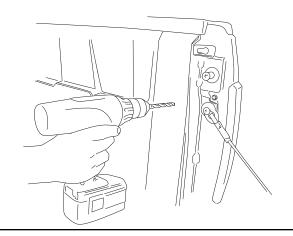


Verify that the holes are large enough and align with the factory bed pillar holes.

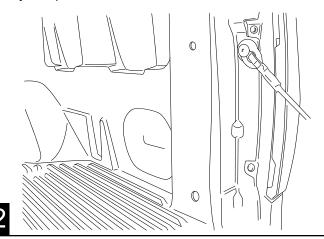


11

Insert hold down bracket through the lower hole of the bedliner and bed pillar.

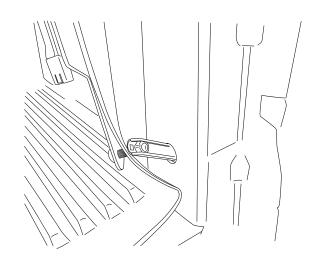

Repeat for top hole. Refer to steps 5-8 to complete installation.

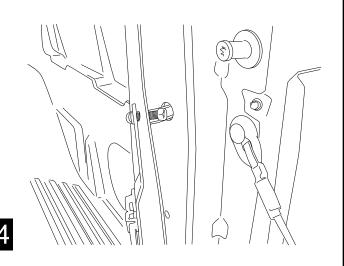

13

AMP RESEARCH ACCESSORIES BED ACCESSORIES