

Supplement Instruction

Form 500-1005 (10-01-13)

For use with instructions 500-1001 & 500-1003

GM Vehicles

For all models that have a part that looks like this (photo A)



Photo A

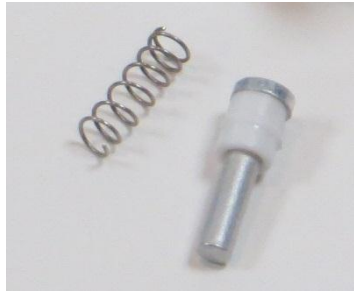


Photo B

It will be necessary to use this contact / cancel assembly. You do not have to remove the assembly, but will need to make the following modification.

1) Remove the contact plunger or wire from the tube section. To do this, simply pull (plunger or wire) until the plastic retainer snaps loose. Remove plunger, wire and spring from tube (photo B) these parts will be replaced.

2) Install wire assembly supplied (as shown below) into tube (spring end first) and press sleeve into tube to secure.



*3) Continue with **Step 2** in main instruction sheet.*