REPLACEMENT COMPONENTS



JOTTO DESK ACCESSORIES

425-3385

Specifications subject to change without notice





Model 425-5299

Allows you to tilt your phone independent of the desktop angle. Mounts to side of 10" x 12" Desktop.



SCREEN SUPPORT - A-MOD


Model 450-0449

The Screen Support is designed to keep your screen in place while you use your computer. It attaches directly to the A-MOD Desktop and adjusts in height and tilt angle.



USB LIGHT

Model 425-2490 12" flexible wand with blue LED's and rheostat to adjust brightness. Three foot power cord plugs into cigarette lighter.

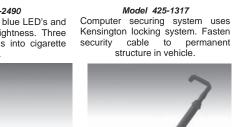

425-1273

BRACE KIT

Model 425-5238 The Brace Kit attaches to the stand providing additional support. It can be adjusted in length and mounts to flat, vertical or angled surfaces.



KENSINGTON® MASTERLOCK®

Model 425-5999

The Screen Support is designed to keep your screen in place while you use your computer. It attaches directly to the ACD Desktop and adjusts in height and tilt angle.



WARNING: Do not install or use this product in any manner which would interfere with any of the vehicles controls, air bags or safety devices. Follow vehicle owner's manual instructions should a dash warning light come on after installation of this desk. Do not install or use this product in any manner which causes a safety hazard for vehicle and/or occupants.

To avoid serious injury do not place this desk or any objects between the air bags and yourself or any passengers. If necessary remove the desk before driving. Store in trunk or other safe place.

We recommend that you do not work on the Jotto Desk while driving! Park safely, then use. Remember, driving safely comes first.

WARNING: Make sure of and check on a regular basis that all knobs, fastening devices and handles are tight and secure. Repair or replace any faulty or worn parts. All equipment, such as computers, printers, phones, etc. must be safely secured when vehicle is in motion.


DISCLAIMER: The manufacturer of this product may not be held liable for any accidents, injuries or problems caused by the use or installation of this product.

Specifications subject to change without notice.



INSTALLATION PROCEDURE READ INSTRUCTIONS BEFORE BEGINNING INSTALLATION



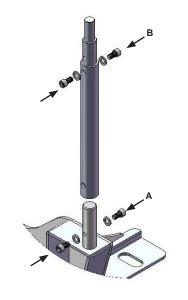

STAND ASSEMBLY OPERATION

- 1. Remove Hex Head Cap Screws from stand assembly and place tube over the No-Holes Mount Base.
- 2. Thread (2) Hex Head Cap Screws with (2) Lock Washers through tube and into front and rear of No Holes Mount post at bottom of tube. (A)
- Raise inner rod to desired height. Thread (2) Hex Head Cap Screws with (2) Lock Washers into front and rear holes at top of tube. (B)
- Use provided Hex Key to tighten (4) Hex Head Cap Screws to ensure secure positioning.

- 1. Remove the two front seat bolts from passenger side seat rails. *NOTE: For easier installation, install vertical tube onto one piece base and secure with ratchet handle before installing base to the seat rails*, thread provided seat bolts and tighten securely.
- 2. Assemble the desktop stand to the mount base, starting with the vertical tube. Use 2 Hex Head Cap Screws and 2 Lock Washers to secure vertical tub e to mount post.
- 3. Place articulated swing arm over the 5/8" end of the telescoping rod. Tighten with ratchet handle.
- 4. Attach desktop to end of articulated swing arm and secure by tightening ratchet handle.

RATCHET CLAMP OPERATION

NOTE: Insert the rate unthreaded side arm and tighter side first will n properly To adjust, pull counter clockw en. If needed, for adjustment

NOTE: Insert the ratchet handle through the unthreaded side of the articulated swing arm and tighten. Going through threaded side first will not allow the arm to tighten properly

To adjust, pull handle out (B) and rotate counter clockwise (A), release and tighten. If needed, use 1/8" hex head wrench for adjustment (C)

NOTE: Ratchet handles are spring loaded and can be readjusted to tighten.