

Recommended Tools



Sockets [7/16"]



Hardware



1/4-20 x 1 3/4 Hex Head Screw Grd 8



#SRT25PB280 PRE-BULB PLUS NUT



1/4-20 Flat Washer



1" OD x .375THK x .375ID Floor Spacer



#C500-25 PLUS NUT TOOL



1/4 GALV SPLIT LOCK WASHER



1/4-20 E-Stop Nut w/Attached Fender Washer








(For Minivans) 022536






MOUNTING LOCATION

Center the Cab Organizer between the front seats and at proper distance from Partition (Refer to Chart), and mark (4) Mounting Hole Locations

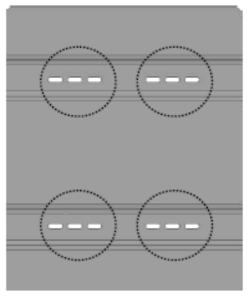



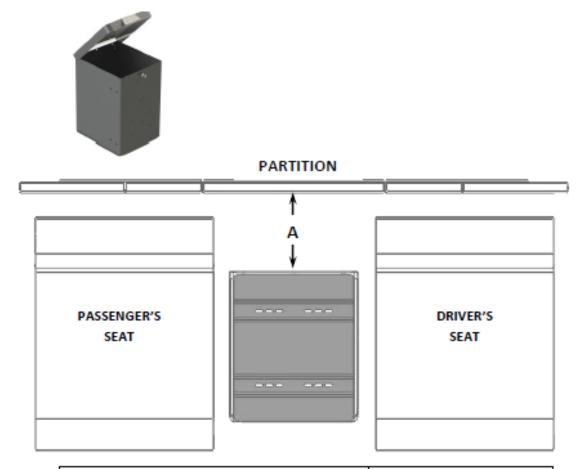

PARTITION	A = DISTANCE FROM PARTITION
STEEL PARTITION w/ STANDARD SETBACK PANELS	2.5"
STEEL PARTITION w/ 3" SETBACK PANELS	3"
STEEL PARTITION w/ 6" SETBACK PANELS	4"
QUIET FLEX PARTITION	2"





INSTALLATION METHODS

NOTE:


Using a 1-1/8" Hole Saw specially made for mat cutting, hole saw out all holes in the mat making sure to align hole saw with pre drilled holes.

Make sure not to drill through the metal floor of the van. Once drilled clear out each area of excess debris

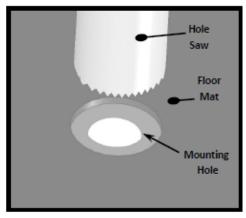

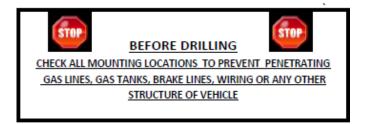


PLUSNUT

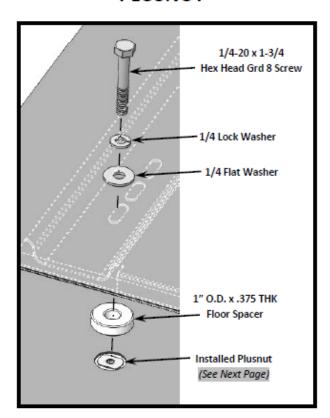

TORQUE SETTING: Size – 1/4 = 7 – 9.6 Ft.-Lbs.

THROUGH FLOOR

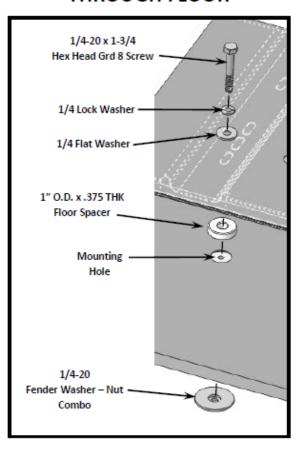




BEFORE DRILLING

CHECK ALL MOUNTING LOCATIONS TO PREVENT PENETRATING
GAS LINES, GAS TANKS, BRAKE LINES, WIRING OR ANY OTHER STRUCTURE OF VEHICLE



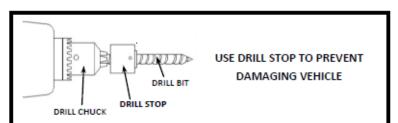





The Plusnut® is pre-bulbed for easy installation

STOP






The Plusnut® is pre-assembled with hex cap and hex bolt.

Then it is inserted into a pre-drilled hole





As the bolt is tightened, the Plusnut® upsets and provides outstanding blind fastening holding power





C-500 tool tightens bolt thru hex head cap into Plusnut® A ratchet, open-end or closed –end wrench can be used.





Fully upset Plusnut® provides a reliable nut plate for fastening.





CAB ORGANIZER FEATURES

Your Cab Organizer will enable you to:

- A Lock valuables in a theft resistant box.
- B Lift the Double-Action lid for easy access.
- C Slide the Double-Action forward for a convenient writing surface. A safety latch/release button is provided.
- D Organize papers by using standard "Pendaflex" style hanging folders on the bottom tracks.
- E Have safe and easy access to euquipment or small items using the upper sliding tray.
- F Safeguard against premature lid falling with a counter-balane spring.

