

Emergency Top

Installation Instructions

 Jeep JK Unlimited For: 2007 - Current Part Number: 56815 Jeep JK 2007 - Current Part Number: 56814

Will not fit Jeeps with modified hoods without the center loop tie down.



56815 Shown



Emergency Top is meant to be used for short, low speed trips.

Installation Tips

Before you begin installing this assembly, read all instructions thoroughly.

For a smooth fit:

For ease in installation, the product should be installed at temperatures above 72° F. Below this temperature, the fabric may contract an inch or more, making it difficult to fit to the vehicle. It is normal for fabric to contract and wrinkle when stored in the shipping carton. Within a few days after the installation, the fabric will relax and the wrinkles will disappear.



WARNING

This product is designed to enhance the appearance of the vehicle. Do not rely in any way on the components of this product to contain occupants within the vehicle, or to protect against injury or death in the event of an accident. Never operate vehicle in excess of manufacturer's specifications.

WEAR SEAT BELTS AT ALL TIMES

Read and follow, precisely, all installation instructions provided when installing this product. Failure to do so could place occupants of the vehicle in a potentially dangerous situation. After installing or reinstalling, check to make sure it has been properly installed.

Table of Contents

EMERGENCY TOP PARTS LIST	PAGE 2
EMERGENCY TOP INSTALLATION	PAGE 2
EMERGENCY TOP WARRANTY	PAGE 5



Safety glasses should be worn at all times while installing this product.

Parts List

Emergency Top Qty - 1 Personal Ponchos Qty - 2

Step One

INSTALL REAR STRAP


Orient the Emergency Top on the vehicle. Locate the elastic strap sewn to the rear of the top. Hook it around the spare tire carrier.


Note: You may need to unsnap the snaps to get the elastic around the tire (see Step Six).

Step Two

INSTALL THE ADJUSTABLE STRAPS

Locate the three adjustable straps. Hook the corner straps to the bottom of the door hinge on each side of the vehicle and the center strap to the hood loop. Do not tighten the straps at this time.

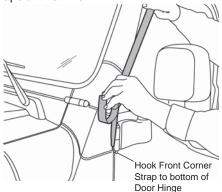

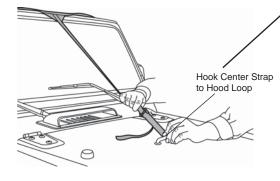


56814 Only

Step Three

SECURE WRAPS TO SEAT BELT MOUNT


Wrap the web strap around the seat belt post under the seat belt. Thread the end of the strap through the buckle.


Make sure the strap does not interfere with the seat belt operation.



Threading Strap through Buckle



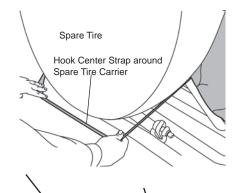

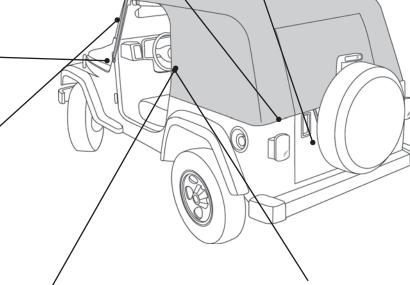

56815 Only


Step Three

SECURE WRAPS TO SEAT BELT MOUNT

Wrap the attachment fabric around the seat belt post.

Attach the hook and loop to close the attachment above and below the seat belt mount.

Make sure the wrap does not interfere with the seat belt operation.

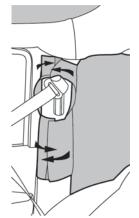

56814 Only

Step Four

SECURE TOP IN BELTRAILS

Slip the plastic strips on the sides of the top into the beltrails on the vehicle.


56815 Only

Step Four

SECURE TOP IN BELTRAILS

Hook the two web straps along the bottom of the rear door cover to the lower edge of the vehicle.

Slip the plastic strips on the sides of the top into the beltrails on the vehicle.

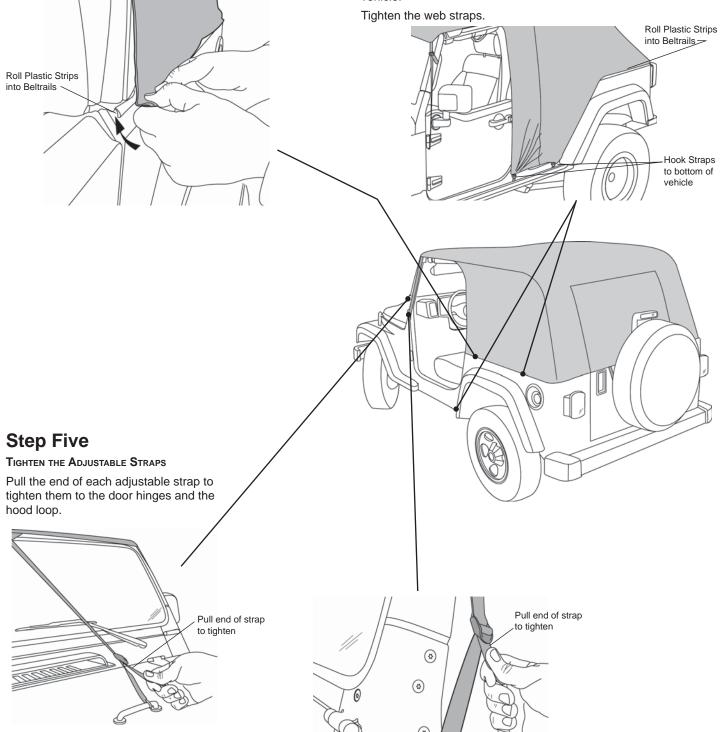


Strap hooks to Door Hinge

Step Six

SECURE REAR CURTAIN

To secure the rear curtain, snap it to the snaps on the elastic strap around the rear tire.

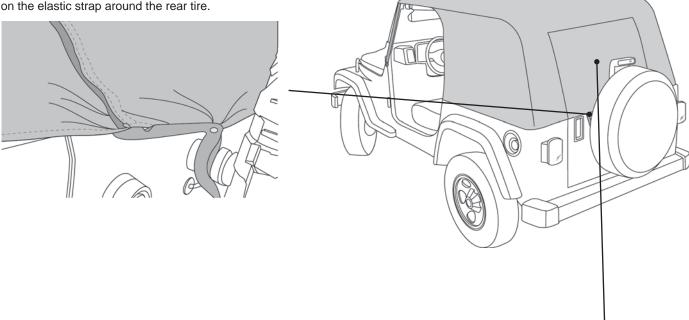

Step Seven

ROLL THE REAR WINDOW

The rear window may be rolled up for greater visibility.

Care and Maintenance of your Emergency Top

Your Emergency Top is made of the finest materials available. To keep it looking new and for the maximum possible wear, it will need periodic cleaning and maintenance.

Washing: The fabric should be washed often using soap, warm water and a soft bristle brush. Rinse with clear water to remove all traces of soap or use Bestop-recommended Bestop Cleaner and Bestop Protectant. Bestop Cleaner and Bestop Protectant are specially formulated to provide a total cleaning and protection system. Bestop Cleaner will not harm vehicle finish, is biodegradable and environmentally friendly. Bestop Protectant protects against UV-fading, cracking and hardening.

Zippers: Keeping the zipper cleaned and lubricated with a silicone lubricant will help prevent damage and keep the zippers in a smooth working condition. If a zipper opens behind the slider, the slider may have been spread apart. This problem can usually be repaired by using an ordinary pair of pliers to bring the sides back into parallel. Return slider to the end of the zipper in the normal Open position. Squeeze lightly at first and test the zipper. If the zipper continues to remain open squeeze more firmly with the pliers and try the zipper again. Repeat this procedure until the zipper operates correctly.

Water: Seeping through at the seams may be stopped by applying 3-M Scotchgard® on the inside of the seams. Rips in the fabric may be repaired with Bondex® iron on patches. Iron the patches to the Inside of the top, carefully following the Bondex® instructions.

Normal Slider -Jaws Parallel

Damaged Slider -Jaws Spread Apart (sometimes broken)



LIMITED WARRANTY

We warrant our product to be free from defects in material and workmanship, for terms specified below, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair or replacement of any item or items found by the factory to be defective within the time period specified.

If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, Acts of God, or by defective parts not manufactured by us, is not covered under this warranty.

THE WARRANTY TIME PERIOD IS AS FOLLOWS: ALL "GOODS" MANUFACTURED BY OUR COMPANY: ONE YEAR FROM DATE OF PURCHASE.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For further information, please contact:

Customer Service 877-638-9509



56814 / 56815 pg 5 0814 Rev. G