


SEAT ADAPTOR KIT #88291 INSTALLATION INSTRUCTIONS

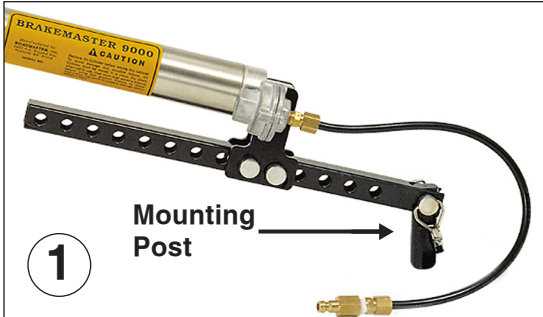

Instructions

1. Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.
2. Remove the seat track bolt access covers from the front of each seat track (Fig.2).
3. Remove two 18mm front seat track bolts (Fig.3).
4. Place the seat adaptor between the floor and seat tracks. *Note:* the mounting post on the adaptor must be directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.
5. Now, replace the two 18mm bolts and seat track bolt access covers (Fig.4) and attach the air cylinder arm to the seat adaptor.

Parts List

- (1) 3/8" lock washer
- (1) Allen head bolt



WARNING

Failure to follow these instructions can result in property damage, personal injury or even death.