
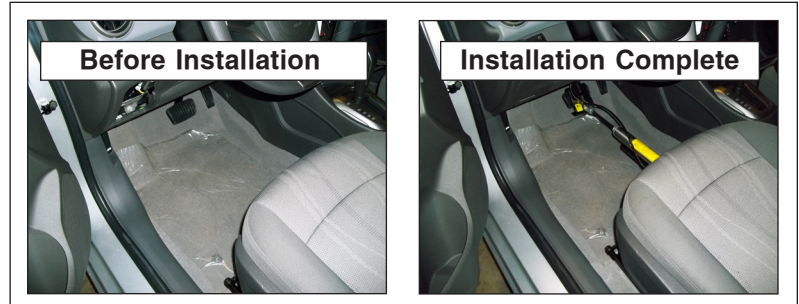


# SEAT ADAPTOR KIT #88301 INSTALLATION INSTRUCTIONS

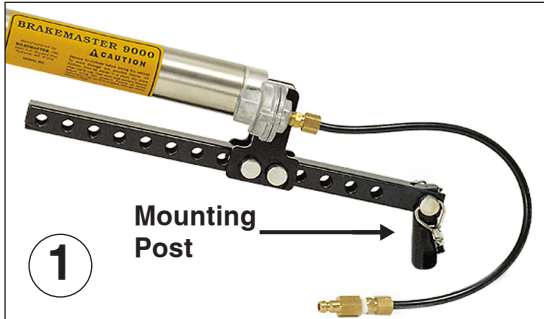

## Instructions

**1.** Locate the mounting post (Fig.1) that came with your BrakeMaster. If needed, order part number 450596. Now, secure the post to the center of the seat adaptor using the included 3/8" x 3/4" bolt and 3/8" lock washer. If the hole is countersunk, use the Allen head bolt and lock washer included with this kit.

**2.** Slide the seat all the way back. Place the seat adaptor under the forwardmost pre-existing holes in the seat track. Note: position the adaptor so that the mounting post (Fig.1) is directly in line to the brake pedal. The BrakeMaster air cylinder may jam or function incorrectly if the mounting post is not directly in line with the brake pedal.

Now, bolt down through the seat track and seat adaptor using the supplied 8mm x 1.25 x 20mm bolts. Finish with the 8mm washers, 8mm lock washers and 8mm x 1.25 nuts (Fig.2).

**3.** Attach the air cylinder to the adaptor.

## Parts List

- (1) 3/8" lock washer
- (1) 3/8" x 3/4" bolt
- (2) 8mm x 1.25 x 20mm bolts
- (2) 8mm x 1.25 nuts
- (2) 8mm washers
- (2) 8mm lock washers



**WARNING**

Failure to follow these instructions can result in property damage, personal injury or even death.