






Part # 12107.14

Wall Mount Freedom Panel Holder

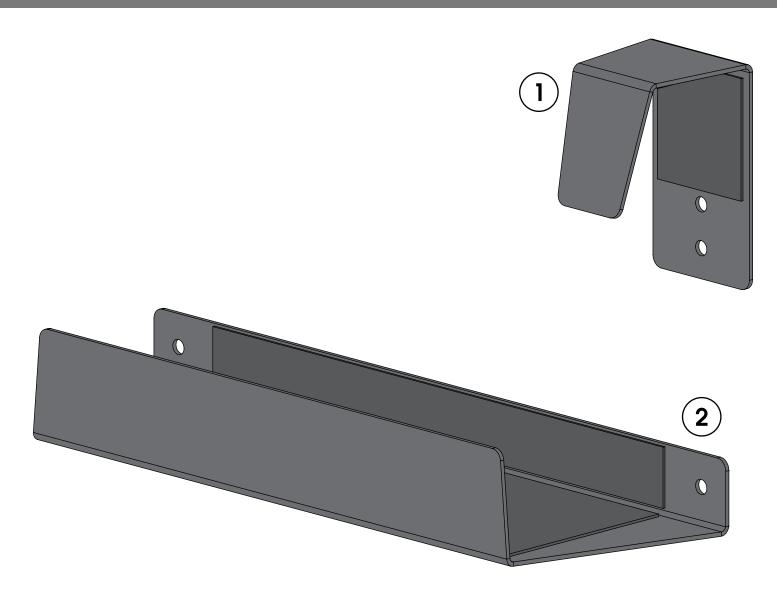



This product is designed to be mounted to a wall that has studs spaced 16" on center. Due to differences in building materials, mounting hardware is not supplied. Failure to secure product to studs can result in damage to product, property, or serious injury.

Components

1. Retainer Bracket (2) 2. Lower Bracket (2)









Wall Mount Freedom Panel Holder


1. Using a stud finder, locate four studs in a row. For proper mounting, studs should be 16" on center.

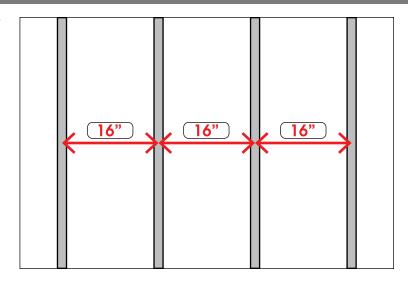

2. Determine appropriate mounting position. Using Lower Bracket for reference, mark and drill one $1/4^{\prime\prime}$ pilot hole in the center of each stud. Pilot hole must go $2^{\prime\prime}$ into stud.

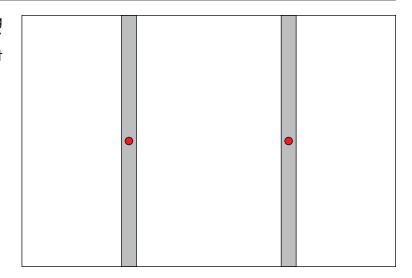

- 3. Determine proper length of 5/16" lag bolts for your application. Bolts must go 2" into stud.
- 4. Using 5/16" lag bolt and 5/16" flat washer, attach Lower Brackets to wall.

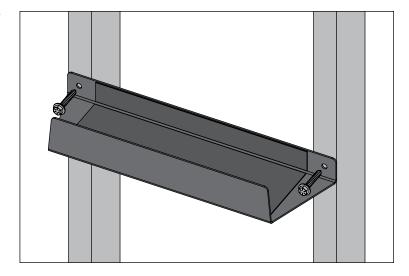









Wall Mount Freedom Panel Holder

- 5. Mark a line 29.5" above bottom surface of Lower Bracket on second stud from left. Align top of Retainer Bracket with line and mark mounting holes.
- 6. Mark a line 30.5" above bottom surface of Lower Bracket on third stud from left. Align top of Retainer Bracket with line and mark mounting holes.

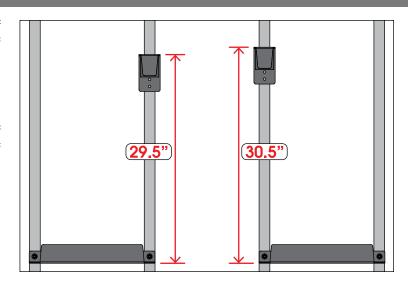

- 7. Drill 1/4" pilot holes where marked. Pilot hole must go 2" into stud.
- 8. Using 5/16" lag bolts and 5/16" flat washers, attach Retainer Brackets to wall.

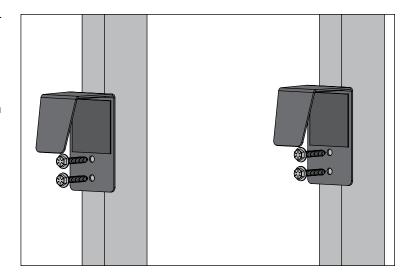

9. Slide freedom panels in holder as shown.

