



Dee Zee Toolbox Installation Instructions

Congratulations on your purchase of a quality Dee Zee product. Dee Zee is recognized as having the highest quality running boards and accessories on the market today. We have earned this reputation by offering our customers a product they can be proud to place on their vehicles. Dee Zee meets all the criteria of manufacturing a custom-fit product which guarantees it to be the easiest product to install.


Note: Please take time to read all of the instructions before beginning this installation.

Note: Use J-Bolt provided or WARRANTY IS VOID...DO NOT USE self tapping screws to mount.

Warning! If it is necessary to drill any holes into the vehicle, Dee Zee recommends putting a sealant or rust inhibitor around all holes drilled into the body of the vehicle.

Cleaning Instructions: To maintain the bright finish of your Dee Zee Stainless Steel Toolbox, clean with a mild detergent and then apply a high grade automotive type wax.

3a

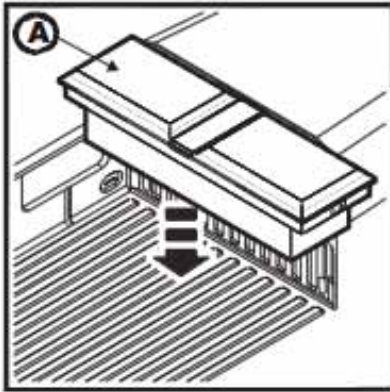

Page 3 & 4 is for Dz 8601 Only!


Place toolbox (A) into the back of your truck bed.





4a

Using Drawing A and B below as a guide, mark the mounting hole location for J-hook (B). The mounting hole location should be on opposite corners inside the toolbox (A) and near the inside edges of the box as shown below.

Drawing A

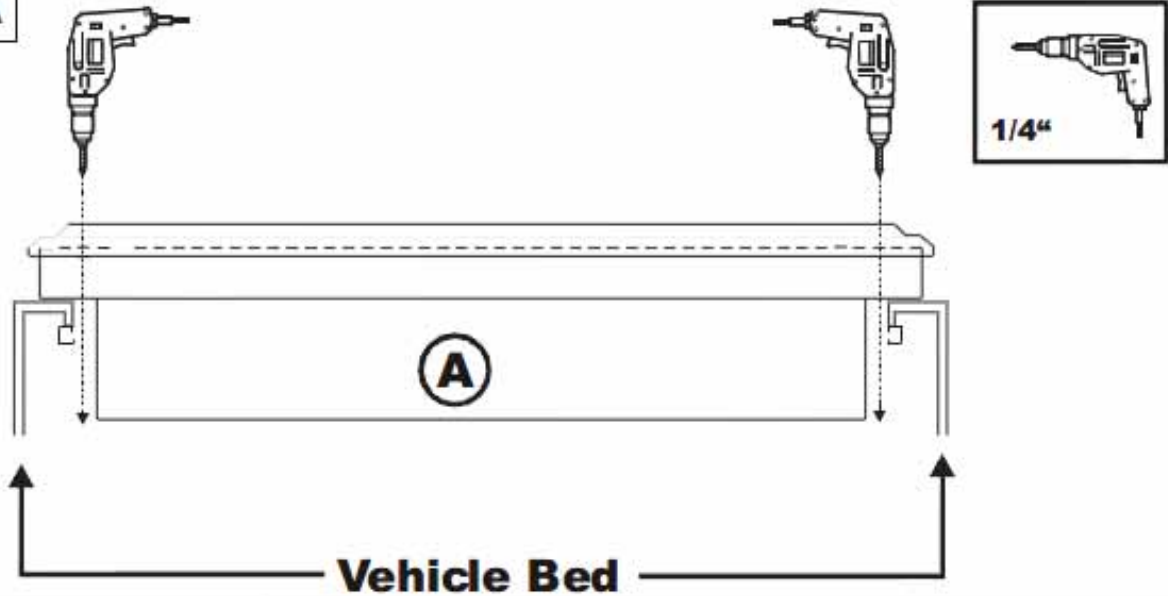




Drawing B

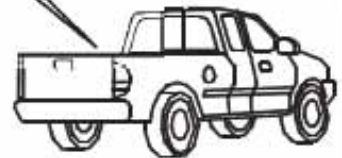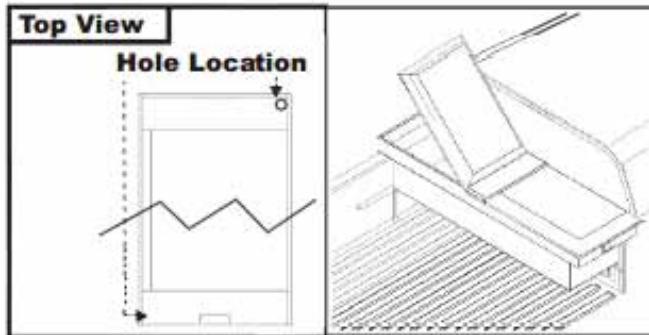




Replacement Parts for Crossover Toolbox


Toolbox Hook-Paddle Latch Assembly

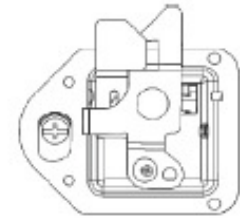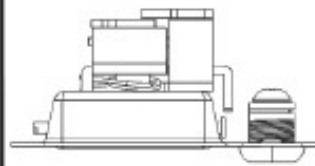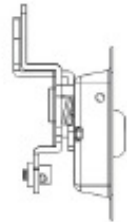

Toolbox Hook-Catch Assembly

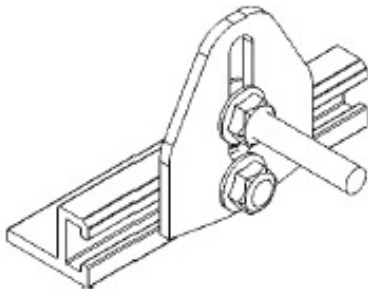

C-Channel Extrusion
Part Number: B 1602

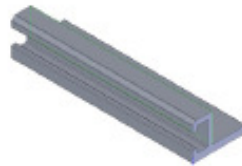

Rotary Plate - Adjustable Latch
Part Number: B 1601



1/4-20 Hex Head Cap Screw
Part Number: PN 70B



1/4-20 Threaded Stud
Part Number: PN 810




1/4-20 Flange Locknut Zinc
Part Number: PN 178



1/4-20 Nylon Locknut Ultra
Part Number: PN 341B



Nylon Standoff
Part Number: PN 860

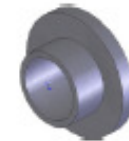

Pushbutton - Blue Series

Spacer Brace for Push Button
Part Number: B 1623



Adjustable Latch
Part Number: B 1610



Carburetor Clip 7R
Part Number: LCC-2



Shock Mount
Part Number: SL-69



Nylon Bushing
Part Number: PN 116



5/16-18 Nylon Insert Locknut
Part Number: PN 510



10 x 1/8 Square Pan Self Drill
Part Number: PN 872



Push Latch
Part Number: TB 85623



Rotary Latch
Part Number: TB 85624




Rod End Adaptor
Part Number: TB 85626




Replacement Parts for Crossover Toolbox Cont.


Shocks




Blade Style Shock			
Shock #	20#	40#	70#
Part Number	SL1-20	SL1-40	SL1-70

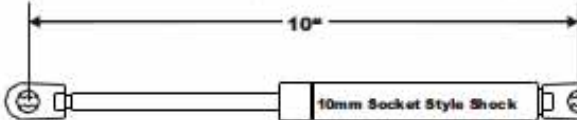

10mm Socket Style Shock			
Shock #	20#	40#	70#
Part Number	SL-3020	SL-3040	SL-3070

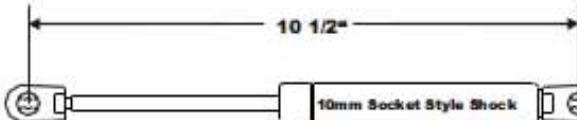


10mm Socket Style Shock					
Shock #	20#	40#	60#	80#	100#
Part Number	SL-3220	SL-3240D	SL-3260D	SL-3280D	SL-32100D

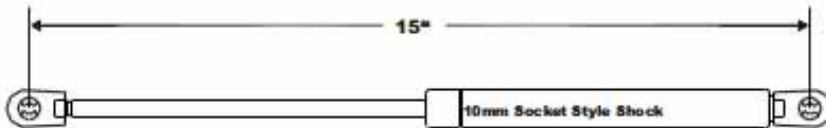

10MM Socket Style "Long" Style Shock		
Shock #	90#	40#
Part Number	SL-3390	SL-3340

Miscellaneous Parts

Foam Latch Gasket
Part Number: TB85409

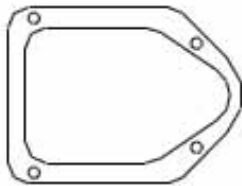

Shock Clip
Part Number: SL-81




Striker Assembly
Part Number: TB85616




Shock Mount Nut
Part Number: PN 301



Latch Cover Rivet
Part Number: PN 285




Latch Rivet
Part Number: PN 157




Hinge Rivet
Part Number: PN 762



Shock Mount
Part Number: SL-69



Rod Clip
Part Number: LCC-1



Rod Guide
Part Number: TB85615



1/4" Flat Washer
Part Number: PN 72B



1/4 x 1" Sheet Metal Screw
Part Number: PN 97B



1/4 x 1" Sheet Metal Screw
Part Number: PN 97



1/4 x 1" Bottom Head Screw
Part Number: PN 96B



1/4" Locknut
Part Number: PN 341B



Mounting Bracket
Part Number: TBTRACE1



Divider Mounting Channel
Part Number: TB-Channel




Toolbox Divider
Part Number: TB-Divider




Toolbox Divider Tape
Part Number: CO-tape




Rear View: Locking Latch
Part Number: TB85613

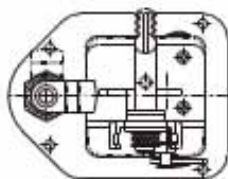


Rear View: Non-Locking Latch
Part Number: TB85614

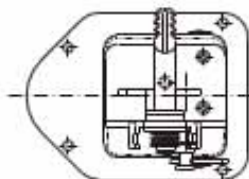


Rear View: Locking Hook
Part Number: Tb85608

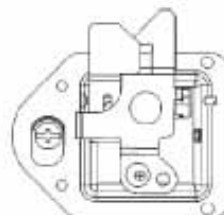


Rear View: Non-Locking Hook
Part Number: Tb85608

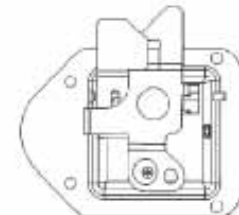

- 1) Keeping the striker plate perpendicular to the lid, adjust the striker location left and right to align the pin with the latch as shown below. The red dot shows the preferred location

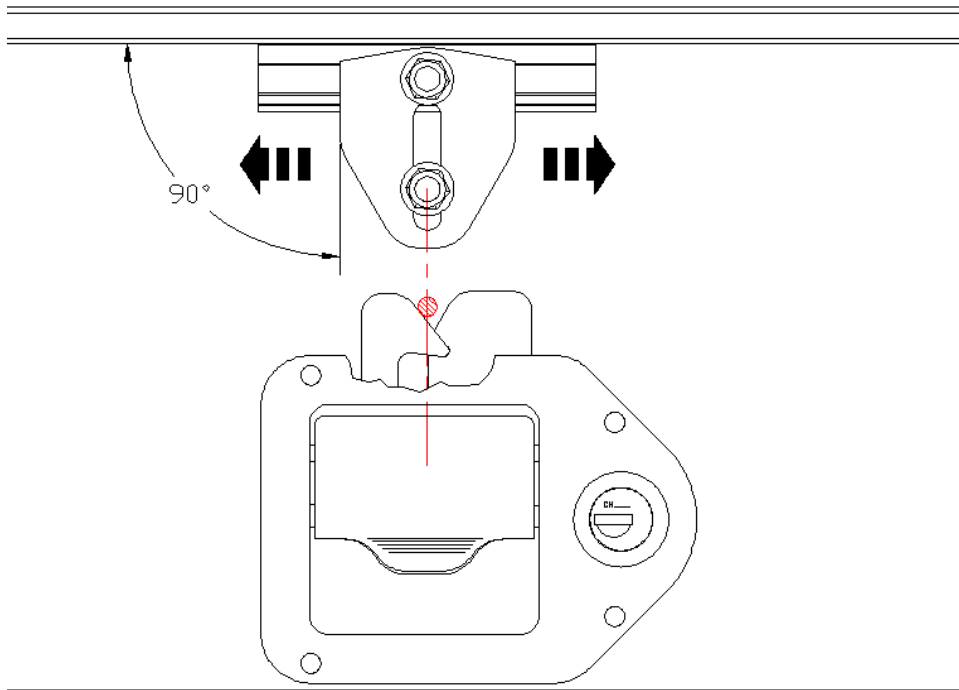

- 2) When the striker pin is correctly centered, tighten to top bolt to set the location.
- 3) Set the pin depth to ensure that the head will clear the latch.

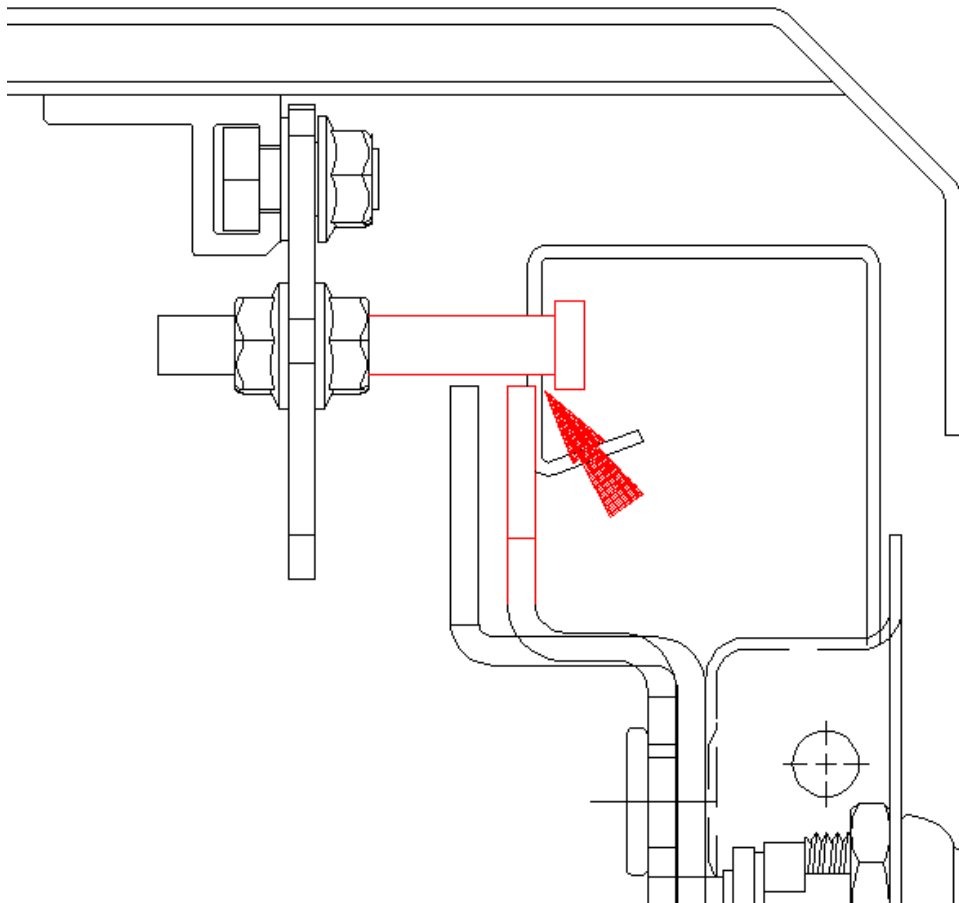

- 4) Tighten the pin in the lowest location, and close the lid. If the lid is able to move up and down when latched, the latch pin needs adjusted. Adjust the pin up the approximate amount the lid is able to move and retighten.

