Installation & CARE

2002-2008 DODGE RAM OE STYLE FENDER FLARES INSTALLATION

BEFORE INSTALLATION

- If you experience any difficulties that the instruction did not cover, please seek assistance at local automotive shop.
- Please wear protection before you work on any vehicle.
- Please be cautions when working with the bumper or any parts belonging to the vehicles's body to prevent scratching.

TOOLS AND SUPPLIES REQUIRED

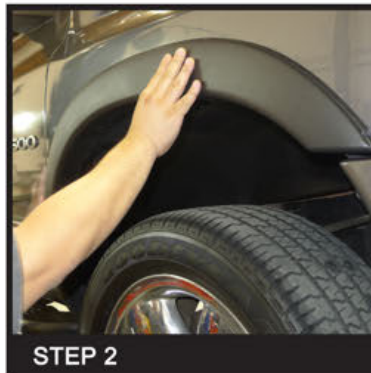| Drill	6mm (1/4") Bit	3mm (1/8") Bit	¼" Ratchet
8mm socket			

PRODUCT NUMBER

FDF-RAM02BK

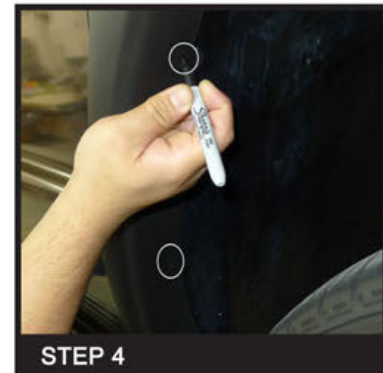## LET'S START THE INSTALLATIONS

FRONT

STEP 1

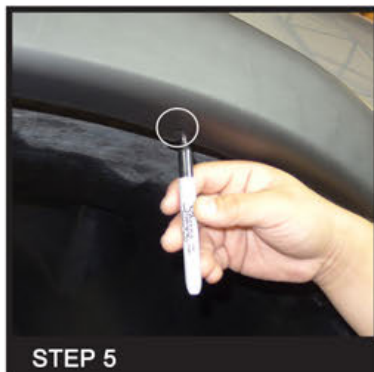Remove (3) 8mm front wheel well liner bolts

STEP 2

Place the front fender flare in the location
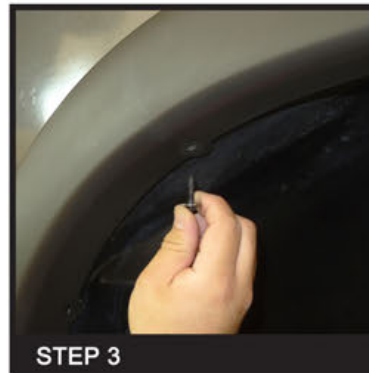
STEP 3

Secure (3) 8mm front wheel well liner bolts

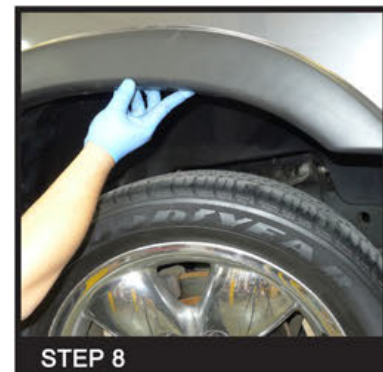**STEP 4**

Mark (4) location on fender for drill the hole

STEP 5

Mark (4) location on fender for drill the hole

STEP 6

Drill (4) 3mm pilot hole on the fender

STEP 7

Drill (4) 3mm pilot hole on the fender

STEP 8

Remove (3) 8mm front wheel well liner bolts then remove the fender flare

STEP 9

Drill the 6mm over the 3mm pilot hole

STEP 10

Drill the 6mm over the 3mm pilot hole

STEP 11

Attach (3) bolt clip on the hole

STEP 12

Attach the 3 bolt clip on the hole

STEP 13

Reinstall the front fender flare

STEP 14

Install (6) 8mm fender flare bolts

STEP 15

Attach the fastener to top center bolt hole

STEP 16

Front fender flare complete

STEP 17

Remove (2) 8mm rear wheel well bolts

STEP 18

Attach (2) bolt clip on the hole
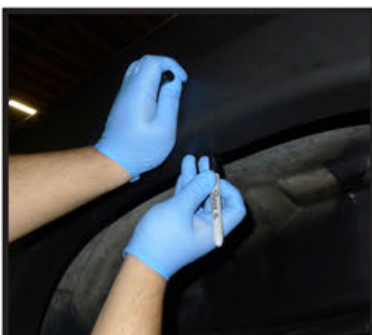
STEP 19

Place the rear fender flare in the position

STEP 20

Secure (4) 8mm fender bolts

STEP 21

Secure (4) 8mm fender bolts

STEP 22

Mark the (3) pilot hole drilling location

STEP 23

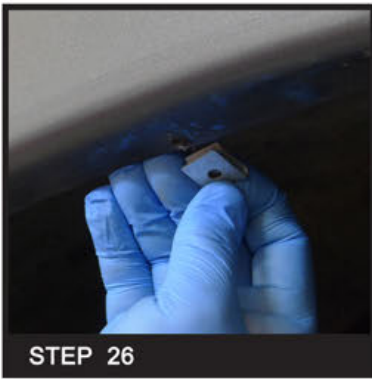Drill the 3mm pilot hole in marked locations

STEP 24

Unblot and remove the rear fender flare after drilling pilot holes
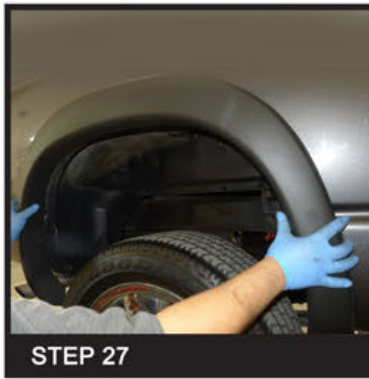
STEP 25

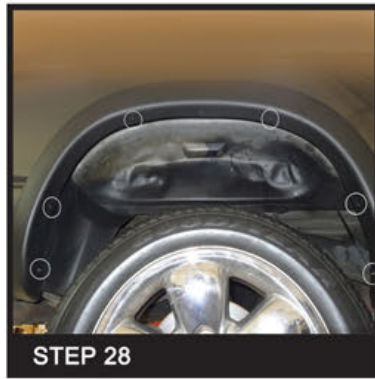Drill the 6mm hole over pilot holes

STEP 26

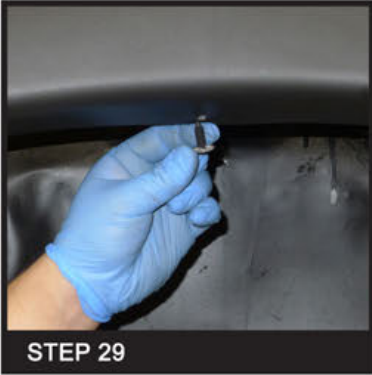Attach (3) bolt clips to new bolt holes

STEP 27

Place the rear fender flare in the position again

STEP 28

Secure (6) 8mm fender flare bolts
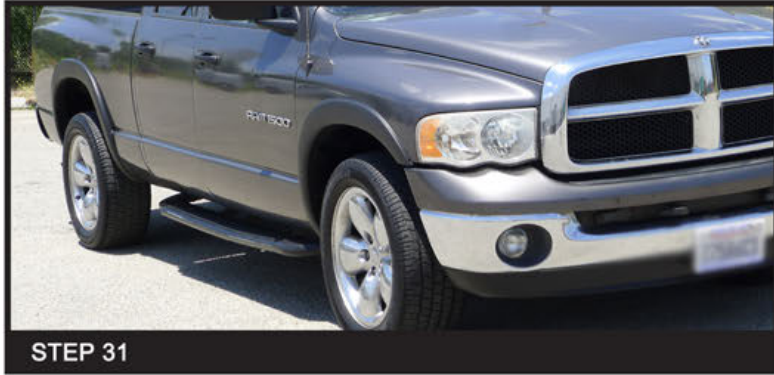
STEP 29

Attach the fastener to the top center bolt hole

STEP 30

Please repeat the steps from 1 to 29 for the opposite side

STEP 31

The installation is now complete

Learn more about fender flares we have.