



advanced FLOW engineering

Instruction Manual

P/N: 77-87004

SCORCHER BLUE POWER MODULE

Make: Hyundai

Model: I30 N

Year: 2019-2021

Engine: L4-2.0L (t)

Make: Hyundai

Model: Veloster N

Year: 2019-2021

Engine: L4-1.6L (t)



THIS IS A HIGH-PERFORMANCE PRODUCT: Do not use this product until you have carefully read the following agreement and installation instruction. This sets forth the terms and conditions for the use of this product. The installation of this product indicates that the BUYER has read and understands this agreement and accepts its terms and conditions.

Before proceeding with the installation:

- Please read the entire instruction manual before proceeding.
- Ensure all components listed are present.
- Ensure you have all necessary tools before proceeding. Do not attempt to work on your vehicle when the engine is hot.


Emission Disclaimer: This product is not currently CARB exempt and is not available for purchase in California or for use on any vehicle registered with the California Department of Motor Vehicles.



Label	Qty.	Description	Part Number
A	1	Module	R77-87004
B	1	LED Switch	05-70029
C	1	Bypass Plug	05-70017
D	1	Harness	AFE-10-239
E	2	hook and loop (2" Inches)	05-01244
F	5	Cable Ties	05-60167
G	2	Double Sided Tape	07-90001



Attention: aFe POWER strongly recommends upgrading the factory spark plugs to high performance spark plugs to maintain a stronger, more consistent spark and prevent any damage to your engine. During our testing, we used HKS M45XL spark plugs and recommend those spark plugs or equivalent. Alternatively, the factory spark plug gap can be closed to 0.026" or smaller. The use of 91 or higher octane is also highly recommended.

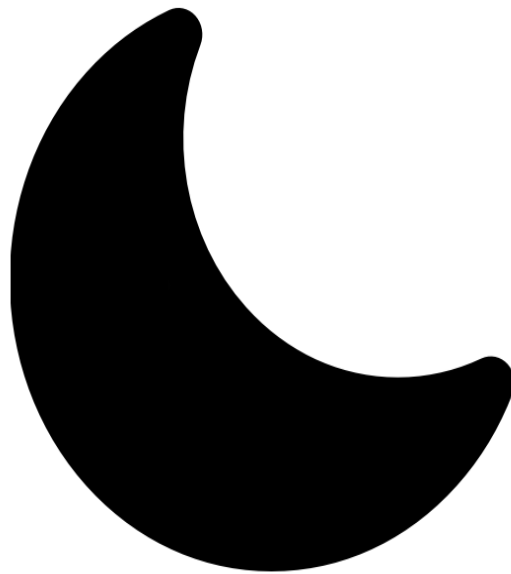

SLEEP MODE


Figure A

Refer to Figure A for Step 1

Step 1: Before installing your aFe POWER module, you will have to place your vehicle's ECU in sleep mode. In order to do this, you will need to do the following:


- If the engine is cold: open the hood, close the doors, lock the car and wait 30 seconds.
- If the engine is warm: open the hood, close the doors, lock the car and wait 20 minutes.
- If the engine is warm and you can't wait 20 minutes: disconnect the battery.

 **Note: Do NOT open doors or start vehicle while one of the sensors is disconnected. This could create a check engine light**

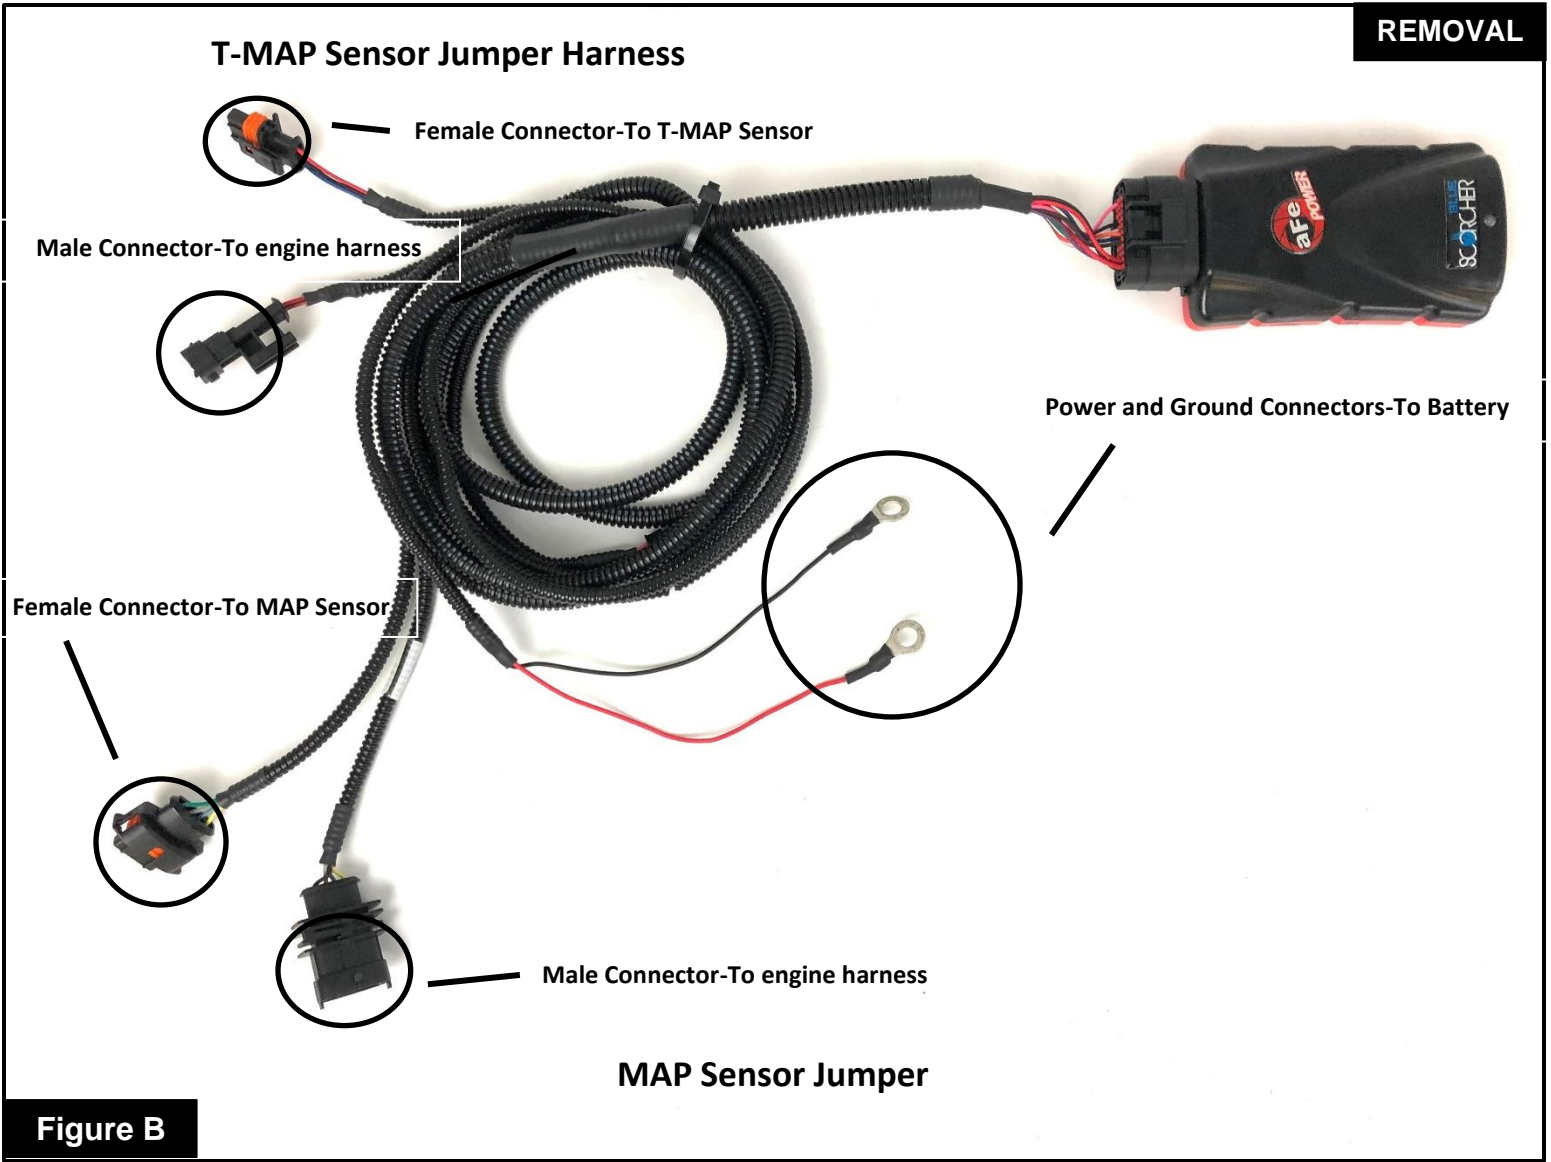**Figure B****Refer to Figure B for Step 2**

Step 2: Refer to the diagram to identify the connectors and their corresponding sensors that they plug into.

- The MAP sensor jumper harness will be labeled MAP.
- The T-MAP sensor jumper harness will be labeled T-MAP.

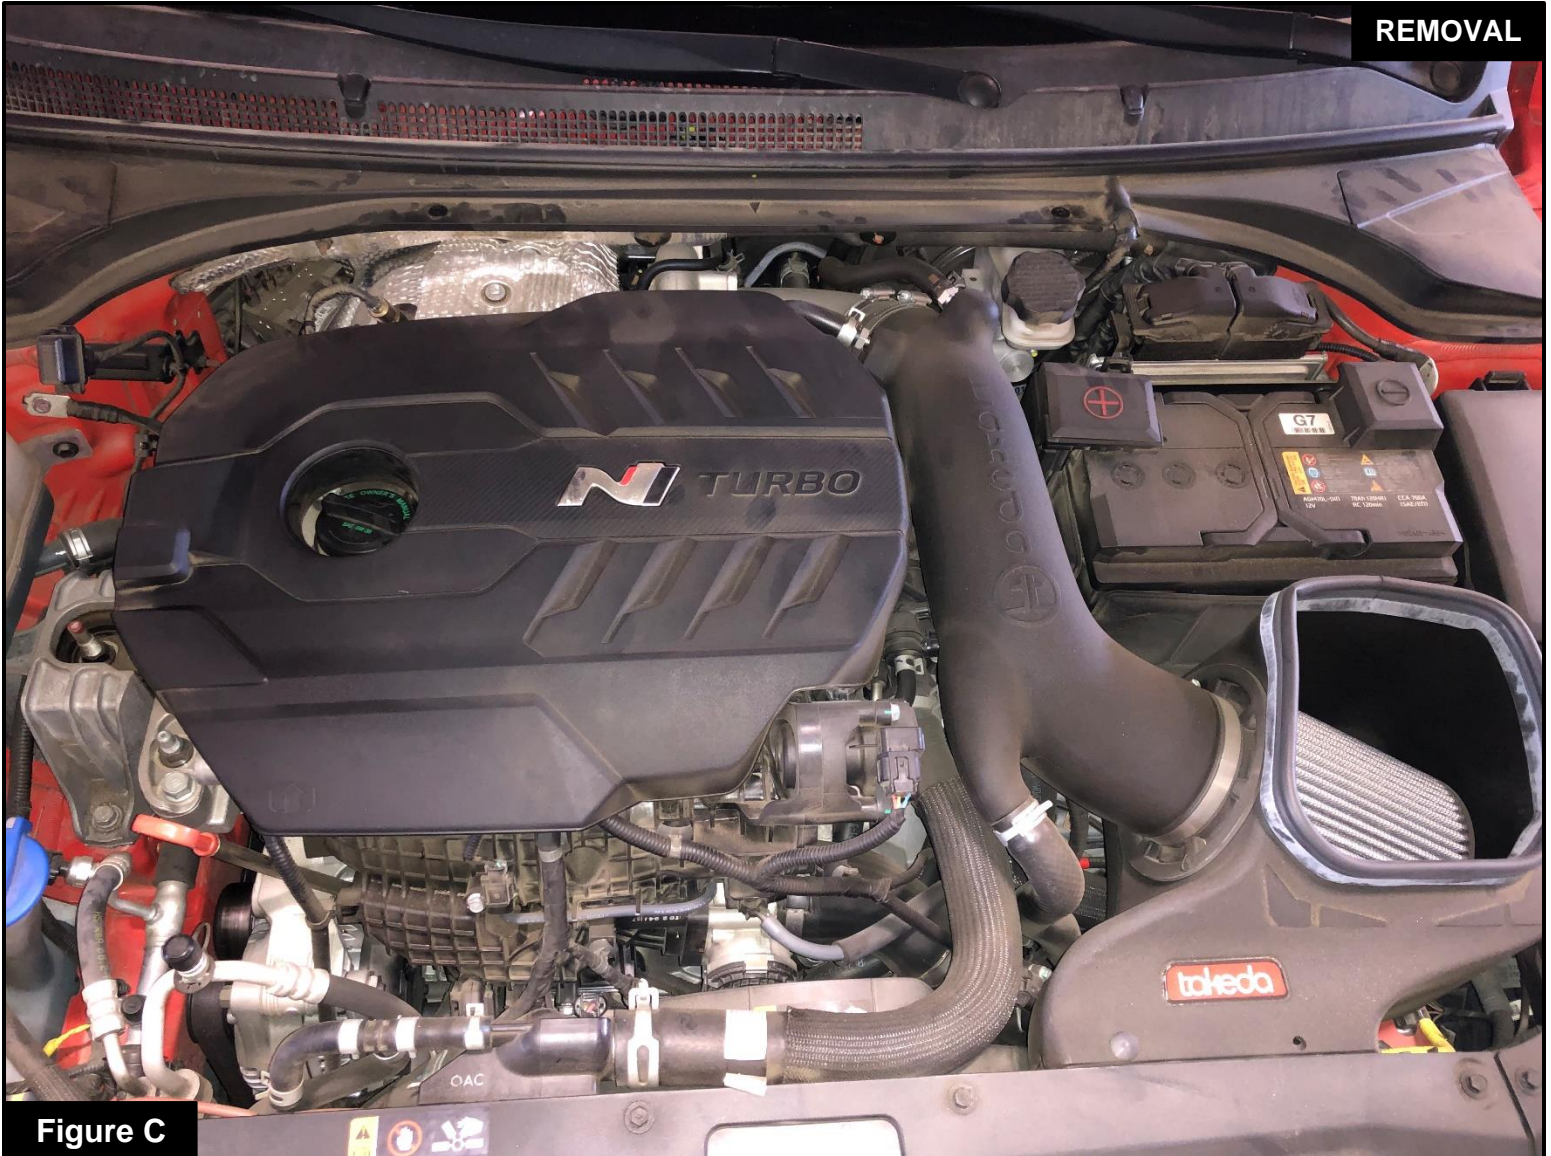**Figure C****Refer to Figure C for Steps 3-4**

Step 3: Remove the engine cover to gain access to the MAP sensor.

Step 4: Remove the air intake housing to gain access to the T-MAP sensor.

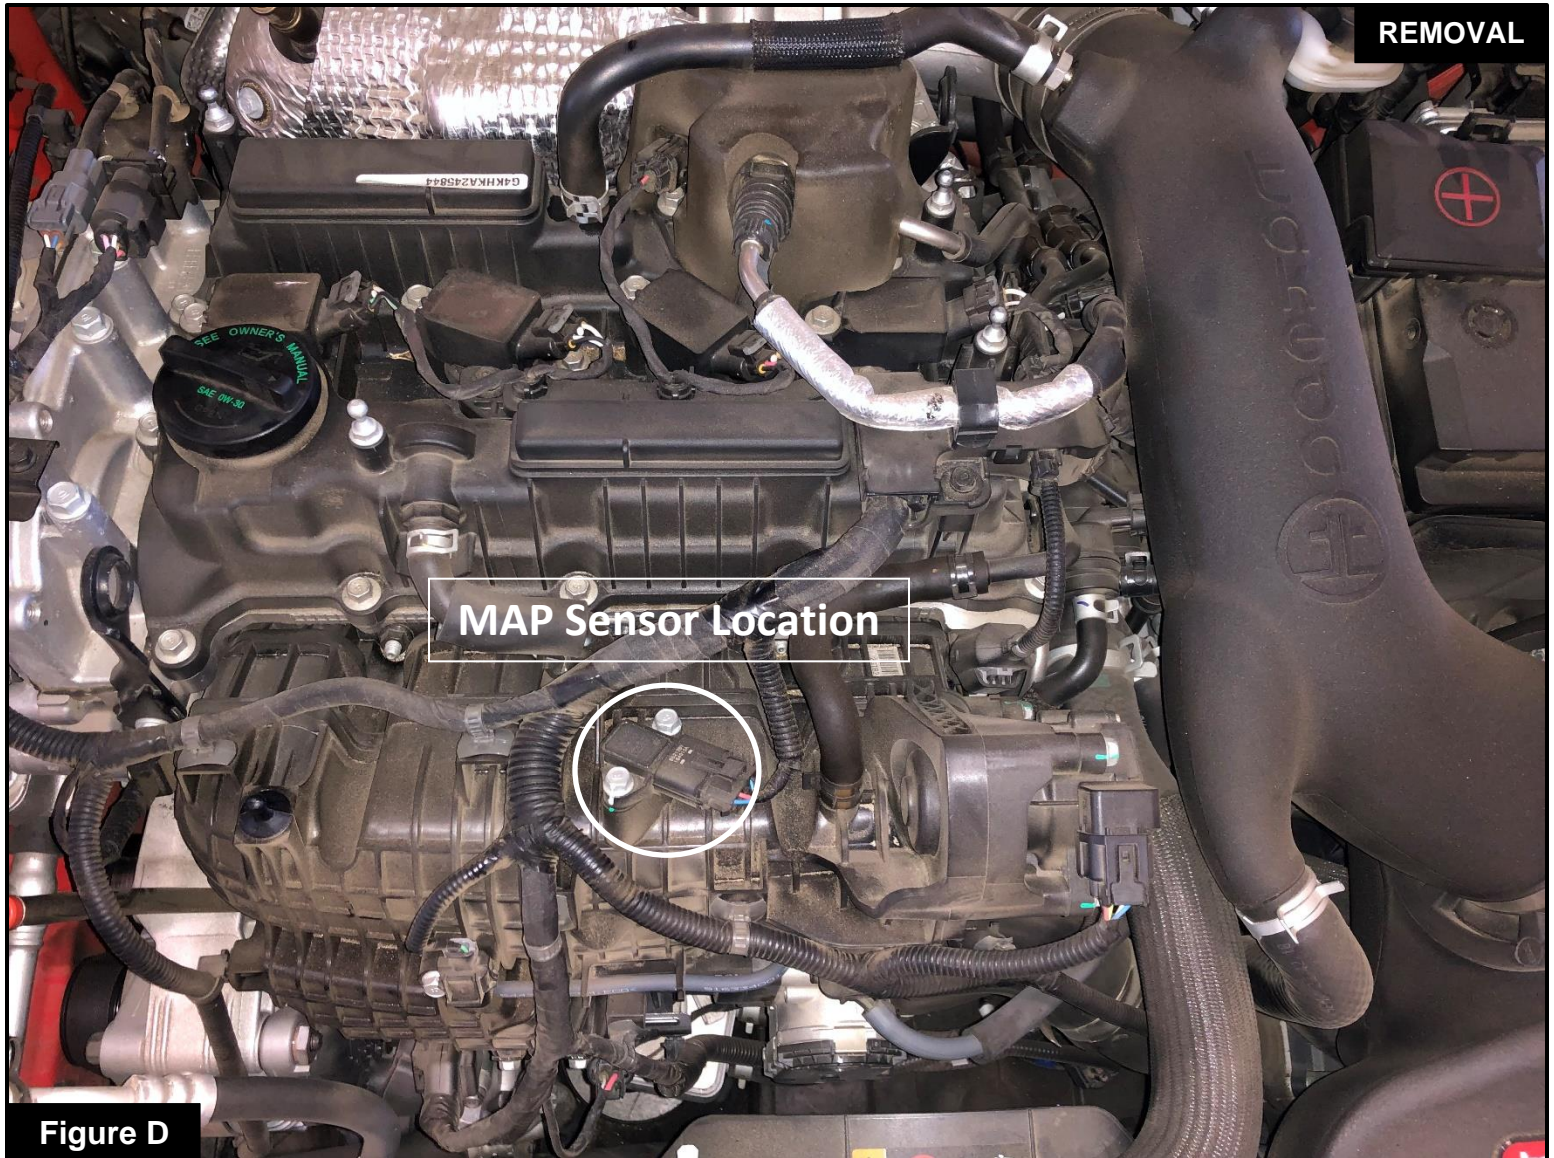


Figure D

Refer to Figure D for Steps 5-6

Step 5: Locate the MAP sensor. The MAP sensor is on top of the intake manifold.

Step 6: Disconnect the MAP sensor by pressing down on the connector and sliding it out of the sensor.

**MAP Sensor Connectors****Figure E****Refer to Figure E for Steps 7-10**

Step 7: Locate the MAP sensor jumper harness on the aFe POWER harness. It is labeled "MAP".

Step 8: Plug the female connector of the aFe POWER harness to the MAP sensor, then take the male connector of the aFe POWER harness and connect it to the female connector of the engine harness.

Step 9: Check with the picture to make sure the connectors are fully seated.

Step 10: Reinstall the Engine Cover

 **Make sure that the connections are fully engaged and not reversed. Usually, connectors make a snapping sound when fully engaged.**

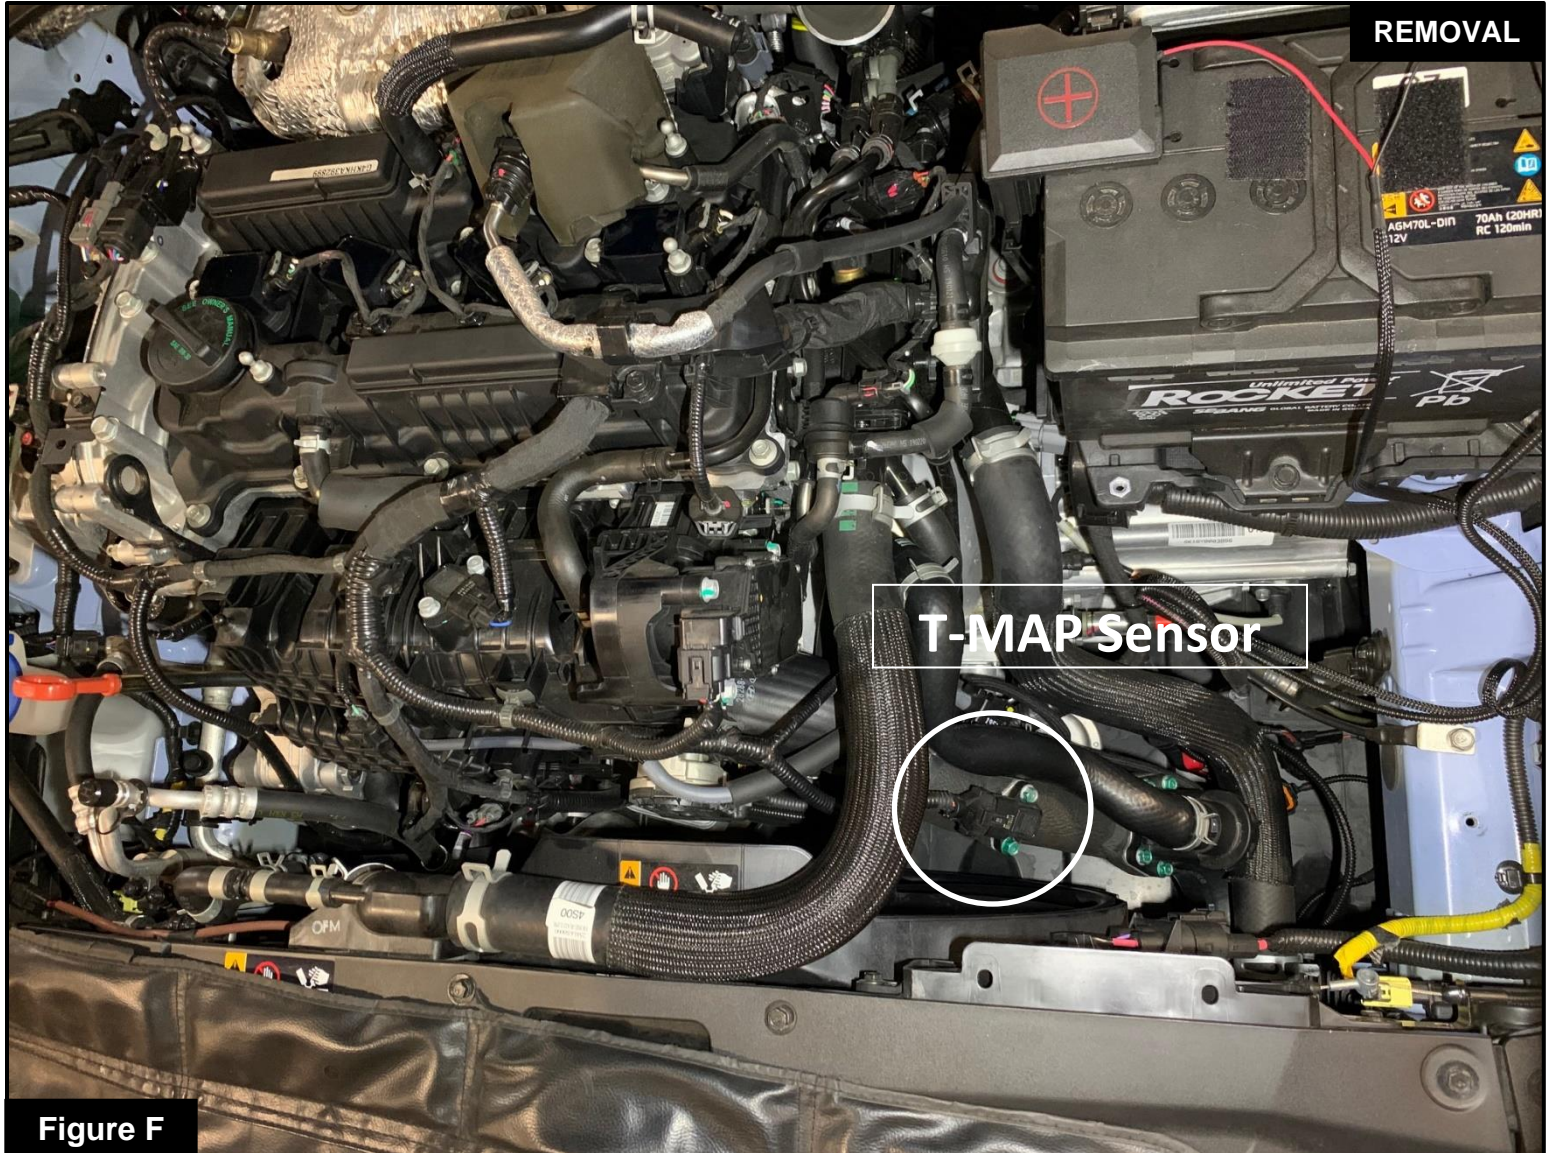


Figure F

Refer to Figure F for Steps 11-12

Step 11: Locate the T-MAP sensor on the charge pipe.

Step 12: Disconnect the T-MAP sensor by pressing down on the connector and sliding it out of the sensor.

T-MAP Sensor Connectors

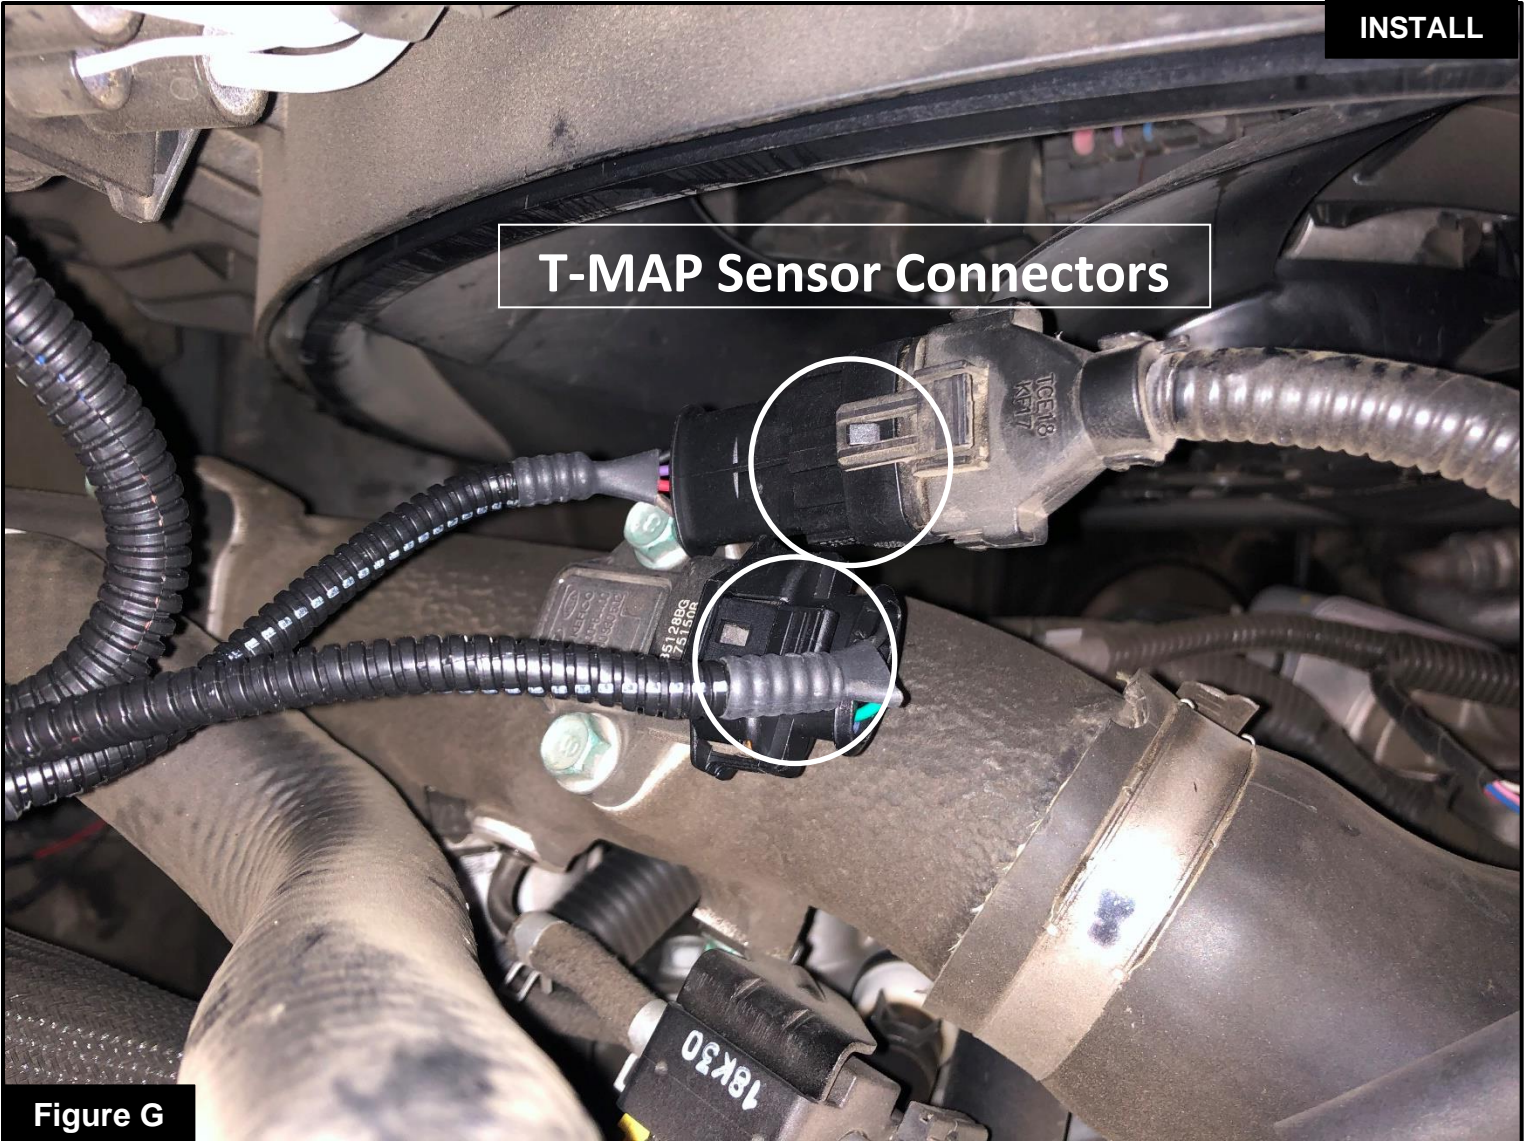
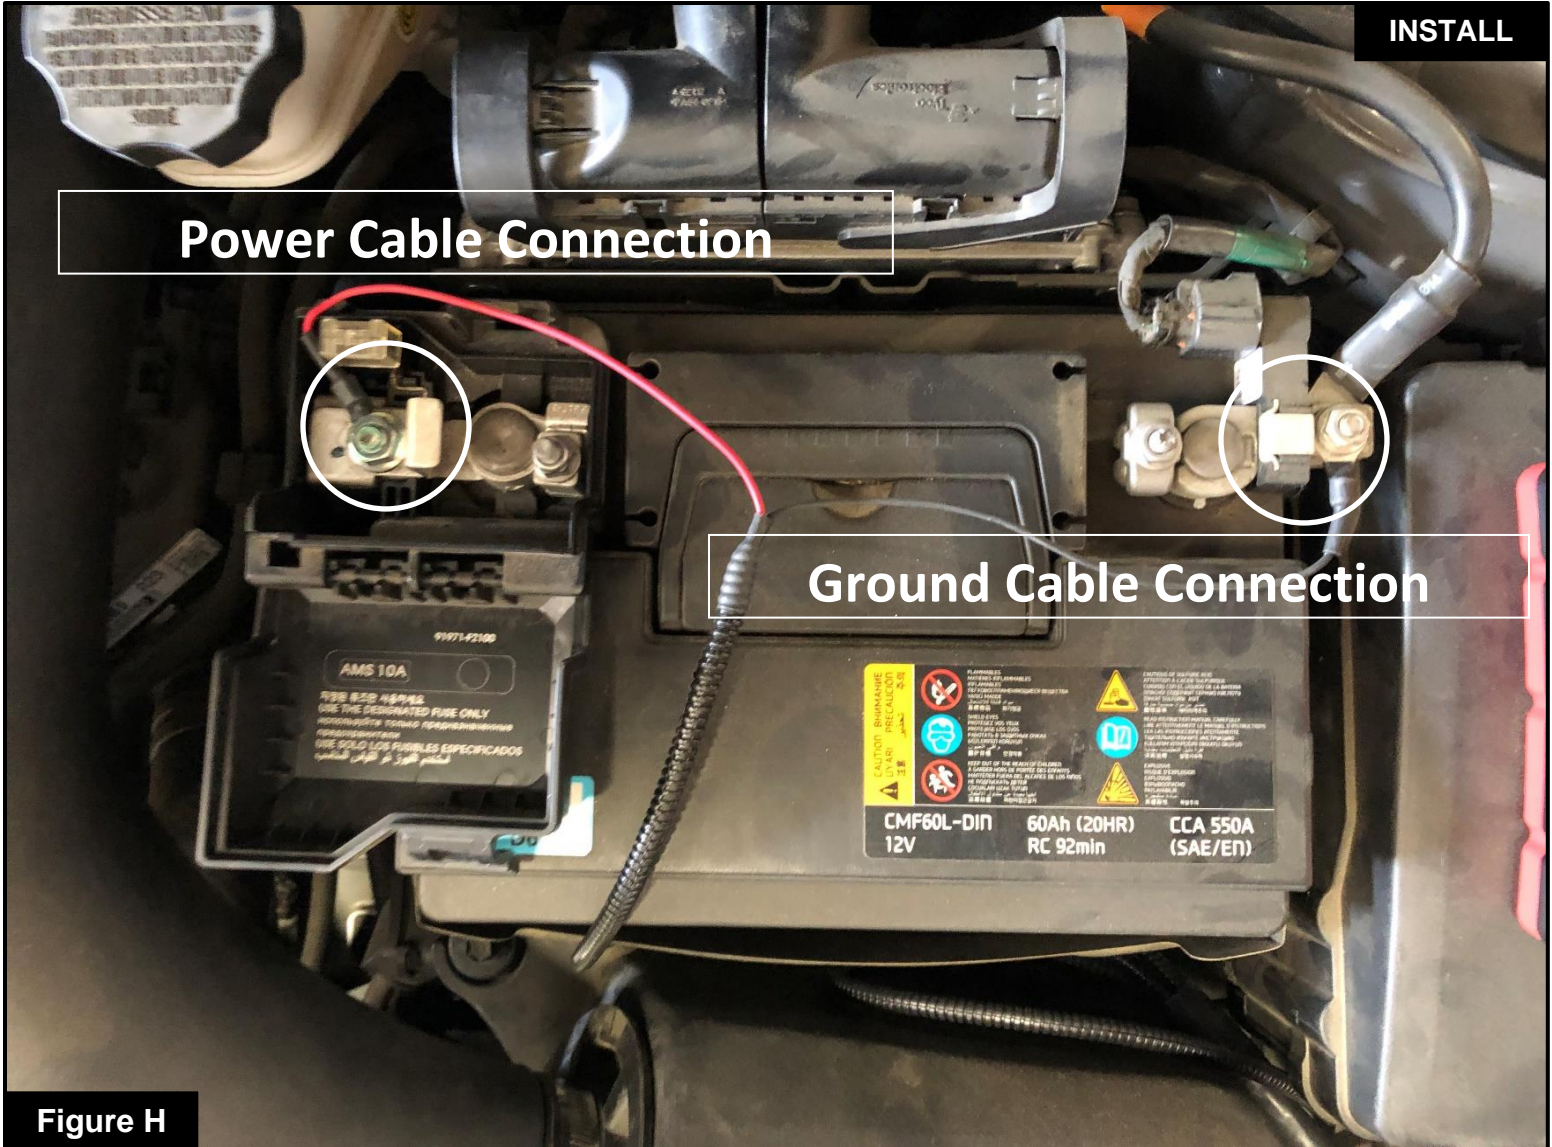


Figure G

Refer to Figure G for Steps 13-17

- Step 13: Locate the T-MAP sensor jumper harness on the aFe POWER harness. It is labeled "T-MAP".
- Step 14: Plug the female connector of the aFe POWER harness to the T-MAP sensor, then take the male connector of the aFe POWER harness and connect it to the female connector of the engine harness.
- Step 15: Check with the picture to make sure the connectors are fully seated.
- Step 16: Use a zip tie to secure the wires away from the radiator cooling fan, as loose wires hitting the fan will cause damage to the module and also the fan.
- Step 17: Reinstall the air intake housing.


 **Make sure that the connections are fully engaged and not reversed. Usually, connectors make a snapping sound when fully engaged.**

Power Cable Connection
Ground Cable Connection

Figure H
Refer to Figure H for Steps 18-20

Step 18: Locate the battery on the driver side of the engine bay.

Step 19: Connect the black ground terminal cable of the aFe POWER module harness to the negative battery terminal.

Step 20: Connect the red power terminal cable of the aFe POWER module harness to the positive battery terminal.

 **If the vehicle needs to be jump-started, the module will have to be disconnected from the harness, and the bypass plug installed in place of the module. This is to protect the Scorcher Blue module from any damage that may occur when jump-starting.**

**Figure I****Refer to Figure I for Steps 21-24**

- Step 21: Select a location to mount the Scorchers BLUE Power Module. We recommend that the module be mounted in a place that is dry, away from extreme heat and moving parts.
- Step 22: For our installation, we found the best location to be on top of the fuse box on the driver side of the engine bay. Secure the Scorchers BLUE module in this location using the supplied hook and loop.
- Step 23: Connect the aFe POWER harness to the Scorchers Blue module, making sure that the retaining tab clicks into place.
- Step 24: Route the harness wires and secure them using the included zip ties for a neat installation.

The doors can now be opened to install the LED Switch. (Optional if using the Bluetooth App.)

**Figure J****Refer to Figure J for Steps 25-27 (Optional)**

Step 25: Select the desired location for the LED switch. Route the cable on the back of the switch to exit towards the top or the bottom of the switch.

Step 26: Use the provided double sided tape to secure the LED switch in the desired location.

Step 27: Carefully route the switch cable behind the steering wheel cover or cabin trim cover.



Figure K

Refer to Figure K for Step 28 (Optional)

Step 28: Remove the four 10mm bolts securing the Transmission Control Unit under the dash, and lower the TCU to gain access to the firewall grommet. Do not unplug the TCU.

 **Note: This step is only specific to the vehicles that are equipped with an automatic transmission. The wiring of the switch cable will vary for vehicles with manual transmissions.**

**Figure L****Refer to Figure L for Steps 29-31 (Optional)**

Step 29: Locate the engine bay wiring access slot behind the TCU.

Step 30: Route the switch cable through the firewall and into the engine bay using this slot.

Step 31: Reinstall the TCU and make sure to tighten the four 10mm bolts.

**Figure M****Refer to Figure M for Steps 32-33 (Optional)**

Step 32: Plug the end of the LED switch cable to the aFe POWER harness inside the engine compartment.

Step 33: Secure all wires away from any extreme heat and moving parts with the provided zip ties. Make sure all connections are secured and fully engaged.

The installation of the module itself is now complete. Keep reading the installation instructions to learn how to use all of its features.



Figure N

Refer to Figure N (Picture is for reference)

The blue LED light will start flashing once the module is connected to the car and the ECU is on. The blue LED will become solid if the module gets connected through Bluetooth to a device




Figure O

Refer to Figure O (LED Switch)

When turning on the vehicle, each LED will flash, and it will stop at its last setting. The LED on the switch represents the different levels of power.

- Green LED: Stock
- Yellow LED: Sport
- Orange LED: Sport+
- Red LED: Race

Use the grey button to select the desired setting. Power adjustments can be done at any time while the unit is on. The LED switch can be used at the same time as the Bluetooth App.

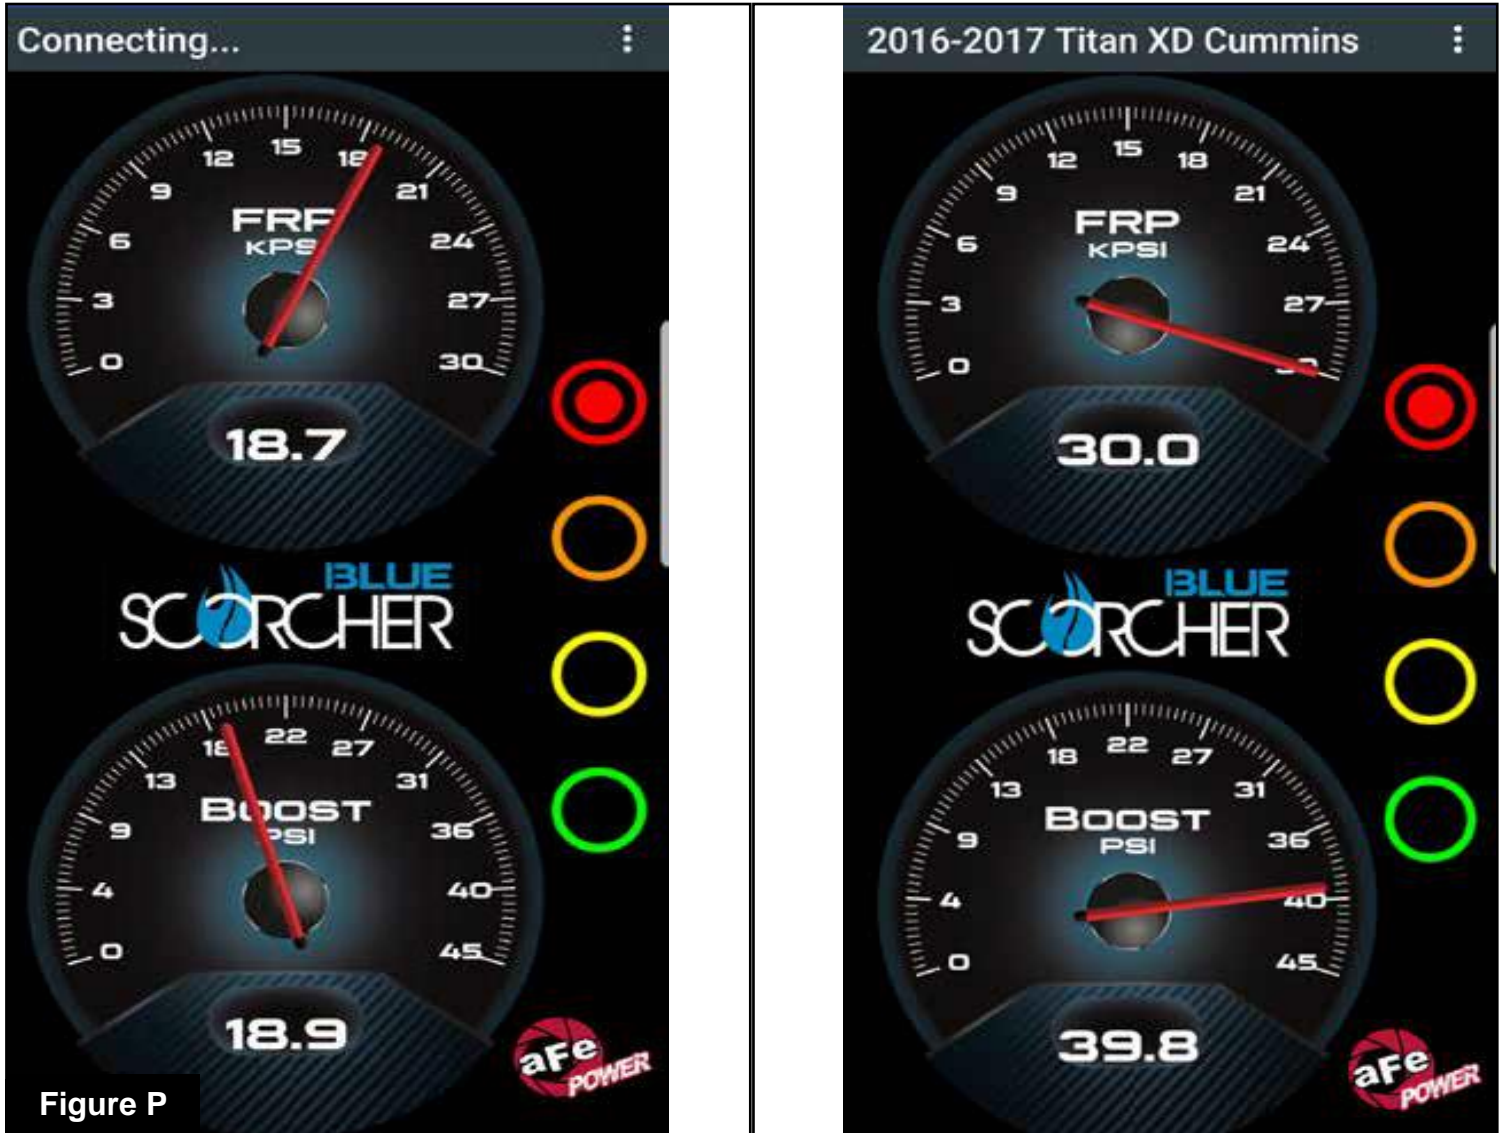

Refer to Figure P* (app connection-iOS)

For iOS devices, download the app from the apps store. Make sure the Bluetooth is activated on your device. Open the app and it will automatically connect through Bluetooth to the SCORCHER BLUE module when both the vehicle and module are on. When connected, the vehicle description will appear on top of the screen and the gauges will show current data.

The blue LED light on the module will become solid once connected to a Bluetooth device. Simply tap on the green, yellow, orange and red button to switch between the modes.

**Screen shots shown here are for example only. Actual screen display will vary depending on your vehicle.*

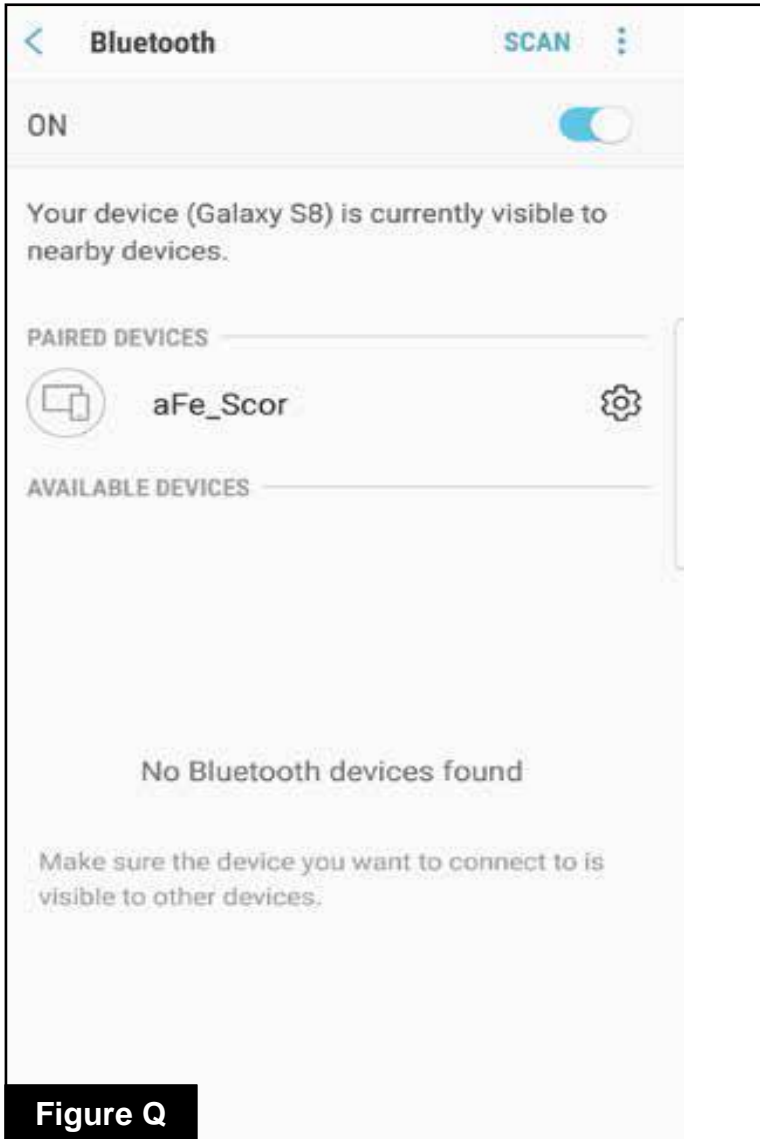



Figure Q

Refer to Figure Q* (app connection-Android)

For Android devices, download the app from the play store. For the initial connection, go to the Bluetooth settings of your device, turn on Bluetooth and scan for available devices. Select “aFe SCOR” and pair with device. The vehicle needs to be on and the module connected. Once shown as paired device, open the app on your device and it will automatically connect to the vehicle. The vehicle description will appear on top of the screen and the gauges will show current data.

The blue LED light on the module will become solid once connected to a Bluetooth device. Simply tap on the green, yellow, orange and red button to switch between the modes.

**Screen shots shown here are for example only. Actual screen display will vary depending on your vehicle.*

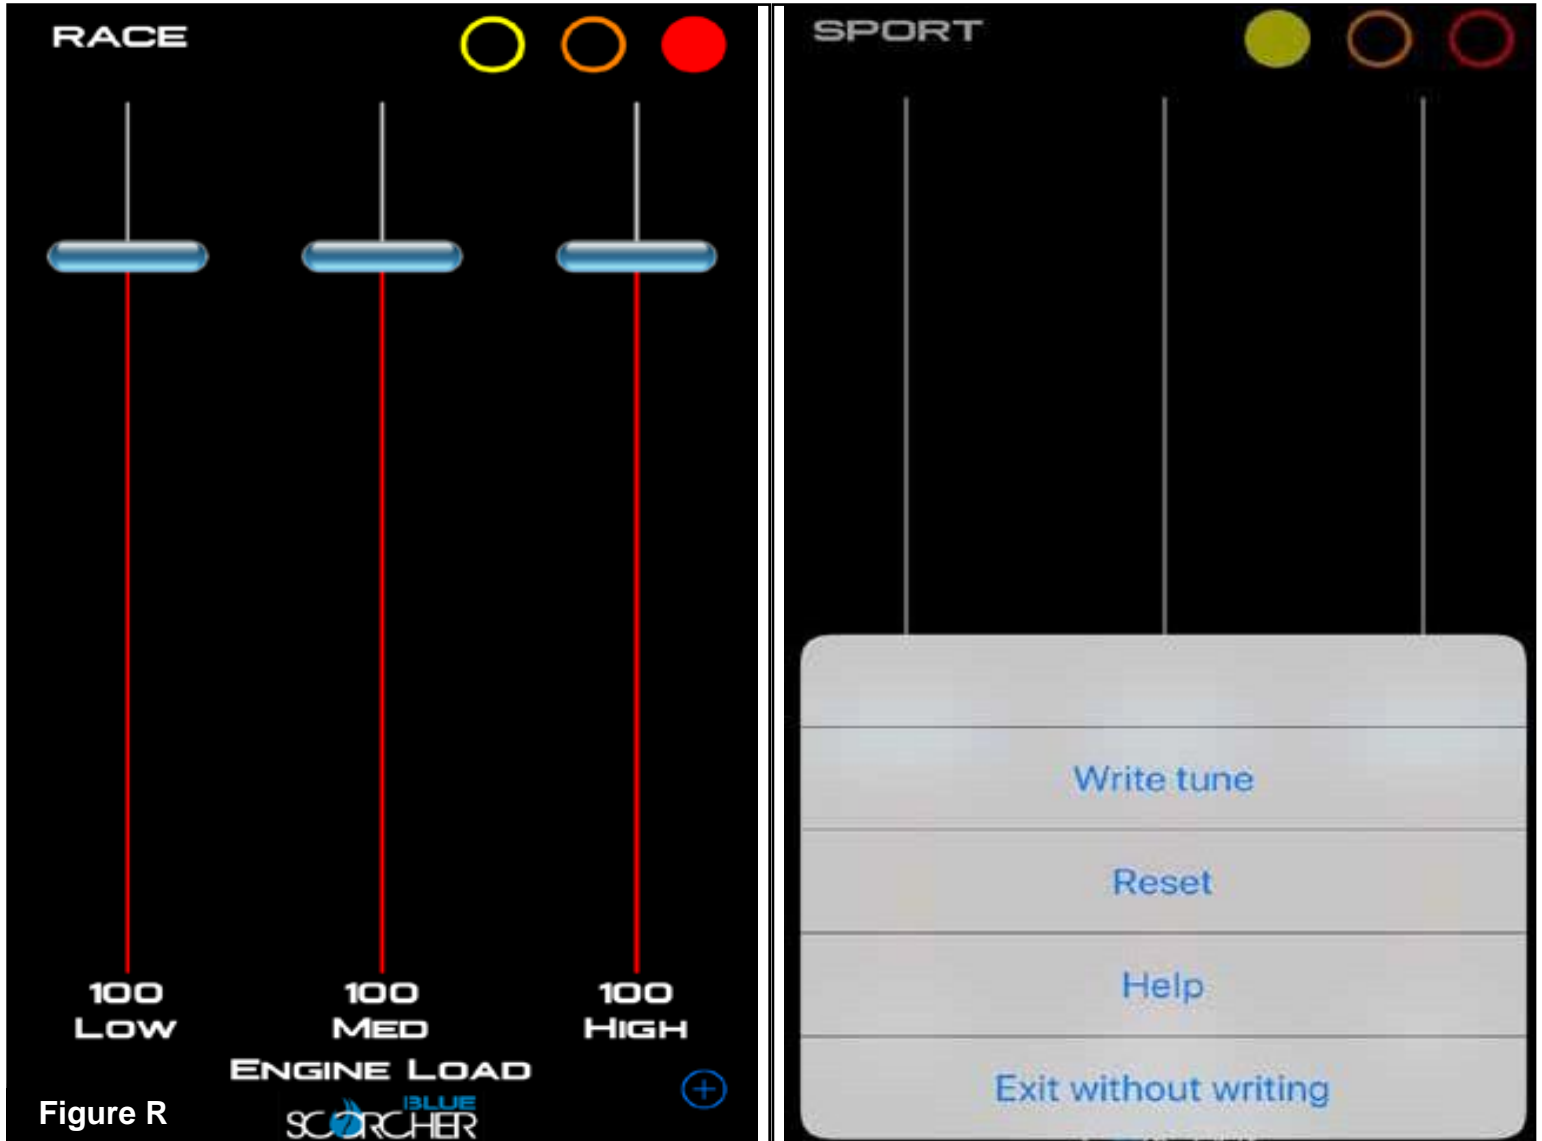

Refer to Figure R (Custom Tuning)

The aFe POWER SCORCHER BLUE app offers the capability to custom tune the different modes. Go to the menu on the top right corner and select “Tune”. Select the mode you would like to custom tune and adjust the sliders at low, medium, and high load. You can either write the tune, reset, or exit without writing.



Disclaimer: Custom tuning should only be performed with the ignition in the “run” position and engine off. Configuring the tunes outside the default values may cause drivability issues and /or check engine lights to occur.



Figure S

Refer to Figure S (Vehicle Performance Screen)

On the gauges screen, swipe to the left to get to the vehicle performance screen. When the vehicle is not moving, select the test you are wanting to attempt (0-60mph, ¼ mile or mile). The app will automatically detect the movement of the vehicle and the timer will start. Once you reach the speed or distance, the timer will stop. If you select a new mode, it will reset, and you can start again. If you need to stop the test at any point, hit the cancel button and leave the screen.


 Use the aFe POWER SCORCHER BLUE app responsibly. Always drive safely and obey traffic laws. aFe POWER is not responsible for any accidents, injuries, or property damage that may occur during its use.



Figure T

Refer to Figure T (Bypass Plug)

A bypass plug is included in the kit. The plug can be connected to the harness instead of the module. This bypass plug will need to be used when the vehicle needs to be jump-started, or when there is an issue with the drivability of the vehicle. Once the bypass plug is connected, the vehicle will run in factory settings. Make sure the plug is fully engaged when connected to the harness. Thank you for choosing aFe POWER!



The vehicle needs to be in sleep mode when the module gets disconnected and the bypass plug connected. Wait for the blue LED on the module to stop flashing to make sure the vehicle is in sleep mode.