12/28/2012

DO NOT EXCEED RECOMMENDED VEHICLE TOWING WEIGHT!

60635

94-01 DODGE 1/2 TON TRUCKS 94-02 DODGE 3/4 & 1 TON TRUCKS

WARNING!! BRAKE, FUEL, AND ELECTRICAL LINES MAY NEED TO BE LOOSENED OR REPOSITIONED TO PROVIDE CLEARANCE FOR NEW HARDWARE. ALL MODELS REQUIRE MODIFICATION OR REMOVAL OF HEAT SHIELDS. ON SHORT BED MODELS, CHECK FOR ADEQUATE TURNING CLEARANCE BETWEEN THE FRONT OF ALL TRAILERS AND THE TRUCK CAB.

> WARNING!! ON TWO WHEEL DRIVE TRUCKS A CLEARANCE CHECK MUST BE PERFORMED WHEN TRUCK IS LOADED AND UNLOADED TO VERIFY THE INVERTED BALL WILL NOT INTERFERE WITH THE TOP OF THE DIFFERENTIAL

BEFORE INSTALLING

INSTALLATION STEPS


An overhead lifting device, such as chain falls, engine hoist, or cable come-a-long, can be used to lift the center section of the hitch in place. Lower a loop of rope or chain through the hole in the truck bed floor and attach it to the round hitch receiver tube in the center section. Use the lifting device to raise the center section until the round hitch receiver tube that protrudes from the center section fits in the hole in the truck bed floor. Maintaining upward pressure may facilitate fastening the cross-member to the center section, especially if the truck bed floor has been distorted downward from heavy use. If you use an overhead-lifting device, it should be disconnected before squaring the center section across the frame, installing the sideplates and torquing fasteners.

- 1) Lower and remove spare tire.
- 2) On four wheel drive applications, remove plastic wheel well inserts(both sides).
- 3) Mark the location for the hole in the truck bed. Measure from the tail gate end of the truck bed, by hooking a tape measure over the back of the truck box and marking the correct location.(NOTE: DO NOT MEASURE FROM EDGE OF TAILGATE) Next, mark the center between the wheel wells. This marks the center point for the drill hole. This hole location is critical for the correct installation of this hitch. Measure, mark, and saw carefully. This location will put the ball 4"-5" in front of the axle.


Short Bed Installation44 3/8"Long Bed Installation48 3/8"

NOTE: If truck has a plastic bed liner, you may drill through both, but it is more difficult to accurately locate the midpoint between the wheel wells, and to keep the bed liner from moving while cutting the hole. Make a 4"(3 5/8" for C-630/C-640) hole at this location using a 4"(or 3 5/8") hole saw, or by making a 4"(or 3 5/8") circle and cutting it out with a saber saw equipped with a metal cutting blade.

4) Install the rear cross arm by sliding it between the truck bed and truck frame on the passenger side. Swing the driver's side into place as shown in FIGURE 1, then push the cross arm towards the back of truck.
(NOTE: HOLES IN THE CROSS ARM MUST BE FACING THE FRONT END OF THE TRUCK)

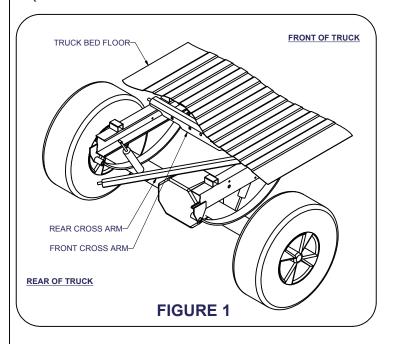



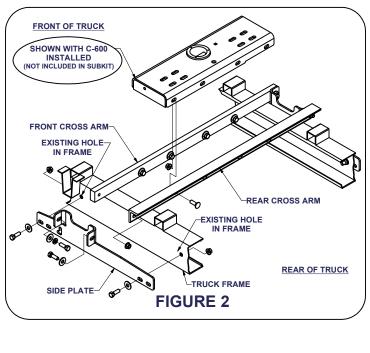

	600	25		94-01 DODGE 1/2 TON TRUCKS
	606	35		94-02 DODGE 3/4 &1 TON TRUCKS
<u>In</u>	stallati	on Steps C		ARNING!! BRAKE, FUEL, AND ELECTRICAL LINES MAY NEED TO BE LOOSENED OR REPOSITIONED TO PROVIDE CLEARANCE FOR NEW HARDWARE. ALL MODELS REQUIRE MODIFICATION OR REMOVAL OF HEAT SHIELDS. ON SHORT BED MODELS, CHECK FOR ADEQUATE TURNING CLEARANCE BETWEEN THE FRONT OF ALL TRAILERS AND THE TRUCK CAB.
				een the truck frame and truck bed above one of the rear tires. Slide through unt may be necessary to install the same as the rear cross arm as stated in step 4.
hitch bolts	n receive s, washe	er that protruders, and lock w	es from the top of vashers, attach the	the cross arms <u>with the ball cylinder towards the front of truck.</u> The round the center section must fit through the hole in the truck bed. Using (4) 1/2" e center section to the threaded holes in the front cross arm. Next, attach the ction using (4) 1/2" carriage bolts and flange nuts. (Finger tight only.)
insta	alling the	sideplates. 7	The tabs are locat	may be necessary to remove the metal tabs from the bed supports, prior to ed on the truck bed cross-member in the front part of the wheel opening. needed) away from the truck frame enough to fit the 1/4" sideplate behind them
front side	flange plate int	of the sideplat	e into the front cross arm. (As show	across the frame. Thread a 1 1/2" bolt with a flat and lock washer through the boss arm. Place a 1 1/2" bolt with a flat washer through the back flange of the n in Figure 2) Finger tight with a 1/2" flange nut.
				ch sideplate to the existing holes in the truck frame, and using a 1 1/2" bolt with le truck frame. (As shown in Figure 2) Finger tight with a 1/2" flange nut.
Firs Sec	st: Torq cond: T	ue the center orque the side	section to the from eplates to the truck	torque all fasteners to 110 ftlbs. in the following order: at and rear cross arms. k frame on both sides. front and rear cross arms.
์ 5" พ	vide. Th	en, a 6" wide		r side to get its position and then procede to cut the bed flange rail up 3/4" and ned up with the bed flange cut-out, must be cut into the plastic wheel well in dle rod.
	-		-	FRONT OF TRUCK
		Parts List		
		PART NUMBER	DESCRIPTION HEX FLANGE NUT	ALIGNMENT TABS
ITEN		IFN 1213		
ITEN 1 2	10 H	IFN 1213 /2 - 13 x 1 1/2	HEX BOLT	OUT OR CUT OFF) EXISTING HOLE
1	10 H 12 1 12 F			OUT OR CUT OFF)

EXISTING HOLE

REAR OF TRUCK

(REFER TO GOOSENECK HITCH INSTRUCTIONS FOR INSTALLATION AND OPERATING PROCEDURES)

Maintenance (Required every 30 days or prior to use)

- 1. Keep hitch ball lubricated regularly. Use silicone spray or equivalent to prevent wear and rust.
- 2. Keep hitch assembly free of dirt and other foreign debris.
- 3. Check for proper torque on all nuts and bolts before each use. Also check for excessive wear.
- 4. Check for ball wear before each use. (Note: Do not tow trailer with worn or damaged parts.)

Curt Manufacturing Inc., warrants this product to be free of defects in material or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warrant. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.

