

11458 INSTALLATION INSTRUCTIONS

Safety glasses should be worn at all times while installing this product.

YEARS: 2017-PRESENT

MAKE: CHEVROLET

MODEL: CRUZE

STYLE: HATCHBACK



RATCHET

PLIERS

SAFETY GLASSES WARNING: NEVER EXCEED YOUR VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY

WEIGHT CARRYING:

TRAILER WEIGHT: 2,000 LBS. TONGUE WEIGHT: 200 LBS.

13mm

11/16"

SOCKET

TORQUE

WRENCH

WARNING

WE RECOMMEND THE USE OF 18050 STABILIZING STRAPS FOR ALL NON-TRAILER

PRO INSTALL TIME: 30 MIN. NOVICE INSTALL TIME: 60 MIN.

INSTALLATION REQUIRES:

IF YOU ARE HESITANT TO UNDERTAKE THIS TASK ON YOUR OWN, CONTACT AN AUTHORIZED CURT INSTALLER FOR ADDITIONAL ASSISTANCE.

6"

SOCKET

EXTENSION

AVIATION


SHEARS

INSTALLATION TIPS:

- 1. BEFORE YOU BEGIN INSTALLATION, READ ALL INSTRUCTIONS THOROUGHLY.
- 2. TO EASE INSTALLATION, 2 PEOPLE MAY BE REQUIRED.
- 3. USING PROPER TOOLS WILL GREATLY IMPROVE THE QUALITY OF THE INSTALL AND REDUCE THE TIME REQUIRED.


EASY MODERATE CHALLENGING HEAT SHIELD TRIMMING NO DRILLING TEMPORARILY LOWER EXHAUST

VEHICLE PHOTO: REPRESENTATIVE PHOTO

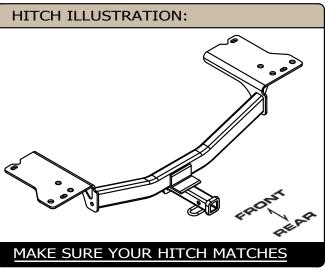

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE ALL FASTENERS ARE TIGHT AND ALL STRUCTURAL COMPONENTS ARE SOUND

INSTALLATION WALKTHROUGH:

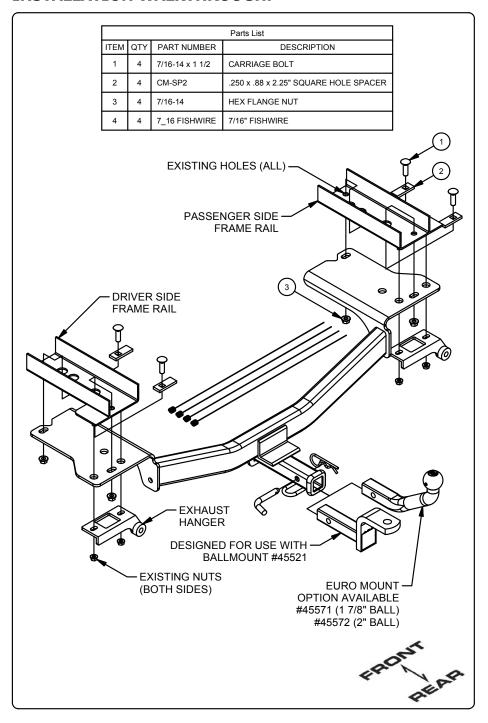


1. Lower exhaust by using a 13mm socket to remove (2) nuts from each exhaust hanger. There is a plastic clip on the exhaust hanger that needs to be pushed out of the way to allow the exhaust to be lowered.





2. Temporarily remove the heat shield using a needle nose pliers to remove the (6) retention nuts. Trim heat shield following contours as shown removing a 3" x 3" square using Trim Diagram below as reference.



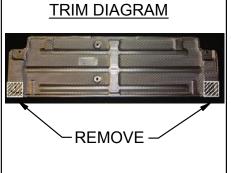

INSTALLATION WALKTHROUGH:

3. Fishwire (2) 7/16 bolts and spacers into the holes in each frame rail as shown. Reinstall heat shield removed in Step 2 attaching only the center retention nuts.





4. Raise hitch into position over exhaust and secure with 7/16" flange nuts. Torque 7/16" bolts to 59 ft-lbs. Reinstall exhaust using nuts removed in Step 1.





TOWING SAFETY INFORMATION


Gross Trailer Weight / GTW

The Gross Trailer Weight is the weight of the trailer & cargo. Measure this by putting the fully loaded trailer on a vehicle scale.



Tongue Weight / TW

The downward force that is exerted on the hitch ball by the coupler. The tongue weight will vary depending on where the load is positioned in relationship to the trailer axle(s). To measure the tongue weight, use either a commercial scale or a bathroom scale with the coupler at towing height. When using a bathroom scale with heavier tongue weights, use the method shown and multiply the scale reading by 3.

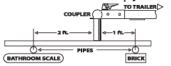

Weight Carrying / WC

The total weight of both the trailer and the cargo inside. Never exceed the weight capacity of your trailer hitch.

Weight Distribution / WD

Used to balance the weight of the cargo between the front and rear wheels throughout the trailer, allowing for better steering, braking, and level riding.






Sway Control

A device used to reduce the lateral movements of the trailer that are caused by the wind. This works in conjunction with a weight distribution hitch. Do not use this on a class 1 or 2 hitch, or with surge brakes.


How Much Can You Safely Tow?

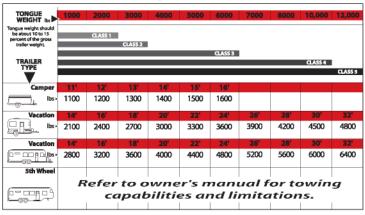

Ball Mount

The ball mount is placed inside the opening of the receiver hitch which is mounted to the vehicle. Make sure a hitch pin and clip is properly securing the ball mount to the receiver hitch before you begin towing.

A: Rise. B: Drop. C: Hole Size. D: Length.

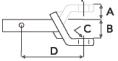


Trailer Ball

The connection from the hitch to the trailer. There are many factors that determine the correct hitch ball:

- Number one is the hitch ball's gross trailer weightrating.
- The mounting platform must be at least 3/8" thick.
- The hole diameter must not be more than 1/16" larger than the threaded shank.
- · Every time you tow, check the nut and lock washer to make sure they are fastened securely.

 • A: Ball Dia. B: Shank Dia. C: Shank Length. D: Shank Rise.

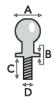

Coupler

The component that is placed over the trailer ball to connect the vehicle to the trailer. Be sure that the coupler size matches the size of the hitch ball and that the coupler handle is securely fastened. To determine what size hitch ball you need for your application you will need to know the size of coupler that is on the trailer. Be sure your coupler is properly adjusted to the ball you are using.

NOTE: For added security the use of safety devices such as Coupler Safety Pins and Locks is strongly recommended.

Safety Chains

Safety chains are a requirement and should be crossed under the tongue of the trailer so that the tongue will not drop to the road if it becomes separated from the hitch. Always leave enough slack so you can turn. Never allow the safety chains to drag on the ground and never attach the chains to the bumper.

Trailer Classification: Safety Chain Breaking Force - Minimum

Class 1: 2,000 lbs. (8.9 kN) Class 2: 3,500 lbs. (15.6 kN) Class 3: 5,000 lbs. (22.2 kN)

The strength rating of each length of safety chain or its equivalent and its attachments shall be equal to or exceed in minimum breaking force the GVWR (Gross Vehicle Weight Rating) of the trailer.

Electrical

Trailer lights, Electric Brakes, Break-away systems - Every time you tow, be sure to check that all components are working properly.

Wiring identification by color:



11458

CHEVROLET CRUZE HATCHBACK

10/31/2016

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS. TRAILER WEIGHT & 200 LBS. TONGUE WEIGHT.

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.



WARNING: ** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY **
WARNING: *** DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY



$\overline{}$								
		Darta Liat		1				
ITEM	QTY PART NUMBER	Parts List DESCRIF	DTION				М	
1	4 7/16-14 x 1 1/2	CARRIAGE BOLT	HON		NGER SIDE		ĭ	(1)
2	4 CM-SP2	.250 x .88 x 2.25" SQUA	VDE HOLE SDACED		FRAME RAIL		≫ ⟨	>
3	4 7/16-14	HEX FLANGE NUT	AND HOLE SI ACEN				Q (\bigcup_{2}
4	1	7/16" FISHWIRE						
						V 16	$\mathbb{Z}[\mathbb{Z}]$	
HITCI AND END THRE TO KI BOLT FISHI BOLT AND USE HITCI SPACE	FISHWIRE TE RT COILED END OF FISHWIR H MOUNTING HOLE IN VEHIC OUT THE ACCESS HOLE. PA FOR FISHWIRE THROUGH SP, AD BOLT INTO COIL. KINK V EEP SPACER SEPARATE FR AS SHOWN. PULL WIRE. SPACER, AND THROUGH FRAME OUT THROUGH FRAME FISHWIRE TO GUIDE H DURING MOUNTING AND FER INSIDE FRAME RAIL. NOTE: SOME VEHICLES MAY FISHWIR	E TOOL THROUGH LEF FRAME RAIL USS COILED ACCER AND WIRE OM MOUNTING HOLE REVENT LOSS OF BOLT /	RATI 6" SOCKET 13mm & 11/1 NEEDLE NO AVIATION TORQUE	EEQUIRED CHET EXTENSION 6" SOCKETS OSE PLIERS VISHEARS WRENCH GLASSES				EXISTING HOLES (ALL) 3 EXHAUST HANGER
	DRIVER SIDE / FRAME RAIL							XISTING NUTS OTH SIDES) -EURO MOUNT OPTION AVAILABLE #45571 (1 7/8" BALL)
				DESIGNED FOR U BALLMOUN				#45572 (2" BALL)
IN.	TCH WEIGHT: 28 LBS STALL TIME PROFESSIONAL: 30 M NOVICE (DIY): 60 MIN STALL NOTES: NO DRILLING HEAT SHIELD TRIMMIN	UINUTES UITES	<u>TR</u>	RIM DIAGRAM		REMOVE (BOTH SIDI		ACRY

INSTALLATION STEPS

- 1. Lower exhaust by using a 13mm socket to remove (2) nuts from each exhaust hanger. There is a plastic clip on the exhaust hanger that needs to be pushed out of the way to allow the exhaust to be lowered.
- 2. Temporarily remove the heat shield using a needle nose pliers to remove the (6) retention nuts. Trim heat shield following contours as shown removing a 3" x 3" square using Trim Diagram as reference.
- 3. Fishwire (2) 7/16 bolts and spacers into the holes in each frame rail as shown above. Reinstall heat shield removed in Step 2 attaching only the center retention nuts.
- 4. Raise hitch into position over exhaust and secure with 7/16" flange nuts. Torque 7/16" bolts to 59 ft-lbs.
- 5. Reinstall exhaust using nuts removed in Step 1.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

CURT Manufacturing LLC., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, CURT Manufacturing LLC., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. CURT Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excluded islability for incidental or consequential loss or damage.