

#### 13343 **INSTALLATION INSTRUCTIONS**

Safety glasses should be worn at all times while installing this product.

**STYLE: VAN** 

**YEARS: 2011-PRESENT** 

**MAKE: TOYOTA** 

**MODEL: SIENNA** 



WARNING: NEVER EXCEED YOUR VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY

**WEIGHT CARRYING:** 

TRAILER WEIGHT: 3,500 LBS. **TONGUE WEIGHT:** 525 LBS.

PRO INSTALL TIME: 60 MIN. NOVICE INSTALL TIME: 120 MIN.

IF YOU ARE HESITANT TO UNDERTAKE THIS TASK ON YOUR OWN, CONTACT AN AUTHORIZED CURT INSTALLER FOR ADDITIONAL ASSISTANCE.


# **INSTALLATION REQUIRES:**




# **INSTALLATION TIPS:**

- 1. BEFORE YOU BEGIN INSTALLATION, READ ALL INSTRUCTIONS THOROUGHLY.
- 2. TO EASE INSTALLATION, 2 PEOPLE MAY BE REQUIRED.
- 3. USING PROPER TOOLS WILL GREATLY IMPROVE THE QUALITY OF THE INSTALL AND REDUCE THE TIME REQUIRED.

#### LEVEL OF DIFFICULTY: **MODERATE**

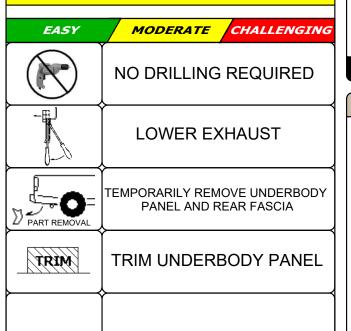


# **VEHICLE PHOTO:**

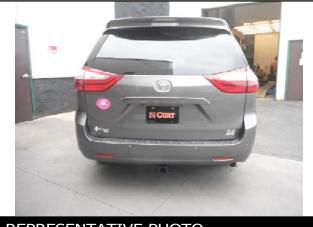

REPRESENTATIVE PHOTO

### HITCH ILLUSTRATION:

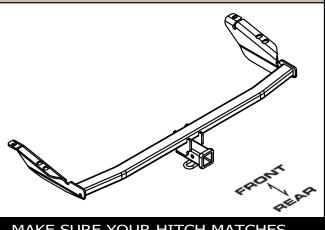

MAKE SURE YOUR HITCH MATCHES

1. Remove underbody panel, if present by removing (5) screws with a 10 mm socket, 4 plastic screws with a philips head screwdriver and 8 plastic push pins with a flat head screwdriver.





Lower exhaust by disconnecting (1) rubber isolator. (See Rubber Isolator Removal Diagram)





3. Remove (1) plugs and (2) pieces of tape covering exisiting weldnuts on each side of vehicle. (See Weldnut Cleaning diagram)





4. Open rear hatch of vehicle and remove (1) plastic rivet and (2) screws per each side of vehicle that are attaching the rear fascia.





5. Remove (1) screw per each side of vehicle inside of rear wheel well that are attaching the rear fascia to the vehicle side panels.





6. Remove (2) plastic clips on passenger side and (1) on driver side at bottom edge of fascia near wheel well.





7. Pull rear wheel well panel (both sides) away from rear fascia by unclipping the tab. Disconnect backup sensor connectors as needed. Gently remove fascia from vehicle and set aside.






8. Raise hitch into position and install M12 bolts and 1/2" conical toothed washers as shown.

Torque M12 hardware to 86 lb-ft.



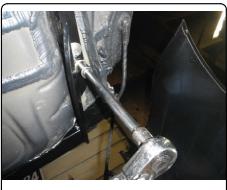


9. Raise exhaust back into position. Reinstall rear fascia in reverse order of removal from Steps 4-7.





10. Mark underbody panel for trimming as shown below.

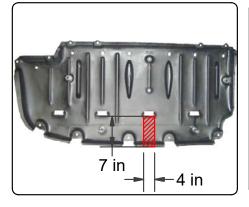



11. Trim underbody panel and reinstall in reverse order from Step 1.





#### TOWING SAFETY INFORMATION


### Gross Trailer Weight / GTW

The Gross Trailer Weight is the weight of the trailer & cargo. Measure this by putting the fully loaded trailer on a vehicle scale.



# Tongue Weight / TW

The downward force that is exerted on the hitch ball by the coupler. The tongue weight will vary depending on where the load is positioned in relationship to the trailer axle(s). To measure the tongue weight, use either a commercial scale or a bathroom scale with the coupler at towing height. When using a bathroom scale with heavier tongue weights, use the method shown and multiply the scale reading by 3.

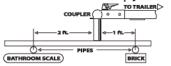

# Weight Carrying / WC

The total weight of both the trailer and the cargo inside. Never exceed the weight capacity of your trailer hitch.

### Weight Distribution / WD

Used to balance the weight of the cargo between the front and rear wheels throughout the trailer, allowing for better steering, braking, and level riding.






# Sway Control

A device used to reduce the lateral movements of the trailer that are caused by the wind. This works in conjunction with a weight distribution hitch. Do not use this on a class 1 or 2 hitch, or with surge brakes.


# How Much Can You Safely Tow?

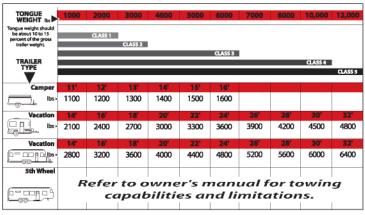

### **Ball Mount**

The ball mount is placed inside the opening of the receiver hitch which is mounted to the vehicle. Make sure a hitch pin and clip is properly securing the ball mount to the receiver hitch before you begin towing.

A: Rise. B: Drop. C: Hole Size. D: Length.

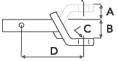


#### Trailer Ball

The connection from the hitch to the trailer. There are many factors that determine the correct hitch ball:

- Number one is the hitch ball's gross trailer weightrating.
- The mounting platform must be at least 3/8" thick.
- The hole diameter must not be more than 1/16" larger than the threaded shank.
- · Every time you tow, check the nut and lock washer to make sure they are fastened securely.

  • A: Ball Dia. B: Shank Dia. C: Shank Length. D: Shank Rise.



### Coupler

The component that is placed over the trailer ball to connect the vehicle to the trailer. Be sure that the coupler size matches the size of the hitch ball and that the coupler handle is securely fastened. To determine what size hitch ball you need for your application you will need to know the size of coupler that is on the trailer. Be sure your coupler is properly adjusted to the ball you are using.

NOTE: For added security the use of safety devices such as Coupler Safety Pins and Locks is strongly recommended.

# Safety Chains

Safety chains are a requirement and should be crossed under the tongue of the trailer so that the tongue will not drop to the road if it becomes separated from the hitch. Always leave enough slack so you can turn. Never allow the safety chains to drag on the ground and never attach the chains to the bumper.

Trailer Classification: Safety Chain Breaking Force - Minimum

Class 1: 2,000 lbs. (8.9 kN) Class 2: 3,500 lbs. (15.6 kN) Class 3: 5,000 lbs. (22.2 kN)

The strength rating of each length of safety chain or its equivalent and its attachments shall be equal to or exceed in minimum breaking force the GVWR (Gross Vehicle Weight Rating) of the trailer.

#### Electrical

Trailer lights, Electric Brakes, Break-away systems - Every time you tow, be sure to check that all components are working properly.

Wiring identification by color:



# **TOYOTA SIENNA**

PAGE 1 of 2

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 3,500 LBS. TRAILER WEIGHT & 525 LBS. TONGUE WEIGHT. WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.



Parts List

WARNING: \*\* FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY \*\*

WARNING: \*\*\* DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY \*\*\*

*	PS)

ITEM QTY PART NUMBER	DESCRIPTION					
1 6 M12 - 1.25 x 40 HEX	HEX BOLT					
2 6 1/2 CONICAL TOOTHED WASHER	WASHER, CONICAL, TOOTHED, 1/2"					
		1	<u> </u>	PASSENGER SIDE		
RUBBER ISOLATOR REMOVAL DIAGRAM  This technique can be used if an Exhaust Hanger Removal Pliers is not available.  Using a 5/8" open end wrench, slide the wrench up to the rubber isolator, cradling the hanger rod as shown. Next place the flat edge of a pry bar between the wrench and the hanger stop or hanger rod. Then simply rotate the pry bar toward the wrench to remove the rubber isolator.  Note: Using a spray lubricant or soapy water on the hanger rod and the rubber isolator helps removal.	CONICAL TOOTHED ORIENTATION IN VEHICLE FRAME CONICAL TOOTHED WASHER	HITCH SIDE		PASSENGER SIDE FRAME RAIL		
DDIV/CD	SIDE		<b>₩</b> 6			
DRIVER SIDE						
FRAME RAIL						
	EXISTING WELDNUTS					
	(BOTH SIDES)					
	<b>S</b>					
	1					
			_			
			์ โ			
			J)			
		-				
			TOC	DLS REQUIRED		
A T			FLATHE	RATCHET AD SCREWDRIVER		
<b>⊌</b> ∱			PHILIPS F	IEAD SCREWDRIVER		
			6" SO	CKET EXTENSION		
				RQUE WRENCH		
				OTARY TOOL		
			TA	PE MEASURE		
HITCH WEIGHT: 40 LBS.			MASKIN	IG TAPE / MARKER		
INSTALL TIME			SAF	ETY GLASSES		
PROFESSIONAL: 60 MINUTES	X					

PROFESSIONAL: <u>60</u> MINUTES NOVICE (DIY): <u>120</u> MINUTES


#### INSTALL NOTES:

- NO DRILLING REQUIRED
- LOWER EXHAUST
- TEMPORARILY REMOVE UNDERBODY PANEL
- UNDERBODY PANEL TRIMMING
- REQUIRED
- TEMPORARILY REMOVE REAR FASCIA



FRONT

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

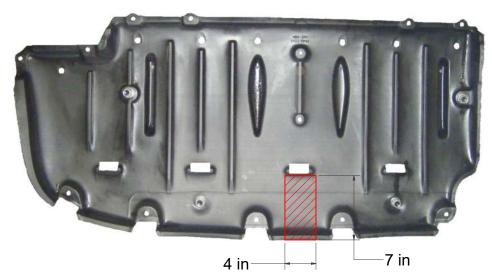

# **UNDERBODY PANEL TRIM DIAGRAM**

# **INSTALLATION STEPS**

- 1. Remove underbody panel, if present by removing (5) screws with a 10 mm socket, 4 plastic screws with a philips head screwdriver and 8 plastic push pins with a flat head screwdriver.
- 2. Lower exhaust by disconnecting (1) rubber isolator. (See Rubber Isolator Removal Diagram)
- 3. Remove (1) plugs and (2) pieces of tape covering exisiting weldnuts on each side of vehicle. (See Weldnut Cleaning diagram)
- 4. Open rear hatch of vehicle and remove (1) plastic rivet and (2) screws per each side of vehicle that are attaching the rear fascia.
- 5. Remove (1) screw per each side of vehicle inside of rear wheel well that are attaching the rear fascia to the vehicle side panels.
- 6. Remove (2) plastic clips on passenger side and (1) on driver side at bottom edge of fascia near wheel well.
- 7. Pull rear wheel well panel (both sides) away from rear fascia by unclipping the tab. Disconnect backup sensor connectors as needed. Gently remove fascia from vehicle and set aside.
- 8. Raise hitch into position and install M12 bolts and 1/2" conical toothed washers as shown.
- 9. Torque M12 hardware to 86 lb-ft.
- 10. Raise exhaust back into position.
- 11. Reinstall rear fascia in reverse order of removal from Steps 4-7.
- 12. Mark underbody panel for trimming as shown above.
- 13. Trim underbody panel and reinstall in reverse order from Step 1.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS
ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.