
11394 INSTALLATION INSTRUCTIONS

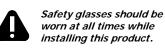


YEARS: 2014-PRESENT

MAKE: MITSUBISHI

MODEL: MIRAGE


STYLE: HATCHBACK

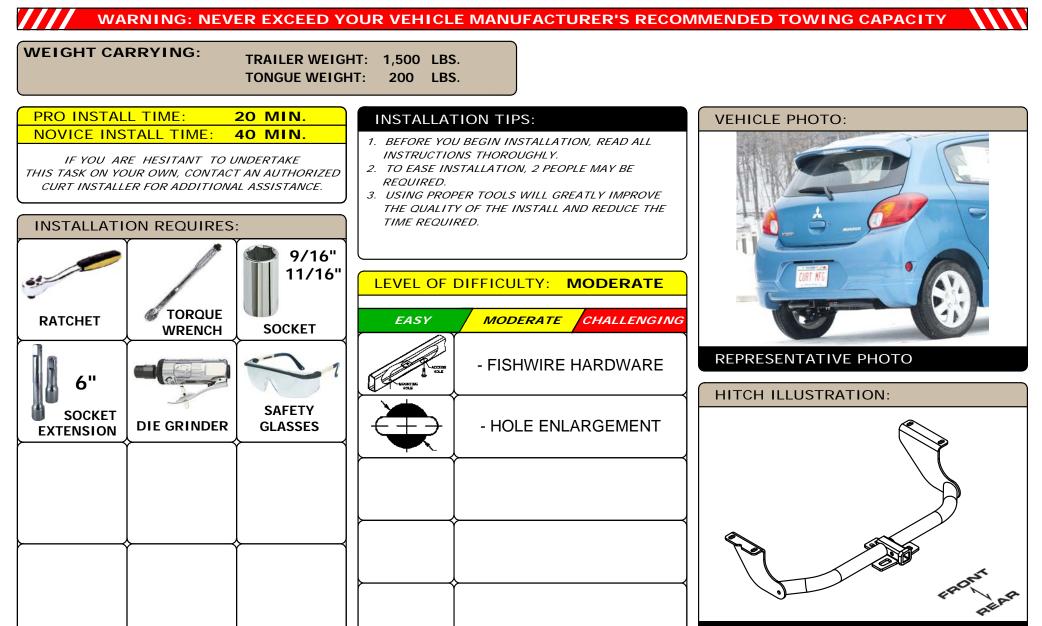

MAKE SURE YOUR HITCH MATCHES


INSTALLATION WALKTHROUGH:

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	3_8 - 16 x 1.00 x 1.88	U-BOLT
2	2	HFN3816	HEX FLANGE NUT
3	4	7/16-14	HEX FLANGE NUT
4	4	7/16-14 x 1 1/2	CARRIAGE BOLT
5	4	CM-SP2	.250 x .88 x 2.25" SQUARE HOLE SPACER
6	4	7_16 FISHWIRE	7/16" FISHWIRE

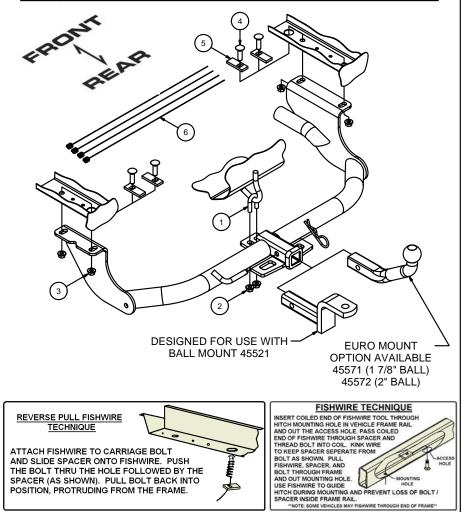

 Enlarge the existing hole on the driver side to allow 7/16" carriage bolts and SP2 spacers to pass through. See Hole Enlargement Diagram.



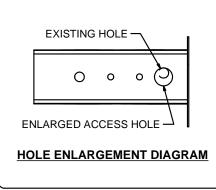

2. On the driver side, fishwire a 7/16" carriage bolt and SP2 spacer through the enlarged access hole and out the forward most mounting hole. Reverse fishwire a 7/16" carriage bolt and SP2 spacer in the enlarged access hole. On the passenger side, fishwire 7/16" carriage bolts and SP2 spacers through the existing access hole and out the mounting holes. See Fishwire Technique Diagrams.





INSTALLATION WALKTHROUGH:

3. Insert the 3/8" U-bolt through the tow hook. Raise hitch into position and secure to the frame rails using 7/16" flange nuts. Secure hitch to the 3/8" U-bolt using 3/8" flange nuts. <u>Note</u>: When raising the hitch into position be careful not to push the carriage bolts back into the frame.



4. Torque all 7/16" hardware to 70 ft-lbs. Torque all 3/8" hardware to 45 ft-lbs.



INSTALLATION COMPLETE





TOWING SAFETY INFORMATION


Gross Trailer Weight / GTW

The Gross Trailer Weight is the weight of the trailer & cargo. Measure this by putting the fully loaded trailer on a vehicle scale.



Tongue Weight / TW

The downward force that is exerted on the hitch ball by the coupler. The tongue weight will vary depending on where the load is positioned in relationship to the trailer axle(s). To measure the tongue weight, use either a commercial scale or a bathroom scale with the coupler at towing height. When using a bathroom scale with heavier tongue weights, use the method shown and multiply the scale reading by 3.

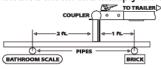

Weight Carrying / WC

The total weight of both the trailer and the cargo inside. Never exceed the weight capacity of your trailer hitch.

Weight Distribution / WD


Used to balance the weight of the cargo between the front and rear wheels throughout the trailer, allowing for better steering, braking, and level riding.



Sway Control

A device used to reduce the lateral movements of the trailer that are caused by the wind. This works in conjunction with a weight distribution hitch. Do not use this on a class 1 or 2 hitch, or with surge brakes.


How Much Can You Safely Tow?

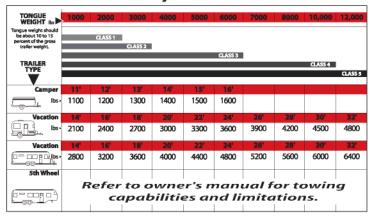

Ball Mount

The ball mount is placed inside the opening of the receiver hitch which is mounted to the vehicle. Make sure a hitch pin and clip is properly securing the ball mount to the receiver hitch before you begin towing.

A: Rise. B: Drop. C: Hole Size. D: Length.

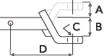

Trailer Ball

The connection from the hitch to the trailer. There are many factors that determine the correct hitch ball:

- Number one is the hitch ball's gross trailer weightrating.
- The mounting platform must be at least 3/8" thick.
- The hole diameter must not be more than 1/16" larger than the threaded shank.
- · Every time you tow, check the nut and lock washer to make sure they are fastened securely.
 A: Ball Dia. B: Shank Dia. C: Shank Length. D: Shank Rise.

Coupler

The component that is placed over the trailer ball to connect the vehicle to the trailer. Be sure that the coupler size matches the size of the hitch ball and that the coupler handle is securely fastened. To determine what size hitch ball you need for your application you will need to know the size of coupler that is on the trailer. Be sure your coupler is properly adjusted to the ball you are using.

NOTE: For added security the use of safety devices such as Coupler Safety Pins and Locks is strongly recommended.

Safety Chains

Safety chains are a requirement and should be crossed under the tongue of the trailer so that the tongue will not drop to the road if it becomes separated from the hitch. Always leave enough slack so you can turn. Never allow the safety chains to drag on the ground and never attach the chains to the bumper.

Trailer Classification: Safety Chain Breaking Force - Minimum

Class 1: 2,000 lbs. (8.9 kN)

Class 2: 3,500 lbs. (15.6 kN)


Class 3: 5,000 lbs. (22.2 kN)

The strength rating of each length of safety chain or its equivalent and its attachments shall be equal to or exceed in minimum breaking force the GVWR (Gross Vehicle Weight Rating) of the trailer.

Electrical

Trailer lights, Electric Brakes, Break-away systems - Every time you tow, be sure to check that all components are working properly.

Wiring identification by color:

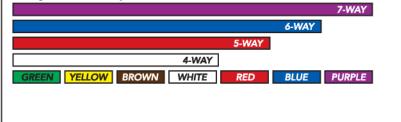




11394

MITSUBISHI MIRAGE

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 1.500 LBS. TRAILER WEIGHT & 200 LBS. TONGUE WEIGHT. ***DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*** WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS. ** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY** Parts List EXISTING ACCESS HOLE ITEM QTY PART NUMBER DESCRIPTION EXISTING HOLES 3_8 - 16 x 1.00 x 1.88 U-BOLT 1 1 (BOTH SIDES) 2 HFN3816 HEX FLANGE NUT 2 PASSENGER SIDE 3 4 7/16-14 HEX FLANGE NUT FRAME RAIL 4 4 7/16-14 x 1 1/2 CARRIAGE BOLT

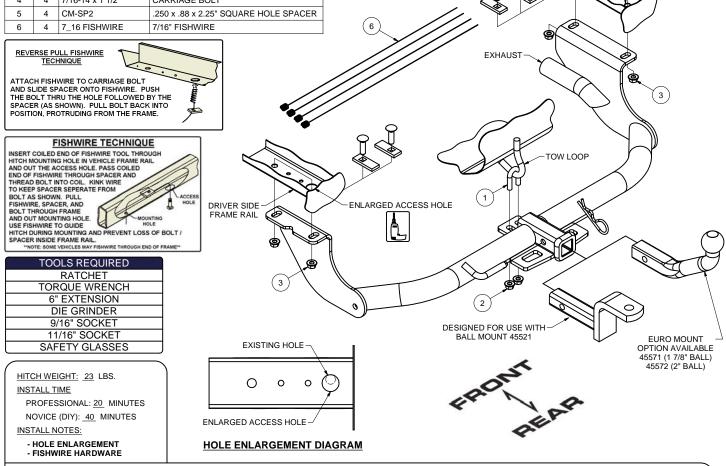

INSTALLATION STEPS

- 1. Enlarge the existing hole on the driver side to allow 7/16" carriage bolts and SP2 spacers to pass through. See Hole Enlargement Diagram.
- 2. On the driver side, fishwire a 7/16" carriage bolt and SP2 spacer through the enlarged access hole and out the forward most mounting hole. Reverse fishwire a 7/16" carriage bolt and SP2 spacer in the enlarged access hole. See Fishwire Technique Diagrams.
- 3. On the passenger side, fishwire 7/16" carriage bolts and SP2 spacers through the existing access hole and out the mounting holes.
- 4. Insert the 3/8" U-bolt through the tow hook, as shown.
- 5. Raise hitch into position and secure to the frame rails using 7/16" flange nuts. Secure hitch to the 3/8" U-bolt using 3/8" flange nuts. Note: When raising the hitch into position take care not to push the carriage bolts back into the frame.
- 6. Torque all 7/16" hardware to 70 ft-lbs. Torque all 3/8" hardware to 45 ft-lbs.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.