





# IMPORTANT

## **READ BEFORE INSTALLING**



## Important: Use extreme caution when using high settings

We strongly recommend only using settings 1-5 on daily driven street vehicle.

SETTING 6-9 SHOULD ONLY BE USED ON A RACE TRACK OR CLOSED-COURSE FACILITY. PLEASE USE SETTING 6-9 WITH EXTREME CAUTION, NOT INTENDED FOR LONG TERM USE!!!

NOTE: Most late model vehicles are equipped with a Torque Based Electronic Throttle Control (ETC). Settings 6-9 may trigger a CEL DTC P2138 - Throttle/Pedal Position Sensor/Switch 'D'/'E' Voltage Correlation code due to the X-Pedal creating a higher Accelerator Pedal Position (APP) Vs. (APP2) value when using settings 6-9. When a CEL DTC P2138 is triggered, the accelerator pedal may be completely disabled making the vehicle inoperable, causing an extremely dangerous situation

If a Check engine light is triggered, the vehicle will go into Limp Mode (Reduced Power Mode). You will have to put the vehicle into park or neutral and cycle the ignition completely off before trying to restart the vehicle. You will also have to reset the CEL DTC code from the vehicle with an OBD II scanner to get the vehicle out of Limp Mode (Reduced Power Mode).



Most vehicles manufactured today are equipped with a "Drive-by-wire" electronic accelerator pedal. Depending on the manufacture and the vehicle, the response time is pre-programmed into the ECM and can not be changed by the end user. The Injen X-Pedal modifies the signal between the O.E. electronic accelerator pedal and the electronic throttle body and increases or decreases the throttle response to user definable settings. By increasing the SportMode setting (SPORT), you can increase the engines response time making the low to mid RPM range come in sooner. This will make the vehicle feel faster with less throttle input. When increasing the Economy Mode (ECO) a delay is created in the throttle response time to achieve better fuel economy or less aggressive throttle response on vehicles pre-programmed with very aggressive throttle response.

#### X-Pedal Features:

- 9 Level Sport Mode (Sport) Each level increases throttle response by 4-6%. The driver can choose the power level that suites their driving style.
  - (LEVELS 7-9 RECOMMENDED FOR TRACK USE ONLY)
- Drag Race Launch Contorl Mode Dramatically increases throttle response by removing any delay from the
  electric throttle accelerator pedal to the ECM, therefore lowering your reaction times.

  (TRACK USE ONLY)
- 7 Level Economy Mode (Eco) Suitable for city driving, can effectively lower the fuel consumption.
- Anti-Skid Mode Suitable for snow or slippery conditions. Helps reduce tire spin by delaying the throttle response at initial acceleration.
- Anti-Theft Mode Completely disables the throttle signal to the ECM preventing vehicle theft or unauthorized vehicle use.
- Stock Mode (Nor) Returns the throttle response back to stock
- Simple Plug-n-Play Installation Install device in minutes with the optional model specif harness.


#### **Important notice:**


### $\wedge$

#### Please read entire instructions thoroughly for proper operation!!!




- Disconnect the negative terminal of the battery before installation to prevent any short circuits or damage to any electrical devices. Wait 10 minutes before you attempt to perform the installation so the CAN BUS system de-energizes.
- You must perform the initial setup after the first installation. You will need to sync the X-Pedal to the ECM or a check engine light may trigger.
- Make sure the engine is off and gear is in Park (P) or Neutral (N) position while running the initial setup.
- DO NOT attempt to make adjustments while driving. Any adjustments should be done while the vehicle is stationary and the vehicle in the Park (P) or Neutral (N) position.
- Professional knowledge of a vehicles electrical system is required. For any technical questions, please contact an Injen
  Technology customer service representative.
- Handle all wires carefully. Don't tug and pull on any cable as it can cause a short circuit and possibly damage the X-Pedal
  and the vehicles electrical system.
- Organize the wire after installation. Use zip ties (not included) to prevent the wires from getting yanked or pulling out of
  place and possibly creating a short circuit.
- If connecting the optional brake light signal wire or the reverse signal wire, make sure the wires are soldered and heat shrink wrapped to avoid any possible short circuits.
- Any defect or damage may arise from misuse, mishandling, abuse, accident, negligence and damage caused directly or
  indirectly by Customer, including but not limited to improper testing, installation, alteration or modification of any kind will
  not be covered under the warranty policy.
- DO NOT attempt to disassemble the product or modify any of the components as it will void your warranty.

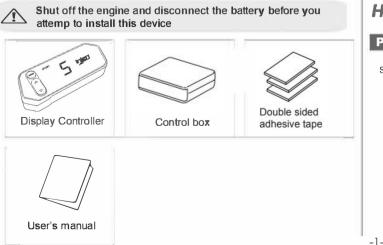

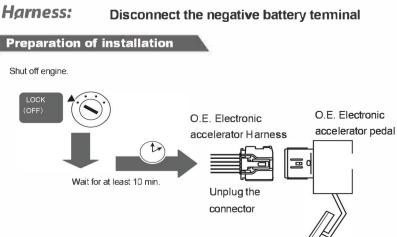


#### Simple Plug-n-Play Installation

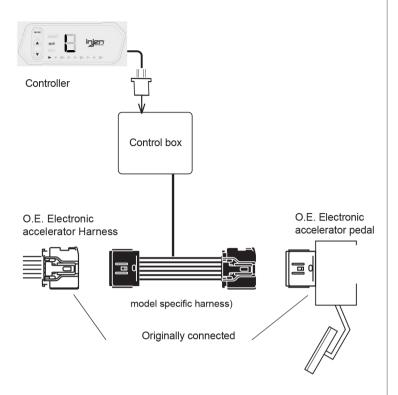


#### Port Diagram

#### (Rear view of control box)



#### **Initial Setup:**

#### X-Pedal Display

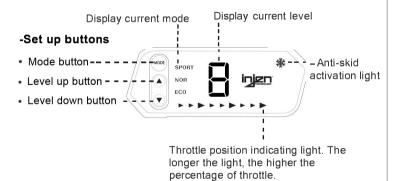

#### Display shut-down time:

- The monitor will remain on for 10 seconds to 5 minutes after engine is turned off. The unit will turn itself off once the ECM cuts power to the accelerator pedal.
- It is normal for the display to be on while the X-Pedal is shutting down.

#### Instruction Manual


#### **↑** Syncing

- You will have to sync the X-pedal to the ECM during the initial setup. Once
  you have synced the X-Pedal to the ECM, you will no longer have to sync
  again unless you intend on installing it on another vehicle.
- Do not use use the X-Pedal until you sync the X-Pedal to the ECM or a check engine light will be triggered and may cause a dangerous driving situation.

#### **Initial setup instruction**

Syncing the X-Pedal to the ECM.

1. Turn the ignition on to the ACC II position and then shift the gear to Park "P" or Neutral "N" position while the engine is off. Make sure the display is on the (Nor) Mode

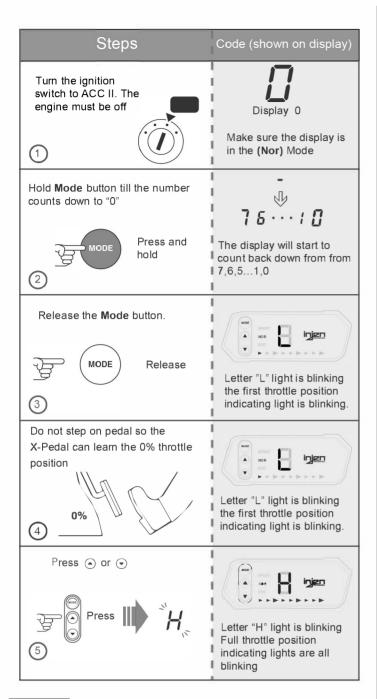


#### Reset

(1)


- Please reset the X-Pedal when installing in other vehicle.
- · Avoid check engine lights and drive ability issues


Turn the ignition to the ACC II position





- 1 Press and hold the Mode button. While it is counting down, hold "up" and "down" buttons at the same time. Wait for 2 seconds till the monitor shows "-". A reset was successful.
- 2 At this point, pressing the Mode button won't switch between mode setting and will display a blinking "0"

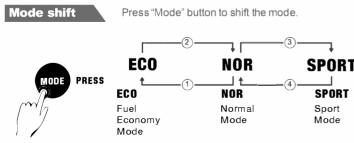

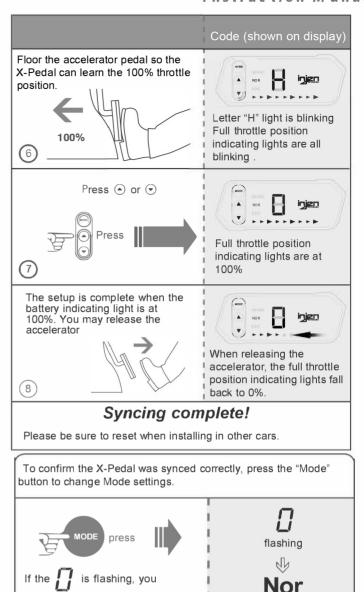



Please re-run the initial setup if the code is showing on the X-Pedal display.

#### Step shift

must go back to STEP "(1)"

- Pressing the arrow up in(SPORT)Mode will increase the throttle percentage higher. The higher the setting, the more aggressive the throttle body opens up.
- Pressing the arrow up in (ECO) Mode will increase the delay in the throttle percentage. The higher the setting, the less aggressive the throttle body opens up



Press or button, and it will increase or decrease the levels



Nor remains




## **Important notice:**

We strongly recommend only using settings 1-5 on daily driven street vehicle.

NOTE: Most late model vehicles are equipped with a Torque Based Electronic Throttle Control (ETC). Settings 6-9 can trigger a CEL DTC P2138 - Throttle/Pedal Position Sensor/ Switch 'D'/'E' Voltage Correlation code due to the X-Pedal creating a higher Accelerator Pedal Position (APP) Vs. (APP2) value when using settings 6-9. When a CEL DTC P2138 is triggered, the accelerator pedal will be completely disabled making the vehicle inoperable, causing an extremely dangerous situation

SETTING 6-9 SHOULD ONLY BE USED ON A RACE TRACK OR CLOSED-COURSE FACILITY. PLEASE USE SETTING 6-9 WITH EXTREME CAUTION, NOT INTENDED FOR LONG TERM USE!!!

#### Acceleration and fuel consumption of each step





- The higher the (SPORT) setting the more sensitive and aggressive the throttle inputs get. Be cautious when making adjustments, especially when going in reverse without the reverse input option connected
- Be cautious when setting the (ECO) too high, as this will cause a delay in the throttle response and cause a dangerous situation when trying to pass or merge onto a street or highway

#### Activating Anti-skid function setup

• A. Activating Start Anti-skid mode



1.Under any mode or level, press UP and Down at the same time. 2. When the snow flake at the upper right corner lights up, and the number light turns off, Anti-skid mode is active  B. Deactivate Anti-skid mode




Pressing any button will deactivate the Anti-skid mode.

#### **Anti-theft function setup**

· A. Activate anti-theft function



1.While in Eco mode, press and hold. Mode button and wait for 2 seconds

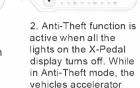

pedal is deactivated

any throttle input.

and will not respond to

B. Deactivate anti-



While the engine is running, press and hold Mode button and wait for 2 seconds until all the lights turn back on the X-Pedal display. The anti-theft function is disabled.

#### **Launch Control function setup**

\* A. Activate launch control mode

 B. Deactivate launch control mode



1. While in **(SPORT)** mode, press and hold Mode button and wait for 2 seconds.

2. When the (SPORT) light and "number" light blink at the same time, the Launch Control Mode is activated



Pressing any button will deactivate the Launch Control Mode



#### Caution:

Warning: BE EXTREMLY CAUTIOUS WHILE OPERATING THE VEHICLE WHILE LAUNCH CONTROL MODE IS ACTIVATED. LAUNCH CONTROL MODE IS EXTREMELY SENSITIVE AND WILL CREATE A FULL THROTTLE POSITION WITHIN A FEW DEGREES OF THROTTLE INPUT. LAUNCH CONTROL MODE SHOULD ONLY BE USED ON A RACE TRACK OR CLOSED-COURSE FACILITY. DO NOT ENGAGE REVERSE WHILE LAUNCH CONTROL FUNCTION IS ACTIVATED

#### Troubleshooting

Please verify if any event occurs below when the having trouble with the X-Pedal

SYMPTOM	CAUSE	TROUBLESHOOTING
X-Pedal unit	Plug-N-Play connector has bad connection to the OE accelerator pedal	Check all connectors and fittings
Check engine light is on	Battery not disconnected prior to installation	Reset check engine light with OBD II scanner
	X-Pedal not synced correctly to ECM	Follow the syncing procedure and make sure it is performed correctly
The display shows "0" and is blinking and won't switch out of <b>Nor</b> Mode	Syncing of the X-Pedal was performed incorrectly	Follow the syncing procedure and make sure it is performed correctly